


Whirlpool 4PWTW5725SG0 03 - AGITATOR, BASKET AND TUB PARTS

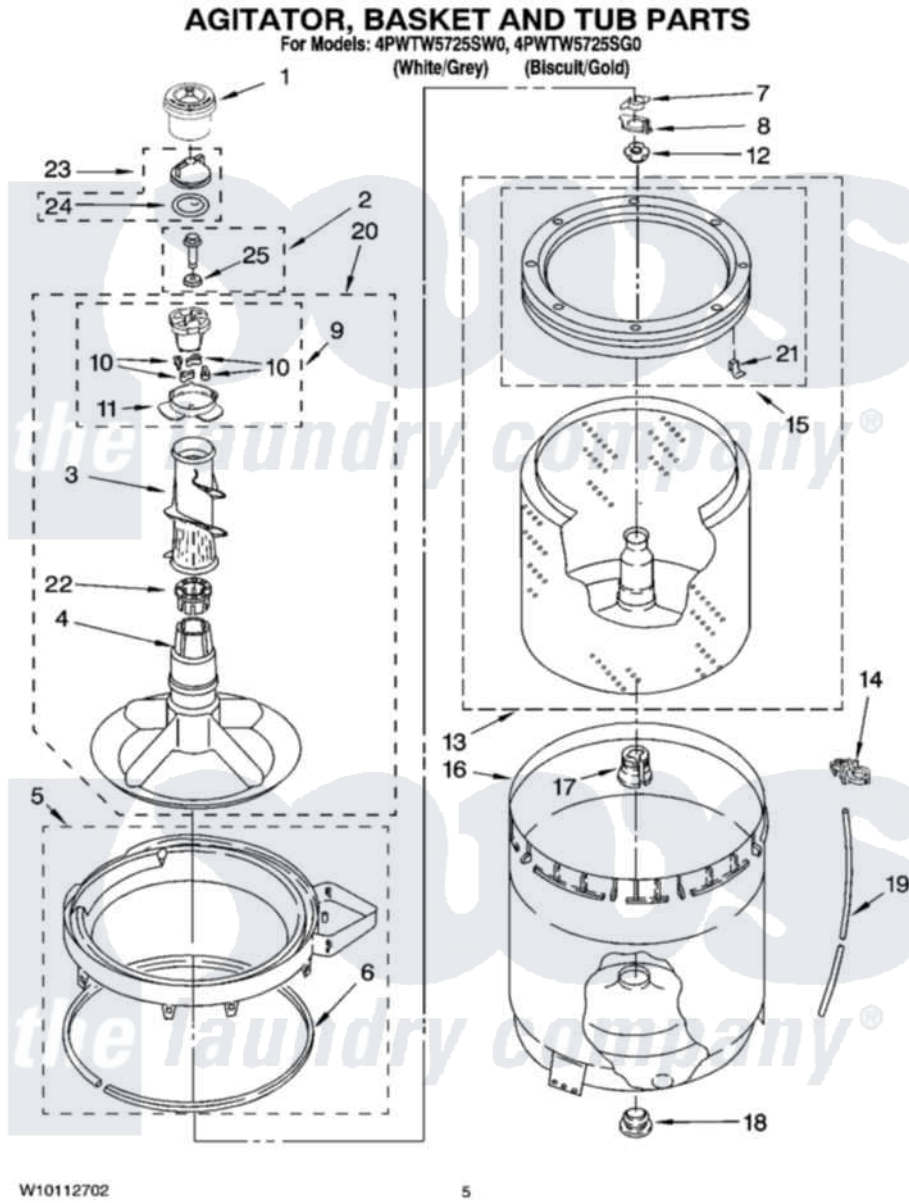

Whirlpool Residential Whirlpool 4PWTW5725SG0 Washer Parts Parts Diagram 03 - AGITATOR, BASKET AND TUB PARTS

Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8575076	8575076A		Dispenser
2	358237			Screw And Washer
3	3349019			Auger, Agitator
4	3350830			Agitator
5	3360611			Tub Ring And Gasket Assembly
6	3359586			Gasket, Tub Ring
7	3354845			Clip, Agitator
8	8543666			Washer, Agitator
9	3363663	285811		Cam-Agitator
10	3366877	80040		Dog-Agitator
11	3363661			Bearing, Driven Cam
12	21366			Nut, Spanner
13	3956206	3956207		Basket And Balance Ring
14	2219077			Clip, Pressure Switch Hose
15	3956205			Balance Ring

16	63125		Tub
17	389140		Tub Block, Basket Drive
18	383727		Gasket, Centerpodt
19	3363657	353244	Hose, Pressure Switch
20	3350829	285574	Large Ring
21	8519815		Clip, Balance Ring
22	3350389	285587	Washer
23	3354733	W10074580	Cap, Barrier
24	3348855	W10072840	Fabric Softener
25	3949550		Washer

