


# Whirlpool 4PWTW5725SW0 03 - AGITATOR, BASKET AND TUB PARTS

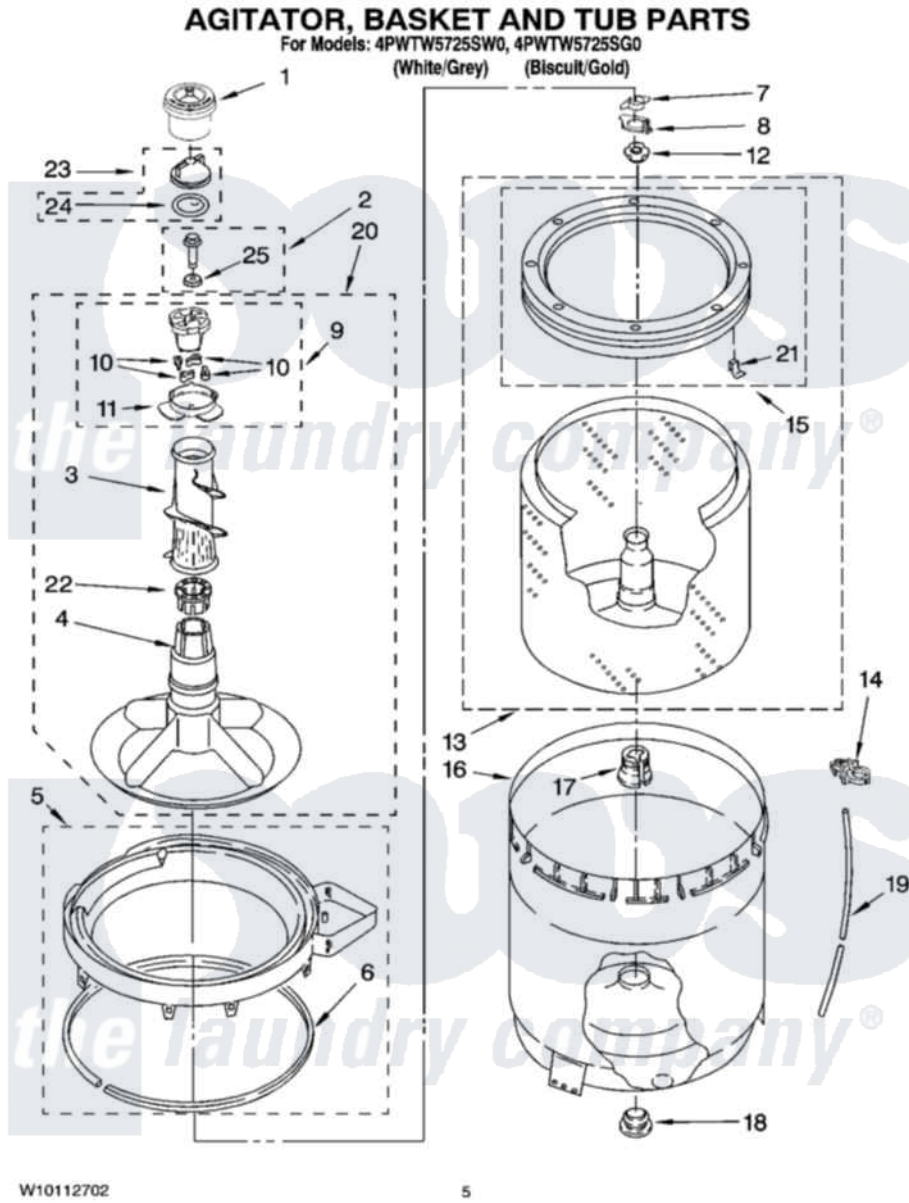

Whirlpool [Residential Whirlpool 4PWTW5725SW0 Washer Parts](#) Parts Diagram 03 - AGITATOR, BASKET AND TUB PARTS

Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8575076	<a href="#">8575076A</a>		Dispenser
2	<a href="#">358237</a>			Screw And Washer
3	<a href="#">3349019</a>			Auger, Agitator
4	<a href="#">3350830</a>			Agitator
5	<a href="#">3360611</a>			Tub Ring And Gasket Assembly
6	<a href="#">3359586</a>			Gasket, Tub Ring
7	<a href="#">3354845</a>			Clip, Agitator
8	<a href="#">8543666</a>			Washer, Agitator
9	3363663	<a href="#">285811</a>		Cam-Agitator
10	3366877	<a href="#">80040</a>		Dog-Agitator
11	<a href="#">3363661</a>			Bearing, Driven Cam
12	<a href="#">21366</a>			Nut, Spanner
13	3956206	<a href="#">3956207</a>		Basket And Balance Ring
14	<a href="#">2219077</a>			Clip, Pressure Switch Hose
15	<a href="#">3956205</a>			Balance Ring

16	<a href="#">63125</a>		Tub
17	<a href="#">389140</a>		Tub Block, Basket Drive
18	<a href="#">383727</a>		Gasket, Centerpodt
19	3363657	<a href="#">353244</a>	Hose, Pressure Switch
20	3350829	<a href="#">285574</a>	Large Ring
21	<a href="#">8519815</a>		Clip, Balance Ring
22	3350389	<a href="#">285587</a>	Washer
23	3354733	<a href="#">W10074580</a>	Cap, Barrier
24	3348855	<a href="#">W10072840</a>	Fabric Softener
25	<a href="#">3949550</a>		Washer

