


Whirlpool 7MGGW9868KQ1 02 - CABINET PARTS

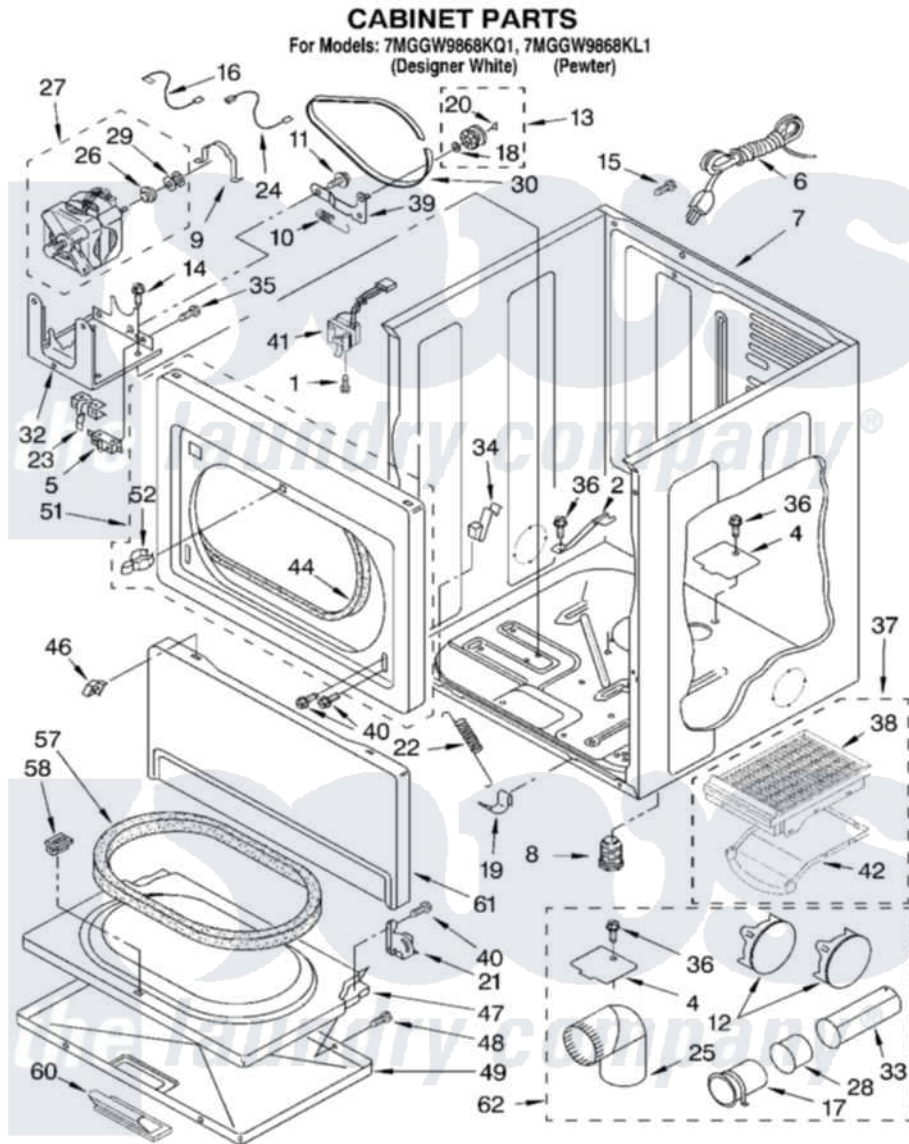

8180046

3

Whirlpool [Residential Whirlpool 7MGGW9868KQ1 Dryer Parts](#) Parts Diagram 02 - CABINET PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	697773	3395530		Screw
2	8529757			Bracket, Burner
4	3394331			Plate Cover
5	3394881	279782		Switch-Lid
6	344020	3401402		Cord, Power
7	8310656			Cabinet
"	8528155	3979259		Cabinet
8	3392100	49621		Feet-Leveling
"	279810			Foot-Optional
9	660658			Clamp, Motor Mounting 343481 685441
10	3387374			Spring, Idler
11	3389420			Retainer-Idler 1/4-20 X 1/16
12	697750	W10470674		Dryer Exhaust Kit
"	3979261			Plug, Multivent
13	3388672	279640		Pulley-Idr
14	3390663	681414		Screw, 10AB X 1/2

15	697776	4331106	Screw, No.10-32 X 7/16
16	3398948		Wire, Jumper
17	3395532		Exhaust Pipe And Bracket
18	233520		Washer, Thrust
19	297092		Clip
20	690997		Washer, Thrust
21	3387560		Hinge, Door
"	3387559		Hinge, Door
22	3387565		Spring, Door
23	8066120		Lever, Door Switch
24	3394081		Wire, Broken Belt Switch
25	49026		4" - 90° Elbow
26	3393657		Restrainer, Belt
27	8538263	279787	Motor-Drive
28	3395534		Exhaust Pipe
29	3389729		Pulley, Motor
30	3387610	661570	Belt
32	3387118		Bracket, Motor
33	3395535	8563749	Exhaust Pipe
34	3388600		Clip, Lint Duct
35	98129		Screw, 6-20 X 1 1/16
36	693995		Screw, Hex Head
37	3406911	8212450A	Dryer Rack
38	3406910	8212450A	Dryer Rack
39	3388674	W10118756	Idler Bracket
40	3357011	308685	Side Trim)
41	3406107		Door Switch Assembly
42	3406908	8212450A	Dryer Rack
44	3387242		Seal, Front Panel
46	3388229		Retainer, Toe Panel
47	697655	280079	Door
48	694091		Trim, Side Right Hand
49	8521938		Door, Front
"	8521936		Door, Front
51	697227	279659	Panel
"	3979198	279972	Panel
52	696144	279570	Latch
57	3390736	3390732	Seal-Door
58	690081	279570	Latch
60	8521931		Handle, Door
"	8521932		Handle, Door
61	697215	3406797	Toe Panel
"	3979197	3979260	Toe Panel
62	279818	W10470674	Dryer Exhaust Kit
"	279969	W10470674	Dryer Exhaust Kit