


Whirlpool 7MLBR8444MQ2 02 - CONTROLS AND REAR PANEL PARTS

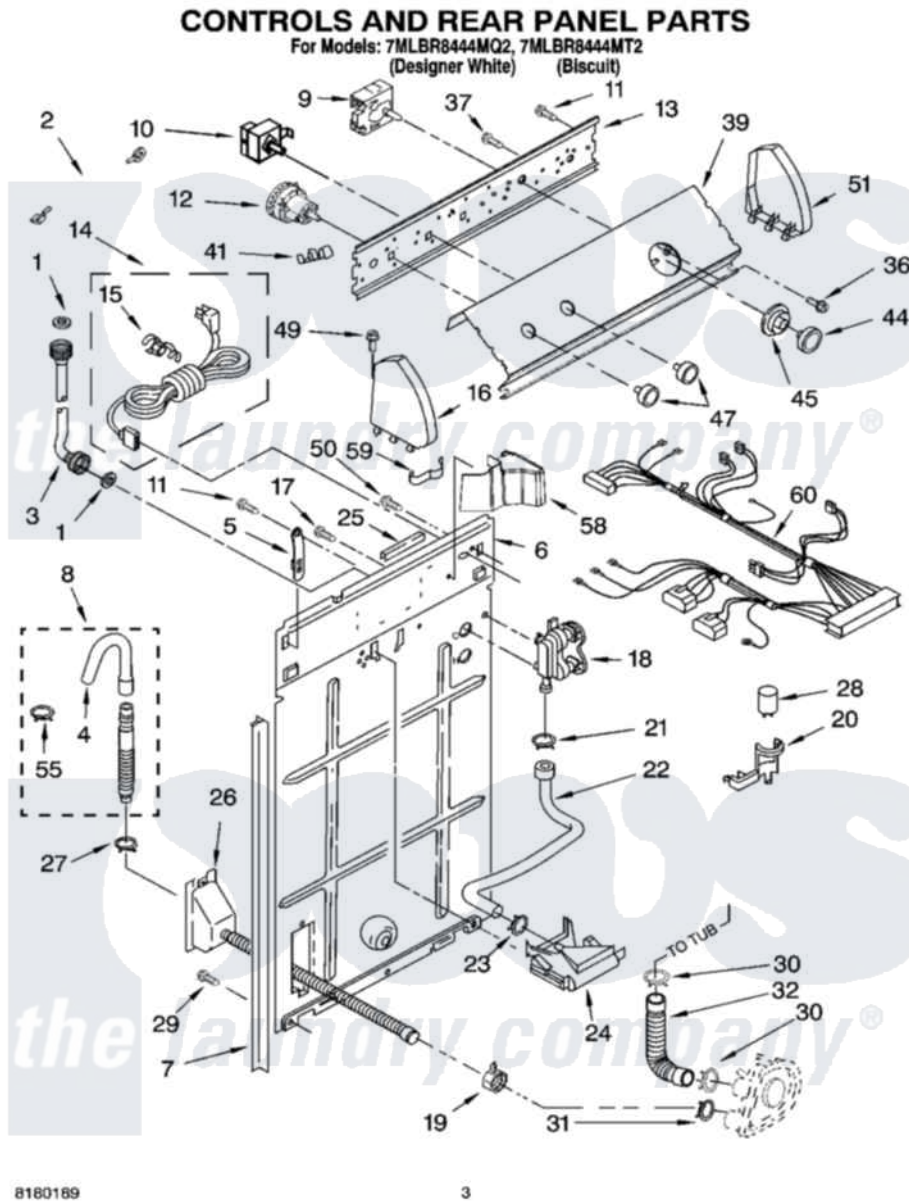

Whirlpool Residential Whirlpool 7MLBR8444MQ2 Washer Parts Parts Diagram 02 - CONTROLS AND REAR PANEL PARTS

Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	16123			Washer Inlet-Hose Miscellaneous Parts Must be Ordered Separately.
2	3398893	3395559		Wire
3	3949374	89503		Hose-Inlet
"	3949375	89503		Hose-Inlet
4	3357027			Nozzle, Hose Drain
5	8318255	8568314		Strap, Console
6	8318407			Panel, Rear
7	62747			Pad, Rear Panel
8	3951609	285664		Hose
"	661577	285666		Hose
"	3357090	285702		Hose
9	3951603			Timer, Control
10	661614			Switch, Water Temperature
11	90767			Screw, 8A X 3/8 HeX Washer Head Tapping

12	3366847	W10337780	Switch-WL
13	3948814		Bracket, Control
14	8532158	W10130795	Cord-Power
15	3949468	285777	Relief-Str
16	8271369	279962	Endcap
"	8314852		Cap, End
17	9740848		Screw, Mixing Valve Mounting
18	3952164	285805	Valve-Inlet
19	3976395		Restraint, Hose
20	8318201	8318046	Clip, Capacitor
21	370451	596669	Clamp, Manifold
22	62662	3357328	Hose, Vacuum Break
23	371503	596669	Clamp, Manifold
24	3347034		Break, Vacuum
25	303294	3367669	Protector, Edge
26	8317940	W10358149	Drain Hose Assembly
27	3366912	356138	Clamp, Hose
28	661606	8572717	Capacitor, Motor Start
29	62863	3390631	Screw, 10-16 X 3/8
30	3363366	616099	Clamp
31	8317496	285655	Clamp, Hose
32	3951449	285871	Hose
36	3400818		Screw, Timer Mounting
37	3179795		Screw, Ground
39	8539613		Panel, Console
"	8539614		Panel, Console
41	357572	W10113937	Clip, Grounding
44	8271345	3957824	Knob, Timer
"	8271347	3957822	Knob, Timer
45	8271351	3957849	Dial, Timer
"	8271370	3957850	Dial, Timer
47	8271339	3957799	Knob, Control
"	8271348	3957797	Knob, Push-To-Start
49	388326		Screw, 8-18 X 1.25
50	3351614		Screw, Gearcase Cover Mounting
51	8271363	279962	Endcap
"	8314851		Cap, End
55	3366913	3357331	Clamp, Drain
58	8314879		Shield, Inlet Valve
59	3347812	8528351	Clip
60	3956739		Harness, Wiring

the laundry company[®]