


Whirlpool 7MLGC9545JQ4 01 - TOP AND CONSOLE PARTS

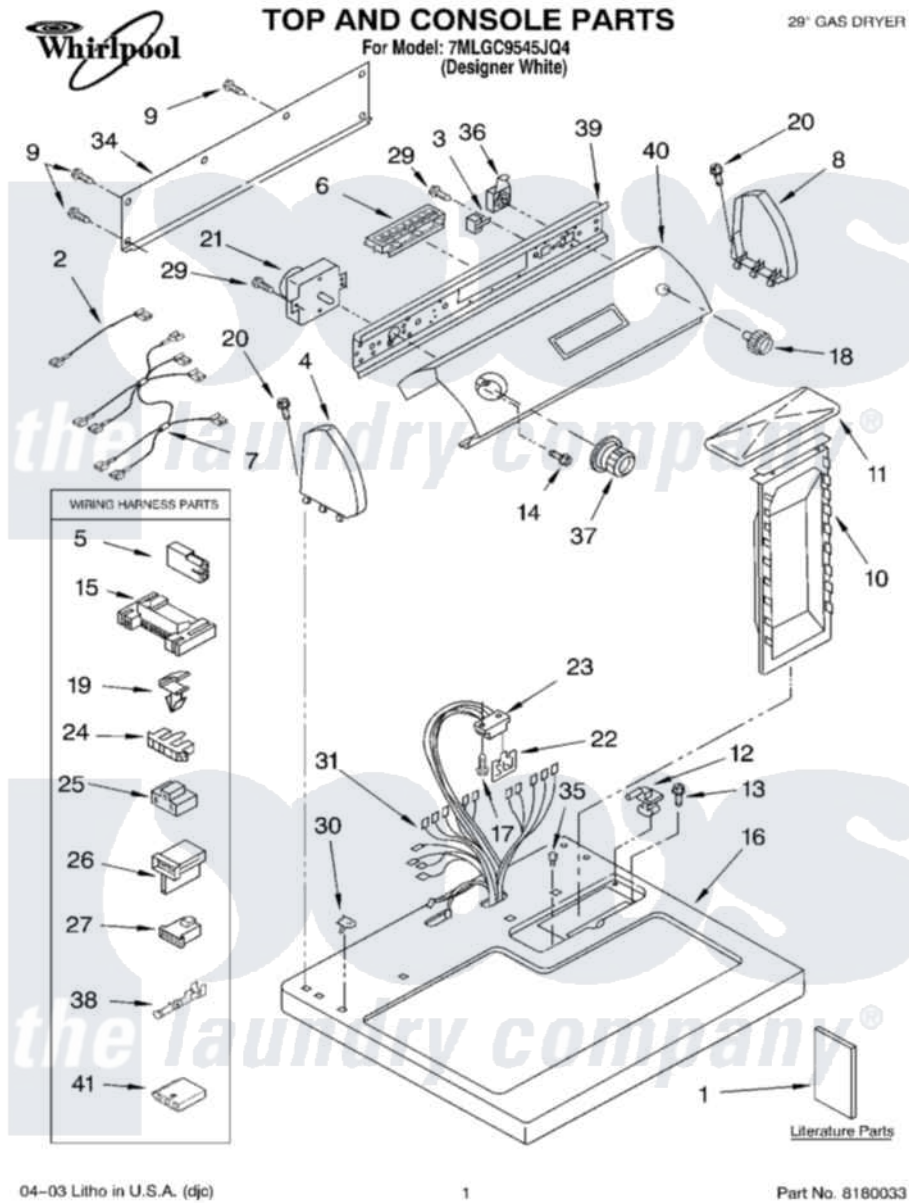

04-03 Litho in U.S.A. (djc)

1

Part No. 8180033

Whirlpool Residential Whirlpool 7MLGC9545JQ4 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	LIT3978910		Not Available	Literature Parts (Installation Instructions (Spanish))
"	LIT8543094		Not Available	Use And Care Guide
"	LIT8533205		Not Available	Wiring Diagram
"	N/A		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	LIT677818	677818L		Diy
2	3393811			Wire, Jumper
"	3393812			Wire, Jumper
3	694419			Mini-Buzzer
4	8271365	279962		Endcap
5	717252			Receptacle, Terminal
6	8318269			Switch, Clean Touch
7	3396032			Wire, Jumper
8	8271359	279962		Endcap
9	693995			Screw, Hex Head

10	349639		HAnDle And Lint Screen Assembly
11	8283378		Cover, Lint Screen
12	3978605	W10044470	Hinge, RH
"	3978606		Hinge, Lint Lid
13	688983	487240	Screw, For Mtg. Service Capacitor
14	3400859		Screw, Grounding
15	3395683		Receptacle, Multi-Terminal
16	8271390	8521918	Top
17	343641	681414	Screw, 10AB X 1/2
18	8271341	3957804	Knob, Push-To-Start
19	3394427		Clip-Harness
20	388326		Screw, 8-18 X 1.25
21	8299762		Timer Assembly
22	3390537	8558178	Control, Electronic
23	3391885		Connector, Edge
24	3397269		Connector, Timer
25	3401144		Connector
26	3403499		Connector, 2-Postion
27	3403498		Connector, 3-Position
29	3390646	W10139210	Screw, 8-18 X 5/16
30	357213		Nut, Push-In
31	8299881		Harness, Wiring
34	8274261		Do-It-Yourself Repair Manuals
35	297535	17258	Bumper
36	3398094		Switch, Push To Start
37	8312687	3957754	Timer Knob Assembly
38	94614		Terminal
39	8271426		Bracket, Control
40	3977844		Panel, Control
41	3936144		Do-It-Yourself Repair Manuals

