


Whirlpool 7MLGQ8000JQ4 01 - TOP AND CONSOLE PARTS

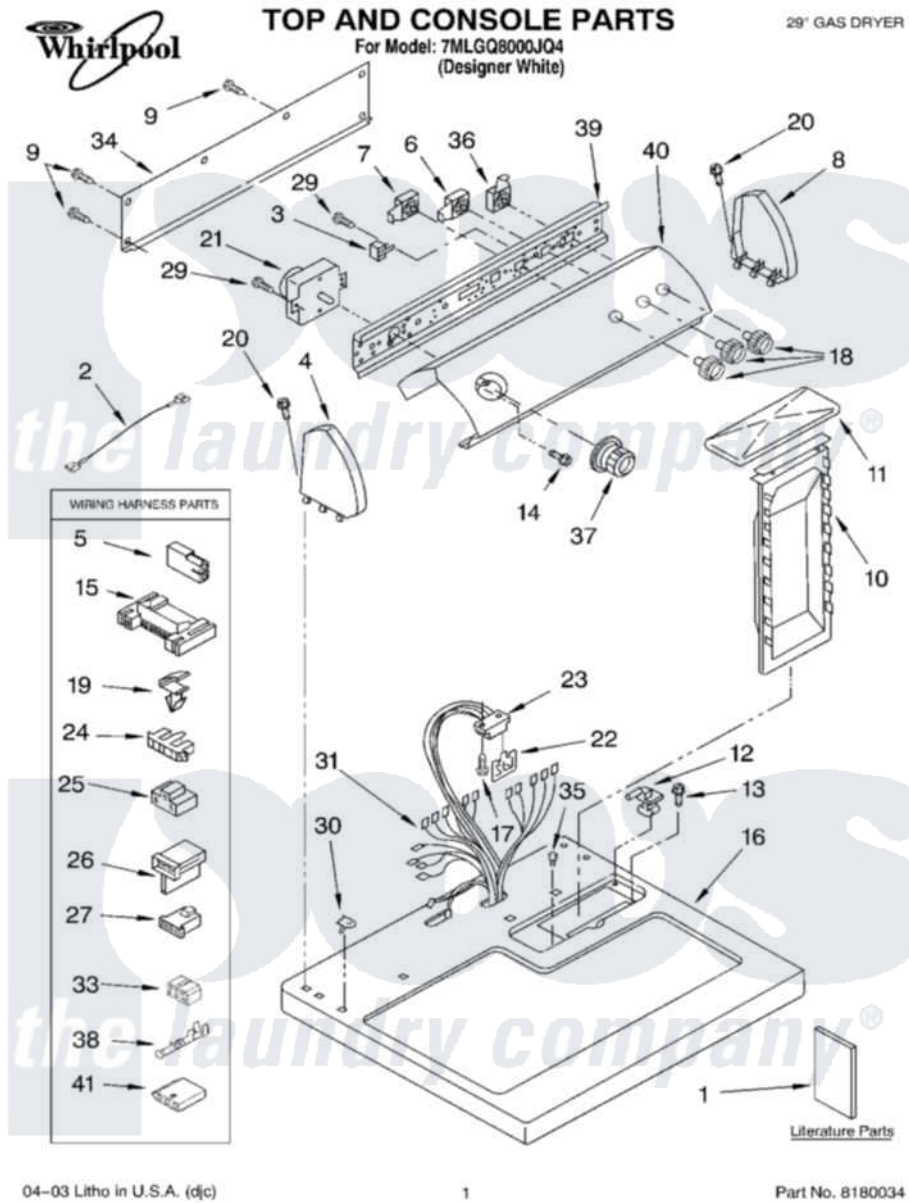

04-03 Litho in U.S.A. (djc)

1

Part No. 8180034

Whirlpool Residential Whirlpool 7MLGQ8000JQ4 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

| Item | Original Part Number | Replaced By | Status | Part Description |
|------|-------------------------|-------------------------|---------------|--|
| 1 | LIT3978910 | | Not Available | Literature Parts (Installation Instructions (Spanish)) |
| " | LIT8543095 | | Not Available | Use & Care Guide |
| " | LIT8533206 | | Not Available | Literature Parts (Wiring Diagram) |
| " | N/A | | Not Available | Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS |
| " | LIT677818 | 677818L | | Diy |
| 2 | 3401684 | | | Jumper, Wire |
| 3 | 694419 | | | Mini-Buzzer |
| 4 | 8271365 | 279962 | | Endcap |
| 5 | 717252 | | | Receptacle, Terminal |
| 6 | 3405154 | | | Switch Rotary |
| 7 | 8316736 | | | Switch, Temperature |
| 8 | 8271359 | 279962 | | Endcap |
| 9 | 693995 | | | Screw, Hex Head |
| 10 | 340830 | | | HANdle And Lint Screen |

| | | | |
|----|-------------------------|---------------------------|-----------------------------------|
| 10 | 349039 | | Assembly |
| 11 | 8283378 | | Cover, Lint Screen |
| 12 | 3978605 | W10044470 | Hinge, RH |
| " | 3978606 | | Hinge, Lint Lid |
| 13 | 688983 | 487240 | Screw, For Mtg. Service Capacitor |
| 14 | 3400859 | | Screw, Grounding |
| 15 | 3395683 | | Receptacle, Multi-Terminal |
| 16 | 8271390 | 8521918 | Top |
| 17 | 343641 | 681414 | Screw, 10AB X 1/2 |
| 18 | 8271339 | 3957799 | Knob, Control |
| 19 | 3394427 | | Clip-Harness |
| 20 | 388326 | | Screw, 8-18 X 1.25 |
| 21 | 3406725 | | Timer Assembly |
| 22 | 3390537 | 8558178 | Control, Electronic |
| 23 | 3391885 | | Connector, Edge |
| 24 | 3397269 | | Connector, Timer |
| 25 | 3401144 | | Connector |
| 26 | 3403499 | | Connector, 2-Postion |
| 27 | 3403498 | | Connector, 3-Position |
| 29 | 3390646 | W10139210 | Screw, 8-18 X 5/16 |
| 30 | 357213 | | Nut, Push-In |
| 31 | 8299890 | | Harness, Wiring |
| 33 | 3347243 | | Block, Disconnect |
| 34 | 8274261 | | Do-It-Yourself Repair Manuals |
| 35 | 297535 | 17258 | Bumper |
| 36 | 3398095 | | Switch, Push-To-Start |
| 37 | 8312687 | 3957754 | Timer Knob Assembly |
| 38 | 94614 | | Terminal |
| 39 | 8271418 | | Bracket, Control |
| 40 | 3977826 | | Panel, Control |
| 41 | 3936144 | | Do-It-Yourself Repair Manuals |

