


Whirlpool 7MLGQ8857JT6 01 - TOP AND CONSOLE PARTS

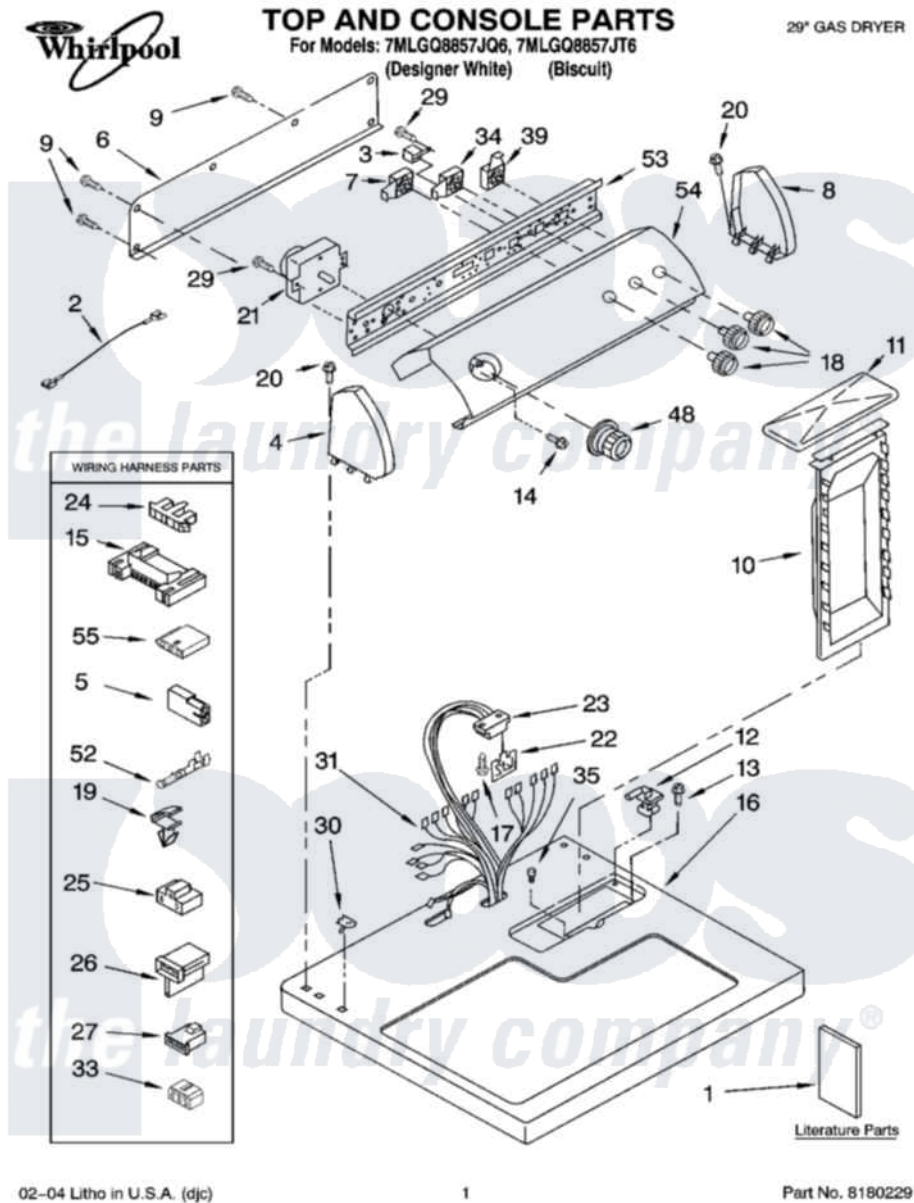

02-04 Litho in U.S.A. (djc)

1

Part No. 8180229

Whirlpool Residential Whirlpool 7MLGQ8857JT6 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	LIT3978910		Not Available	Literature Parts (Installation Instructions (Spanish))
"	LIT8543092		Not Available	Use & Care Guide
"	LIT8533206		Not Available	Literature Parts (Wiring Diagram)
"	N/A		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	LIT677818	677818L		Diy
2	3401684			Jumper, Wire
3	694419			Mini-Buzzer
4	8271365	279962		Endcap
"	8271368	279965		Endcap
5	717252			Receptacle, Terminal
6	8274261			Do-It-Yourself Repair Manuals
7	3405155			Switch, Temperature
8	8271359	279962		Endcap
"	8271362	279965		Endcap

9	693995		Screw, Hex Head
10	349639		HANdle And Lint Screen Assembly
11	8283378		Cover, Lint Screen
"	8283380		Cover, Lint Screen
12	3978605	W10044470	Hinge, RH
"	3978606		Hinge, Lint Lid
13	688983	487240	Screw, For Mtg. Service Capacitor
14	3400859		Screw, Grounding
15	3395683		Receptacle, Multi-Terminal
16	8271390	8521918	Top
"	8271392	8521920	Top
17	343641	681414	Screw, 10AB X 1/2
18	8271339	3957799	Knob, Control
"	8271348	3957797	Knob, Push-To-Start
19	3394427		Clip-Harness
20	388326		Screw, 8-18 X 1.25
21	3406725		Timer Assembly
22	3390537	8558178	Control, Electronic
23	3391885		Connector, Edge
24	3397269		Connector, Timer
25	3401144		Connector
26	3403499		Connector, 2-Postion
27	3403498		Connector, 3-Position
29	3390646	W10139210	Screw, 8-18 X 5/16
30	357213		Nut, Push-In
31	8299891		Harness, Wiring
33	3347243		Block, Disconnect
34	3405154		Switch Rotary
35	297535	17258	Bumper
39	3398095		Switch, Push-To-Start
48	8312687	3957754	Timer Knob Assembly
"	8271404	3957755	Timer Knob Assembly
52	94614		Terminal
53	8271418		Bracket, Control
54	8528134		Panel, Control
"	8528135		Panel, Control
55	3936144		Do-It-Yourself Repair Manuals