


Whirlpool 7MLGR3624JQ3 01 - TOP AND CONSOLE PARTS



TOP AND CONSOLE PARTS

For Models: 7MLGR3624JQ3, 7MLGR3624JT3
(Designer White) (Biscuit)

29" GAS DRYER

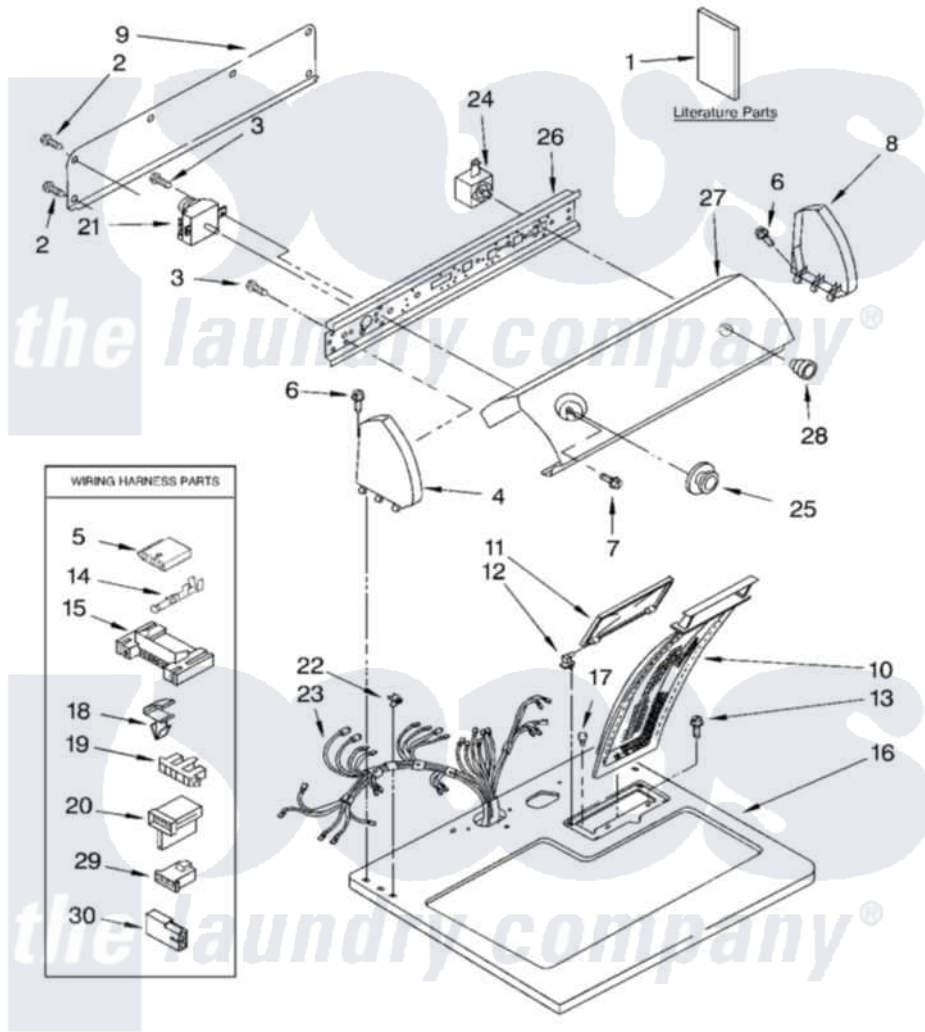

08-03 Litho in U.S.A. (djc)

1

Part No. 8180036 Rev. A

Whirlpool Residential Whirlpool 7MLGR3624JQ3 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	LIT8543092		Not Available	Use & Care Guide
"	LIT3978910		Not Available	Literature Parts (Installation Instructions (Spanish))
"	LIT8533202		Not Available	Literature Parts (Wiring Diagram)
"	N/A		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	LIT677818	677818L		Diy
2	693995			Screw, Hex Head
3	3390646	W10139210		Screw, 8-18 X 5/16
4	8271365	279962		Endcap
"	8271368	279965		Endcap
5	3936144			Do-It-Yourself Repair Manuals
6	388326			Screw, 8-18 X 1.25
7	3400859			Screw, Grounding
8	8271359	279962		Endcap
"	8271362	279965		Endcap

9	8274261		Do-It-Yourself Repair Manuals
10	339392		Screen, Lint
11	8283378		Cover, Lint Screen
"	8283380		Cover, Lint Screen
12	3978605	W10044470	Hinge, RH
"	3978606		Hinge, Lint Lid
13	688983	487240	Screw, For Mtg. Service Capacitor
14	94614		Terminal
15	3395683		Receptacle, Multi-Terminal
16	8271390	8521918	Top
"	8271392	8521920	Top
17	297535	17258	Bumper
18	3394427		Clip-Harness
19	3397269		Connector, Timer
20	3403499		Connector, 2-Position
21	3976575		Timer Assembly
22	357213		Nut, Push-In
23	8299875		Harness, Wiring
24	3977456		Switch, Push-To-Start
25	8312687	3957754	Timer Knob Assembly
"	8271404	3957755	Timer Knob Assembly
26	8271418		Bracket, Control
27	8543126		Panel, Control
"	8528133		Panel, Control
28	8271341	3957804	Knob, Push-To-Start
"	8271349	Not Available	Knob, Push To Start (Biscuit)
29	3403498		Connector, 3-Position
30	717252		Receptacle, Terminal

