


Whirlpool 7MLGR5620MQ0 01 - TOP AND CONSOLE PARTS

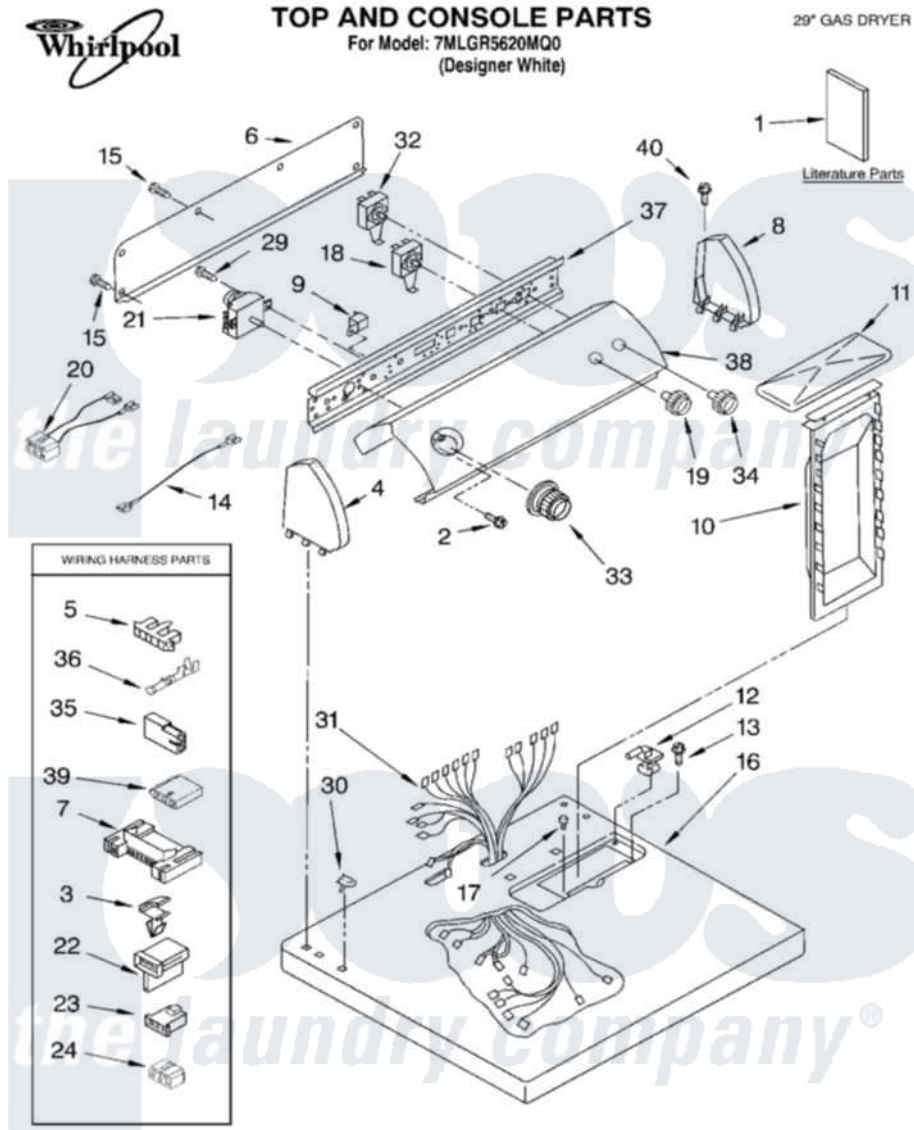

08-03 Litho in U.S.A. (djc)

1

Part No. 8180110

Whirlpool [Residential Whirlpool 7MLGR5620MQ0 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	LIT3978910		Not Available	Literature Parts (Installation Instructions (Spanish))
"	LIT8543109		Not Available	Literature Parts (Use & Care Guide)
"	LIT8528187		Not Available	Literature Parts (Wiring Diagram)
"	N/A		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	LIT677818	677818L		Diy
2	3400859			Screw, Grounding
3	3394427			Clip-Harness
4	8271365	279962		Endcap
5	3397269			Connector, Timer
6	8274261			Do-It-Yourself Repair Manuals
7	3395683			Receptacle, Multi-Terminal
8	8271359	279962		Endcap
9	694419			Mini-Buzzer

10	349639		HAndle And Lint Screen Assembly
11	8283378		Cover, Lint Screen
12	3978605	W10044470	Hinge, RH
"	3978606		Hinge, Lint Lid
13	688983	487240	Screw, For Mtg. Service Capacitor
14	3401674		Wire, Jumper
15	693995		Screw, Hex Head
16	8271390	8521918	Top
17	297535	17258	Bumper
18	3405152		Switch, Wrinkle Shield
19	8271339	3957799	Knob, Control
20	8283292	8283276	Wire, Jumper
21	3976584		Timer Assembly
22	3403499		Connector, 2-Postion
23	3403498		Connector, 3-Position
24	3347243		Block, Disconnect
29	3390646	W10139210	Screw, 8-18 X 5/16
30	357213		Nut, Push-In
31	8299877		Harness, Wiring
32	3977456		Switch, Push-To-Start
33	8312687	3957754	Timer Knob Assembly
34	8271341	3957804	Knob, Push-To-Start
35	717252		Receptacle, Terminal
36	94614		Terminal
37	8271418		Bracket, Control
38	8543129		Panel, Control
39	3936144		Do-It-Yourself Repair Manuals
40	388326		Screw, 8-18 X 1.25
"	N/A	Not Available	ACCESSORY PARTS
"	279948	4392065	Kit, Dryer Repair
"	346764		Kit, Hold Down
"	3404351		Accessory Parts
"	72017		Paint, Touch-Up
"	350930		Paint, Pressurized Spray B
"	350938		Paint, Pressurized Spray B
"	799344		Paint, Touch-Up)

