


# Whirlpool 7MLGR5620PQ0 01 - TOP AND CONSOLE PARTS

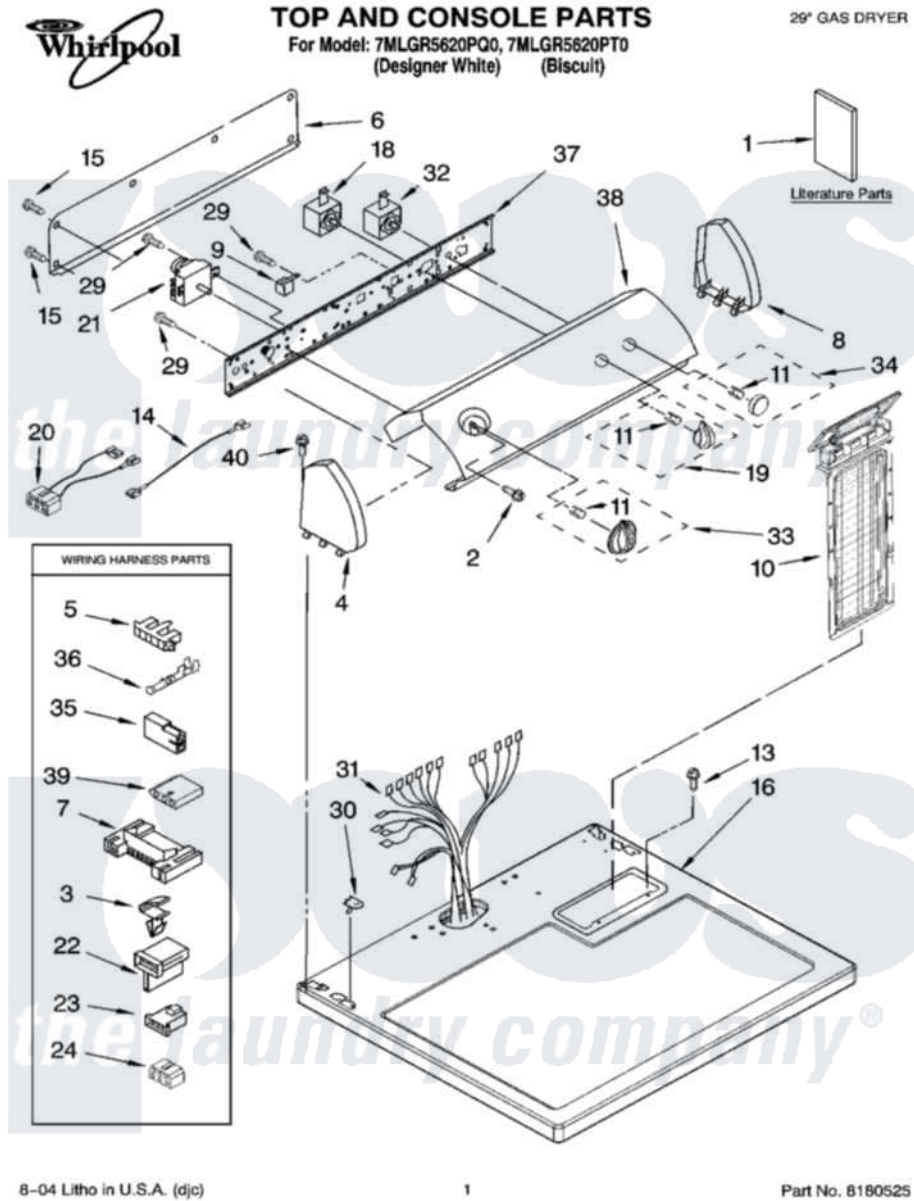

8-04 Litho in U.S.A. (djc)

1

Part No. 8180525

Whirlpool Residential Whirlpool 7MLGR5620PQ0 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8564241		Not Available	Instructions, Installation
"	8565898		Not Available	Sheet, Cycle Feature
"	8565897		Not Available	Use And Care Guide
"	<a href="#">8528187</a>			Wiring Diagram
"	N/A		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	<a href="#">3400859</a>			Screw, Grounding
3	<a href="#">3394427</a>			Clip-Harness
4	8271365	<a href="#">279962</a>		Endcap
"	8271368	<a href="#">279965</a>		Endcap
5	<a href="#">3397269</a>			Connector, Timer
6	<a href="#">8274261</a>			Do-It-Yourself Repair Manuals
7	<a href="#">3395683</a>			Receptacle, Multi-Terminal
8	8271359	<a href="#">279962</a>		Endcap

"	<a href="#">8271362</a>	<a href="#">279965</a>	Endcap
9	<a href="#">694419</a>		Mini-Buzzer
10	<a href="#">8557857</a>		Screen, Lint
"	<a href="#">8557858</a>		Screen, Lint
11	<a href="#">8536939</a>		Clip, Knob
13	688983	<a href="#">487240</a>	Screw, For Mtg. Service Capacitor
14	<a href="#">3401674</a>		Wire, Jumper
15	<a href="#">693995</a>		Screw, Hex Head
16	8557930	<a href="#">8563985</a>	Top
"	8557931	<a href="#">8563986</a>	Top
18	<a href="#">3405152</a>		Switch, Wrinkle Shield
19	<a href="#">8544935</a>		Knob, Control
"	<a href="#">8544936</a>		Knob, Control
20	8283292	<a href="#">8283276</a>	Wire, Jumper
21	<a href="#">3976584</a>		Timer Assembly
22	<a href="#">3403499</a>		Connector, 2-Position
23	<a href="#">3403498</a>		Connector, 3-Position
24	<a href="#">3347243</a>		Block, Disconnect
29	3390646	<a href="#">W10139210</a>	Screw, 8-18 X 5/16
30	<a href="#">357213</a>		Nut, Push-In
31	<a href="#">8299876</a>		Harness, Wiring
32	<a href="#">3977456</a>		Switch, Push-To-Start
33	<a href="#">8544955</a>		Timer Knob Assembly
"	<a href="#">8544956</a>		Timer Knob Assembly
34	<a href="#">8544939</a>		Knob, Push-To-Start
"	<a href="#">8544942</a>		Knob, Push-To-Start
35	<a href="#">717252</a>		Receptacle, Terminal
36	<a href="#">94614</a>		Terminal
37	<a href="#">8544895</a>		Bracket, Control
38	<a href="#">8318802</a>		Panel, Control
"	<a href="#">8318803</a>		Panel, Control
39	<a href="#">3936144</a>		Do-It-Yourself Repair Manuals
40	<a href="#">388326</a>		Screw, 8-18 X 1.25

