


Whirlpool 7MLGR5620PT0 01 - TOP AND CONSOLE PARTS

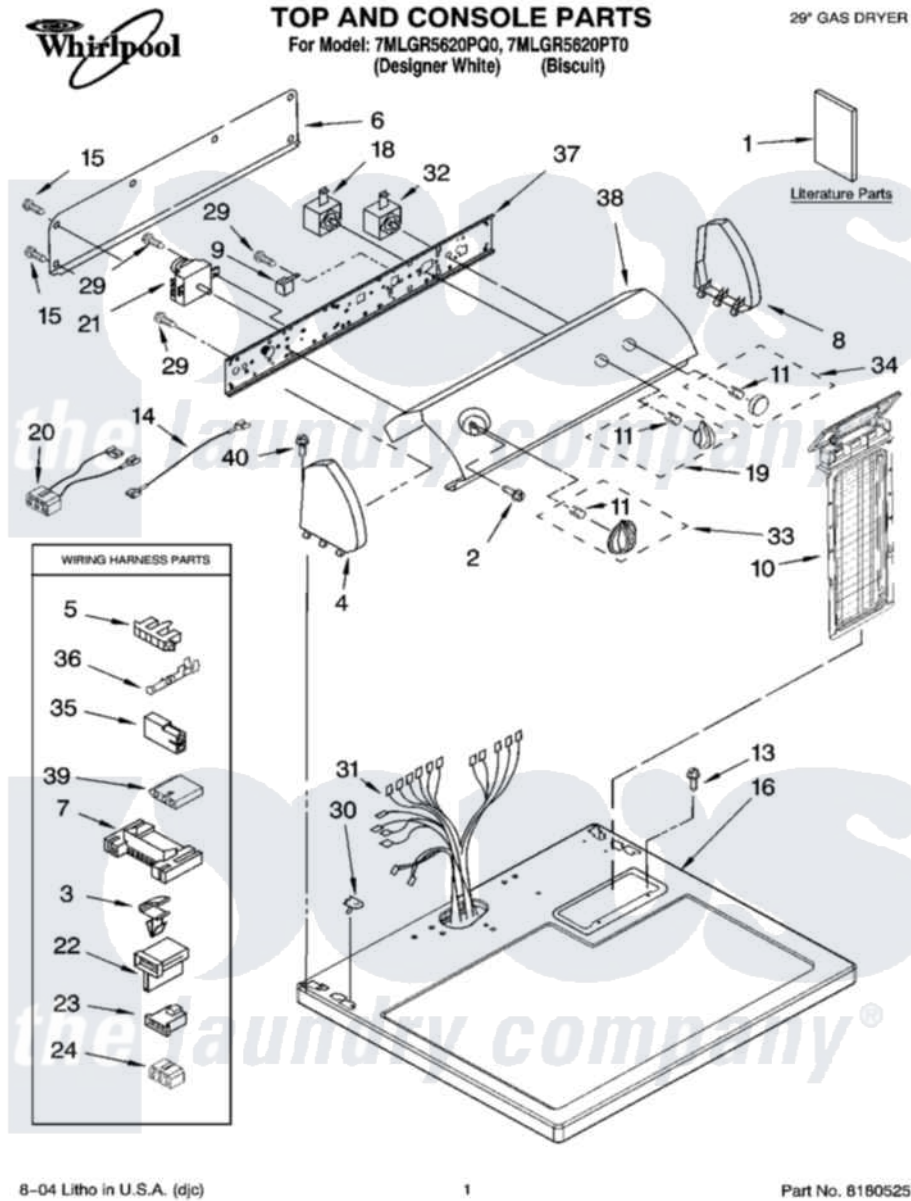

8-04 Litho in U.S.A. (djc)

1

Part No. 8180525

Whirlpool Residential Whirlpool 7MLGR5620PT0 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8564241		Not Available	Instructions, Installation
"	8565898		Not Available	Sheet, Cycle Feature
"	8565897		Not Available	Use And Care Guide
"	8528187			Wiring Diagram
"	N/A		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	3400859			Screw, Grounding
3	3394427			Clip-Harness
4	8271365	279962		Endcap
"	8271368	279965		Endcap
5	3397269			Connector, Timer
6	8274261			Do-It-Yourself Repair Manuals
7	3395683			Receptacle, Multi-Terminal
8	8271359	279962		Endcap

"	8271362	279965	Endcap
9	694419		Mini-Buzzer
10	8557857		Screen, Lint
"	8557858		Screen, Lint
11	8536939		Clip, Knob
13	688983	487240	Screw, For Mtg. Service Capacitor
14	3401674		Wire, Jumper
15	693995		Screw, Hex Head
16	8557930	8563985	Top
"	8557931	8563986	Top
18	3405152		Switch, Wrinkle Shield
19	8544935		Knob, Control
"	8544936		Knob, Control
20	8283292	8283276	Wire, Jumper
21	3976584		Timer Assembly
22	3403499		Connector, 2-Position
23	3403498		Connector, 3-Position
24	3347243		Block, Disconnect
29	3390646	W10139210	Screw, 8-18 X 5/16
30	357213		Nut, Push-In
31	8299876		Harness, Wiring
32	3977456		Switch, Push-To-Start
33	8544955		Timer Knob Assembly
"	8544956		Timer Knob Assembly
34	8544939		Knob, Push-To-Start
"	8544942		Knob, Push-To-Start
35	717252		Receptacle, Terminal
36	94614		Terminal
37	8544895		Bracket, Control
38	8318802		Panel, Control
"	8318803		Panel, Control
39	3936144		Do-It-Yourself Repair Manuals
40	388326		Screw, 8-18 X 1.25

