


Whirlpool 7MLGR7648PQ0 01 - TOP AND CONSOLE PARTS

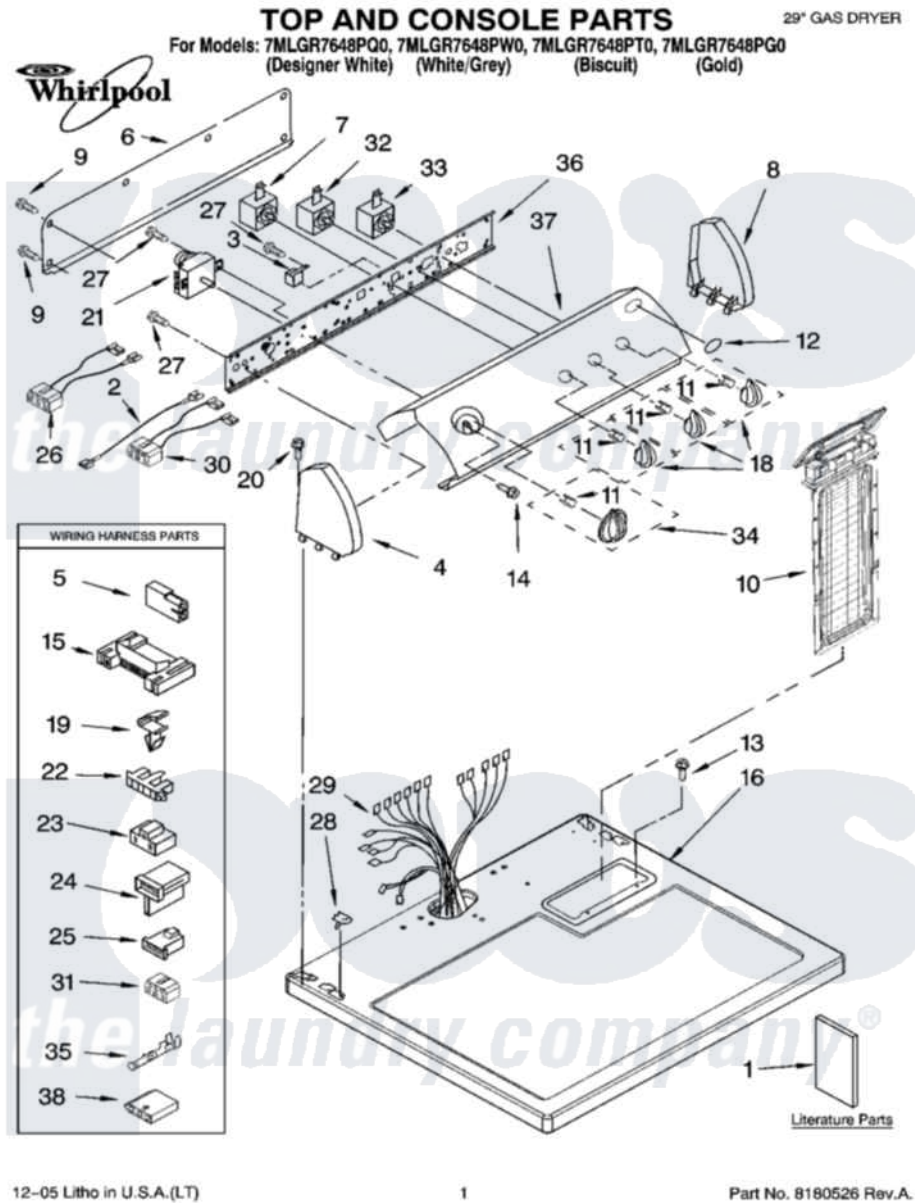

Whirlpool Residential Whirlpool 7MLGR7648PQ0 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8564241		Not Available	Instructions, Installation
"	8572911		Not Available	Sheet, Cycle Feature
"	8565897		Not Available	Use And Care Guide
"	3979703		Not Available	Wiring Diagram
"	N/A		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	3401684			Jumper, Wire
3	694419			Mini-Buzzer
4	8271365	279962		Endcap
"	8271368	279965		Endcap
5	717252			Receptacle, Terminal
6	8274261			Do-It-Yourself Repair Manuals
7	3399639			Switch, Rotary Temperature
8	8271359	279962		Endcap

"	8271362	279965	Endcap
9	693995		Screw, Hex Head
10	8557857		Screen, Lint
"	8557858		Screen, Lint
11	8536939		Clip, Knob
12	3400985		Medallion
13	688983	487240	Screw, For Mtg. Service Capacitor
14	8533951	3400859	Screw, Grounding
15	3395683		Receptacle, Multi-Terminal
16	8557930	8563985	Top
"	8557931	8563986	Top
18	8544935		Knob, Control
"	8544936		Knob, Control
"	8544938		Knob, Control
19	3394427		Clip-Harness
20	388326		Screw, 8-18 X 1.25
21	8299766		Timer Assembly
22	3397269		Connector, Timer
23	3401144		Connector
24	3403499		Connector, 2-Position
25	3403498		Connector, 3-Position
26	3397695		Wire, Jumper
27	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
28	357213		Nut, Push-In
29	8299879		Harness, Wiring
30	3396029	8539893	Wire, Jumper
31	3347243		Block, Disconnect
32	3405156		Switch, Rotary
33	3398095		Switch, Push-To-Start
34	8544955		Timer Knob Assembly
"	8544956		Timer Knob Assembly
"	8544958		Timer Knob Assembly
35	94614		Terminal
36	8544895		Bracket, Control
37	8318804		Panel, Control
"	8318806		Panel, Control
"	8318805		Panel, Control
"	8577307	Not Available	Panel, Control (Includes Illus. 12) (Gold)
38	3936144		Do-It-Yourself Repair Manuals