


# Whirlpool 7MLGR8620PW1 01 - TOP AND CONSOLE PARTS

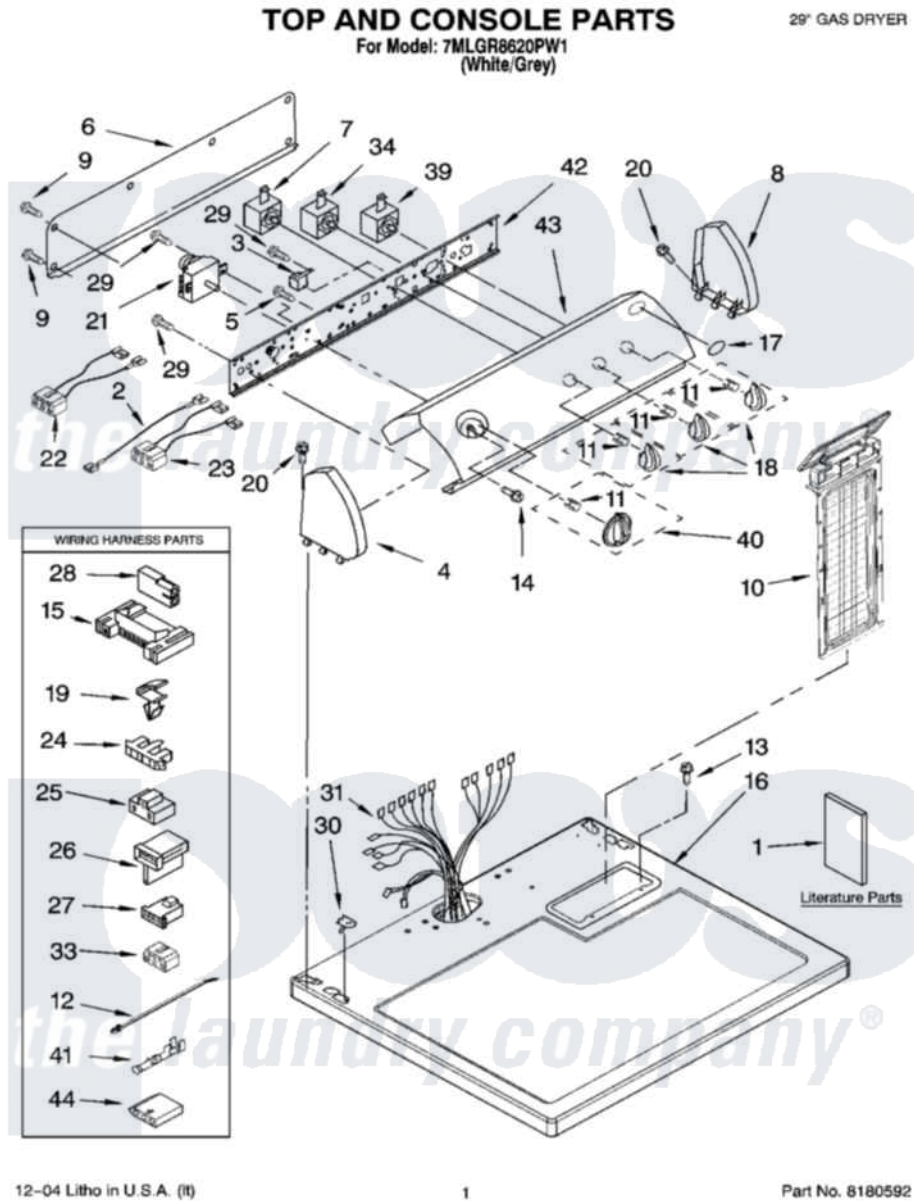

Whirlpool [Residential Whirlpool 7MLGR8620PW1 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8564241		Not Available	Instructions, Installation
"	8564245		Not Available	Sheet, Cycle Feature
"	8564243		Not Available	Guide, Use & Care
"	3979703		Not Available	Wiring Diagram
"	N/A		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	<a href="#">3401684</a>			Jumper, Wire
3	<a href="#">694419</a>			Mini-Buzzer
4	8271365	<a href="#">279962</a>		Endcap
5	8533971	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
6	<a href="#">8274261</a>			Do-It-Yourself Repair Manuals
7	<a href="#">3399639</a>			Switch, Rotary Temperature
8	8271359	<a href="#">279962</a>		Endcap
9	<a href="#">693995</a>			Screw, Hex Head

10	<a href="#">8557857</a>		Screen, Lint
11	<a href="#">8536939</a>		Clip, Knob
12	<a href="#">3391249</a>		Cable Tie, Push Mount
13	688983	<a href="#">487240</a>	Screw, For Mtg. Service Capacitor
14	8533951	<a href="#">3400859</a>	Screw, Grounding
15	<a href="#">3395683</a>		Receptacle, Multi-Terminal
16	8557930	<a href="#">8563985</a>	Top
17	<a href="#">3400985</a>		Medallion
18	<a href="#">8544937</a>		Knob, Control
19	<a href="#">3394427</a>		Clip-Harness
20	<a href="#">388326</a>		Screw, 8-18 X 1.25
21	<a href="#">8299766</a>		Timer Assembly
22	<a href="#">3397695</a>		Wire, Jumper
23	3396029	<a href="#">8539893</a>	Wire, Jumper
24	<a href="#">3397269</a>		Connector, Timer
25	<a href="#">3401144</a>		Connector
26	<a href="#">3403499</a>		Connector, 2-Postion
27	<a href="#">3403498</a>		Connector, 3-Position
28	<a href="#">717252</a>		Receptacle, Terminal
29	3390646	<a href="#">W10139210</a>	Screw, 8-18 X 5/16
30	<a href="#">357213</a>		Nut, Push-In
31	<a href="#">8299879</a>		Harness, Wiring
33	<a href="#">3347243</a>		Block, Disconnect
34	<a href="#">3405156</a>		Switch, Rotary
39	<a href="#">3398095</a>		Switch, Push-To-Start
40	<a href="#">8544957</a>		Timer Knob Assembly
41	<a href="#">94614</a>		Terminal
42	<a href="#">8544895</a>		Bracket, Control
43	<a href="#">8564210</a>		Panel, Control
44	<a href="#">3936144</a>		Do-It-Yourself Repair Manuals

