


Whirlpool 7MLSQ8545PT1 01 - TOP AND CABINET PARTS

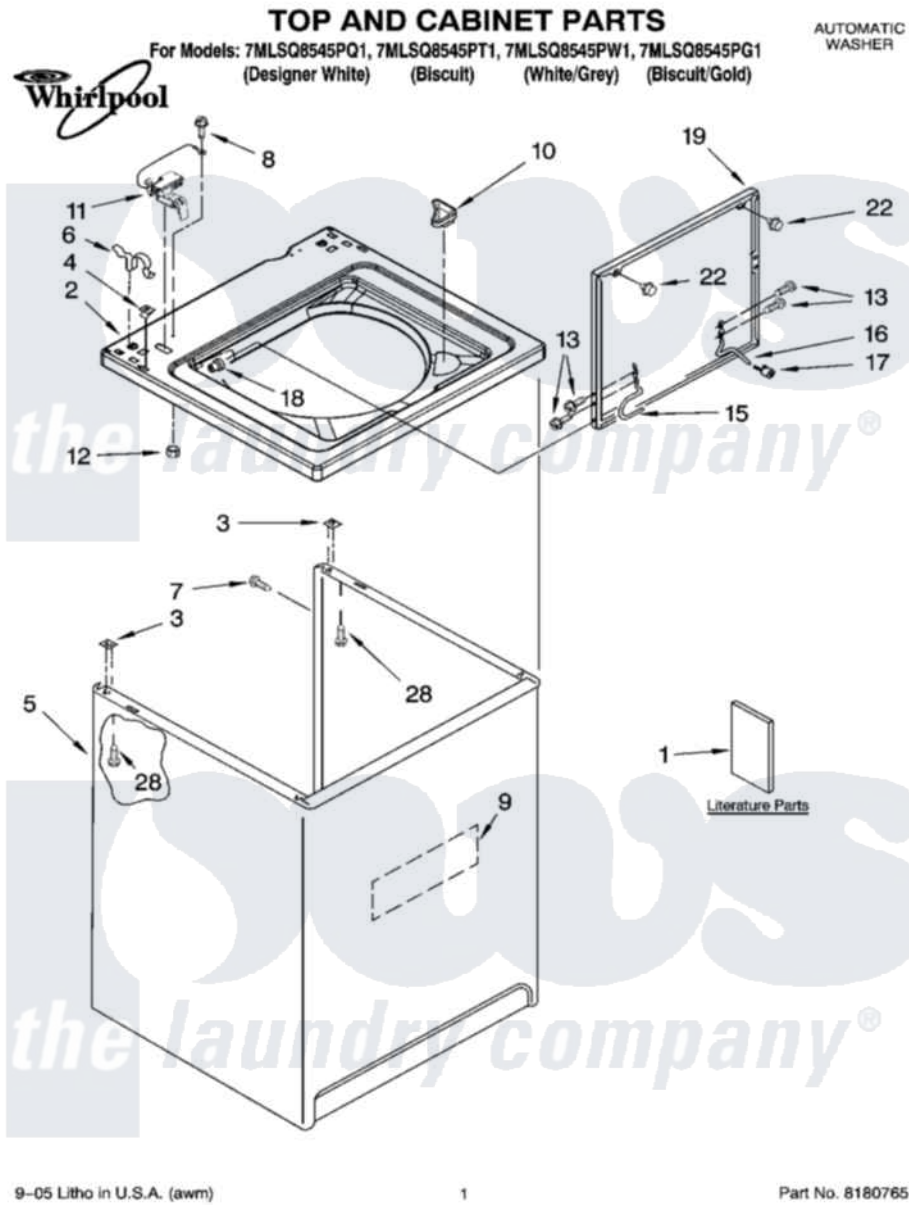

Whirlpool [Residential Whirlpool 7MLSQ8545PT1 Washer Parts](#) Parts Diagram 01 - TOP AND CABINET PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10071230		Not Available	Installation Instructions
"	8558603		Not Available	Feature Sheet
"	8539806		Not Available	Use & Care Guide
"	8558605		Not Available	Energy Guide (Mexico)
"	8542633		Not Available	Wiring Diagram
2	8318064			Top
"	8318066			Top
3	62750			Spacer, Cabinet To Top (4)
4	357213			Nut, Push-In
5	63424			Cabinet
"	3954357			Cabinet
6	62780			Clip, Top And Cabinet And Rear Panel
7	3357011	308685		Side Trim)
8	3351614			Screw, Gearcase Cover Mounting
9	3976348			Absorber, Sound

10	3362952		Dispenser, Bleach
11	8318084		Switch, Lid
12	8533959	680762	Nut
13	3351355	W10119828	Screw, Lid Hinge Mounting
15	8318088		Hinge, Lid
16	54583		Hinge, Lid
17	19119		Bumper, Lid Hinge
18	21258		Bearing, Lid Hinge
19	8557513	3957617	Lid
"	8557514	3957618	Lid
22	9724509		Bumper, Lid
28	3390631		Screw, 10-16 X 3/8

the laundry company[®]

the laundry company[®]

the laundry company[®]