


Whirlpool 7MLSR7232PQ1 03 - AGITATOR, BASKET AND TUB PARTS

AGITATOR, BASKET AND TUB PARTS

For Models: 7MLSR7232PQ1, 7MLSR7232PT1
(Designer White) (Biscuit)

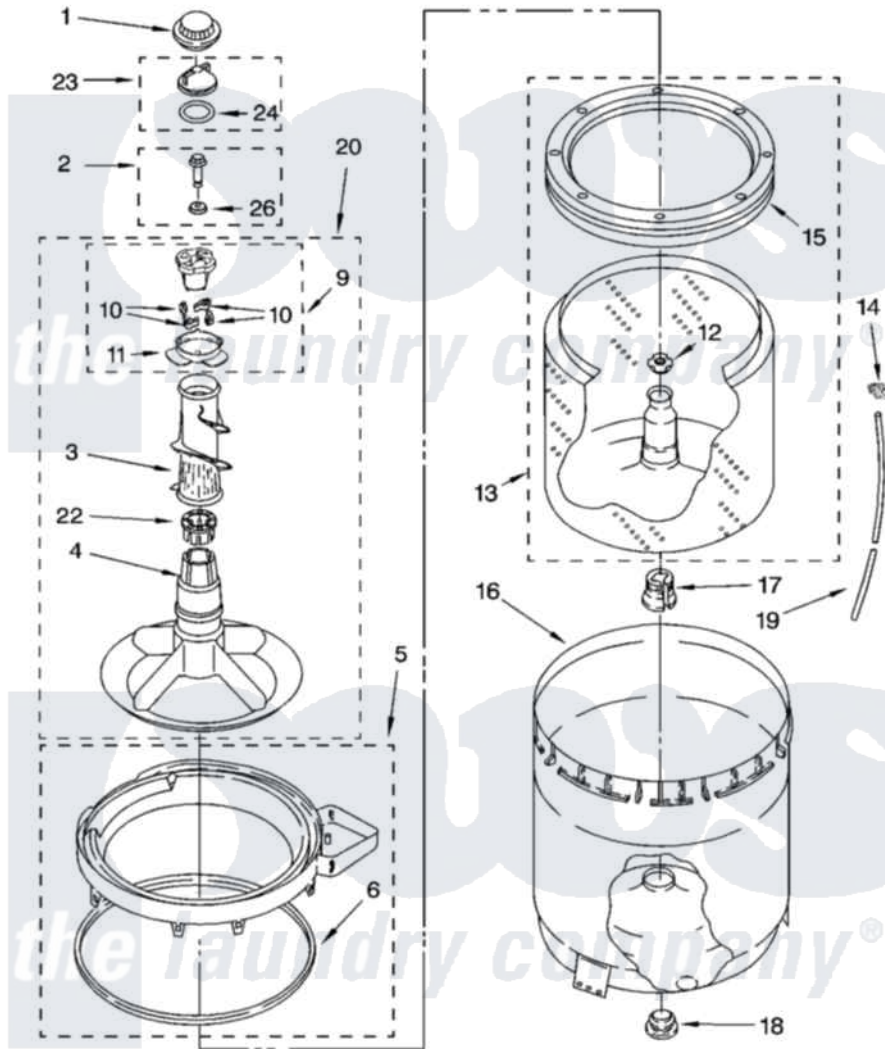

8180745

5

Whirlpool Residential Whirlpool 7MLSR7232PQ1 Washer Parts Parts Diagram 03 - AGITATOR, BASKET AND TUB PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	3355758			Cap, Agitator
2	358237			Screw And Washer
3	3348752			Mover, Clothes
4	3347288			Agitator
5	8528150	W10445870		Ring-Tub
6	3976308			Gasket, Tub Ring
9	3363663	285811		Cam-Agitator
10	3366877	80040		Dog-Agitator
11	3363661			Bearing, Driven Cam
12	21366			Nut, Spanner
13	8526017	W10389329		Clothes Container, Assembly
14	2219077			Clip, Pressure Switch Hose
15	8519788	387240		Ring, Balance
16	63849			Strain Relief, Power Cord
17	389140			Tub Block, Basket Drive
18	383727			Gasket, Centerpod

19	3347780	353244	Hose, Pressure Switch
20	3348117	285565	Agitator
22	3350389	285587	Washer
23	3354733	W10074580	Cap, Barrier
24	3348855	W10072840	Fabric Softener
26	3949550		Washer

