


Whirlpool 7MLSR8534PG1 03 - AGITATOR, BASKET AND TUB PARTS

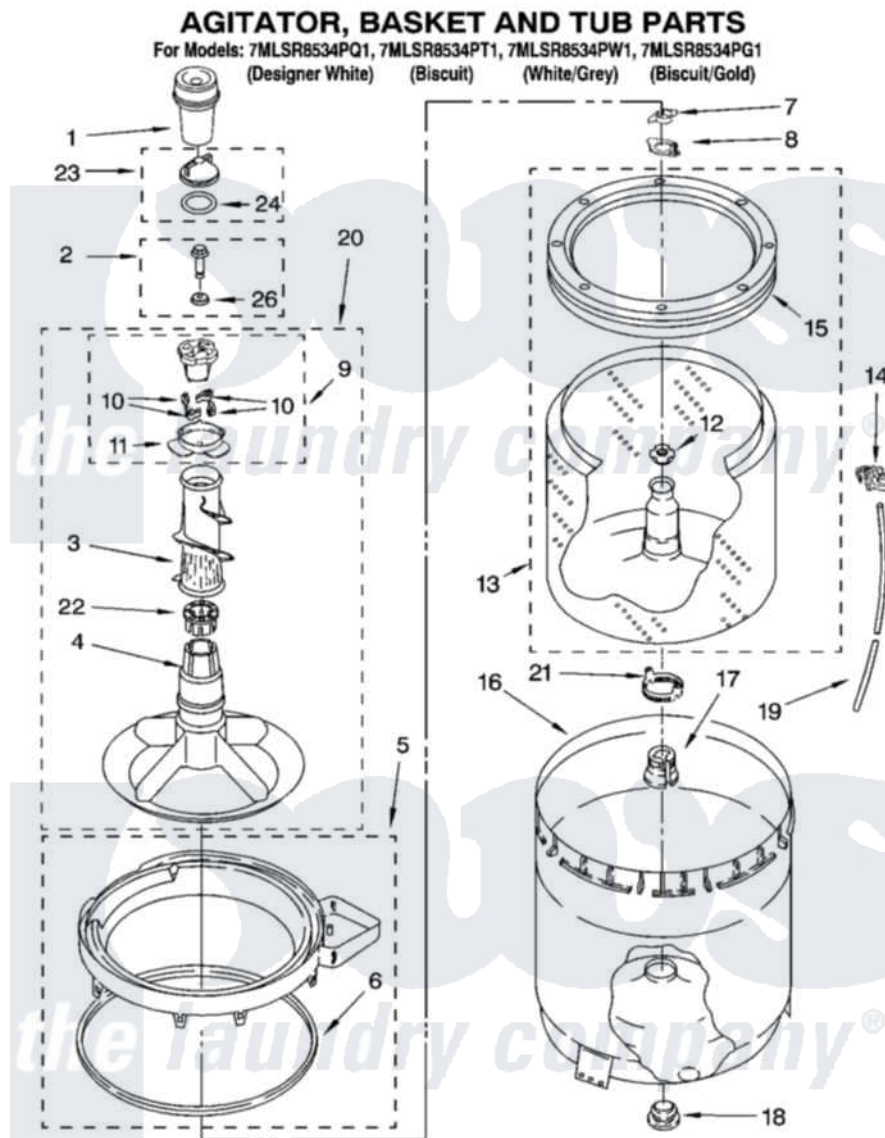

8180767

5

Whirlpool Residential Whirlpool 7MLSR8534PG1 Washer Parts Parts Diagram 03 - AGITATOR, BASKET AND TUB PARTS

Click on the part number to view part

| Item | Original Part Number | Replaced By | Status | Part Description |
|------|-------------------------|---------------------------|--------|-----------------------------|
| 1 | 63580 | | | Dispenser, Fabric Softener |
| 2 | 358237 | | | Screw And Washer |
| 3 | 3363003 | | | Mover, Clothes |
| 4 | 3347288 | | | Agitator |
| 5 | 8528150 | W10445870 | | Ring-Tub |
| 6 | 3976308 | | | Gasket, Tub Ring |
| 7 | 3354845 | | | Clip, Agitator |
| 8 | 8543666 | | | Washer, Agitator |
| 9 | 3363663 | 285811 | | Cam-Agitator |
| 10 | 3366877 | 80040 | | Dog-Agitator |
| 11 | 3363661 | | | Bearing, Driven Cam |
| 12 | 21366 | | | Nut, Spanner |
| 13 | 8526017 | W10389329 | | Clothes Container, Assembly |
| 14 | 2219077 | | | Clip, Pressure Switch Hose |
| 15 | 8519788 | 387240 | | Ring, Balance |
| 16 | 63849 | | | Strain Relief, Power Cord |

| | | | |
|----|-------------------------|---------------------------|-------------------------|
| 17 | 389140 | | Tub Block, Basket Drive |
| 18 | 383727 | | Gasket, Centerpodt |
| 19 | 3347780 | 353244 | Hose, Pressure Switch |
| 20 | 3946501 | | Agitator, Assembly |
| 21 | 8577198 | | Filter, Lint |
| 22 | 3350389 | 285587 | Washer |
| 23 | 3354733 | W10074580 | Cap, Barrier |
| 24 | 3348855 | W10072840 | Fabric Softener |
| 26 | 3949550 | | Washer |

