


Whirlpool 7MSAWS800LQ1 02 - CONTROLS AND REAR PANEL PARTS

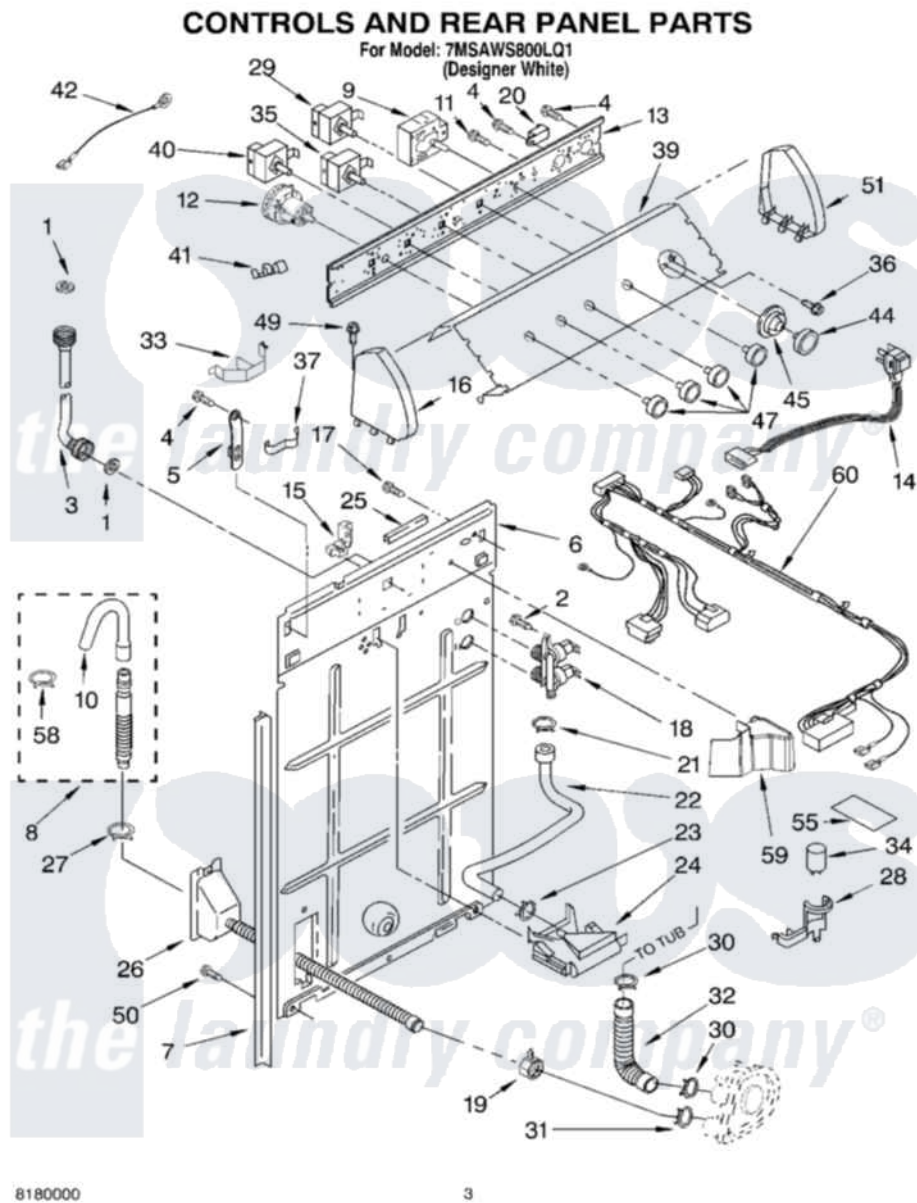

Whirlpool [Residential Whirlpool 7MSAWS800LQ1 Washer Parts](#) Parts Diagram 02 - CONTROLS AND REAR PANEL PARTS

Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	3976300	16123		Washer Inlet-Hose Miscellaneous Parts Must be Ordered Separately.
2	9740848			Screw, Mixing Valve Mounting
3	3949374	89503		Hose-Inlet
"	3949375	89503		Hose-Inlet
4	90767			Screw, 8A X 3/8 HeX Washer Head Tapping
5	8318255	8568314		Strap, Console
6	8318405			Panel, Rear
7	62747			Pad, Rear Panel
8	3951609	285664		Hose
"	661577	285666		Hose
"	3357090	285702		Hose
9	3955651			Timer, Control
10	3357027			Nozzle, Hose Drain
11	3179795			Screw, Ground

12	3366847	W10337780	Switch-WL
13	3948608		Bracket, Control
14	8532158	W10130795	Cord-Power
15	3949468	285777	Relief-Str
16	8532108		Cap, End
17	3351614		Screw, Gearcase Cover Mounting
18	3952164	285805	Valve-Inlet
19	3976395		Restraint, Hose
20	694419		Mini-Buzzer
21	370451	596669	Clamp, Manifold
22	3357328		Hose, Vacuum Break
23	371503	596669	Clamp, Manifold
24	387606	3360977	Break-Vac
25	303294	3367669	Protector, Edge
26	8317940	W10358149	Drain Hose Assembly
27	3366912	356138	Clamp, Hose
28	8318201	8318046	Clip, Capacitor
29	3949188		Switch, Rotary
30	3363366	616099	Clamp
31	8317496	285655	Clamp, Hose
32	3951449	285871	Hose
33	8055003		Clip, Harness And Pressure Switch
34	661606	8572717	Capacitor, Motor Start
35	3949180	W10168257	Switch, Rotary
36	3400818		Screw, Timer Mounting
37	3347812	8528351	Clip
39	8539598		Panel, Console
40	661614		Switch, Water Temperature
41	357572	W10113937	Clip, Grounding
42	3398893	3395559	Wire
44	3951026	3957821	Knob, Timer
45	3950762	3957841	Dial, Timer
47	3950759	3957796	Knob, Control
49	388326		Screw, 8-18 X 1.25
50	62863	3390631	Screw, 10-16 X 3/8
51	8532107		Cap, End
55	3976286		Shield, Capacitor
58	3366913	3357331	Clamp, Drain
59	8314879		Shield, Inlet Valve
60	3956172		Harness, Wiring

the laundry company[®]