


Whirlpool 7MSGDS800LQ1 01 - TOP AND CONSOLE PARTS

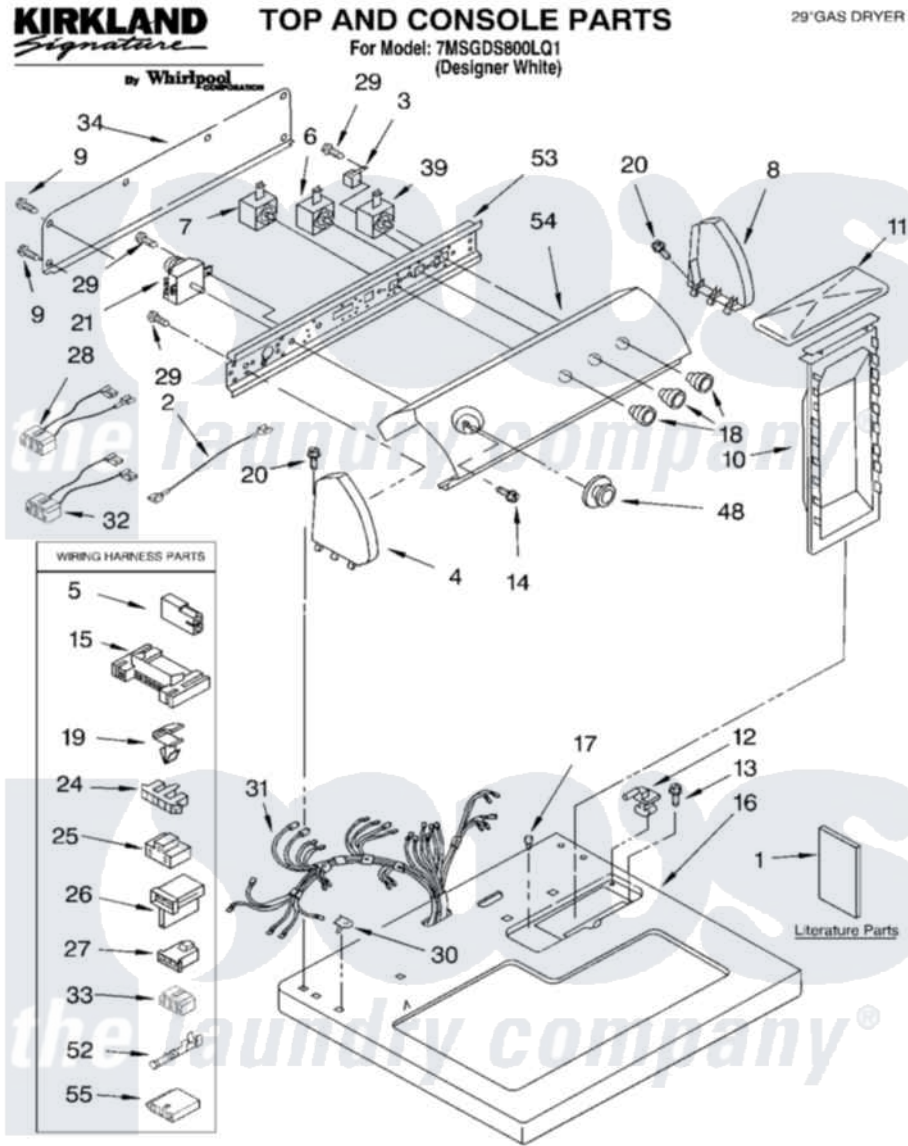

04-03 Litho in U.S.A. (djc)

1

Part No. 8180038

Whirlpool [Residential Whirlpool 7MSGDS800LQ1 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	LIT8528113		Not Available	Literature Parts (Instructions, Installation)
"	LIT8543096		Not Available	Guide, Use & Care
"	LIT3979703		Not Available	Literature Parts (Label, Wiring Diagram)
"	N/A		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	LIT677818	677818L		Diy
2	3401684			Jumper, Wire
"	3401694			Wire, Jumper
3	694419			Mini-Buzzer
4	8274437	279960		Endcap
5	717252			Receptacle, Terminal
6	3405156			Switch, Rotary
7	3399640			Switch, Rotary
8	8274434	279960		Endcap
9	693995			Screw, Hex Head

10	349639		HANdle And Lint Screen Assembly
11	8283378		Cover, Lint Screen
12	3978605	W10044470	Hinge, RH
"	3978606		Hinge, Lint Lid
13	688983	487240	Screw, For Mtg. Service Capacitor
14	3400859		Screw, Grounding
15	3395683		Receptacle, Multi-Terminal
16	8271390	8521918	Top
17	297535	17258	Bumper
18	3950759	3957796	Knob, Control
19	3394427		Clip-Harness
20	388326		Screw, 8-18 X 1.25
21	8299766		Timer Assembly
24	3397269		Connector, Timer
25	3401144		Connector
26	3403499		Connector, 2-Postion
27	3403498		Connector, 3-Position
28	3397695		Wire, Jumper
29	3390646	W10139210	Screw, 8-18 X 5/16
30	357213		Nut, Push-In
31	8299879		Harness, Wiring
32	3396030		Wire, Jumper
33	3347243		Block, Disconnect
34	8274261		Do-It-Yourself Repair Manuals
39	3398096		Switch, Push-To-Start
48	8283182	3957746	Knob
52	94614		Terminal
53	8271418		Bracket, Control
54	8528143		Panel, Control
55	3936144		Do-It-Yourself Repair Manuals
"	N/A	Not Available	ACCESSORY PARTS
"	279948	4392065	Kit, Dryer Repair
"	8522199		Accessory Parts
"	346764		Kit, Hold Down
"	72017		Paint, Touch-Up
"	350930		Paint, Pressurized Spray B
"	350938		Paint, Pressurized Spray B
"	799344		Paint, Touch-Up)