


Whirlpool 7MSGDX600LQ0 02 - CABINET PARTS

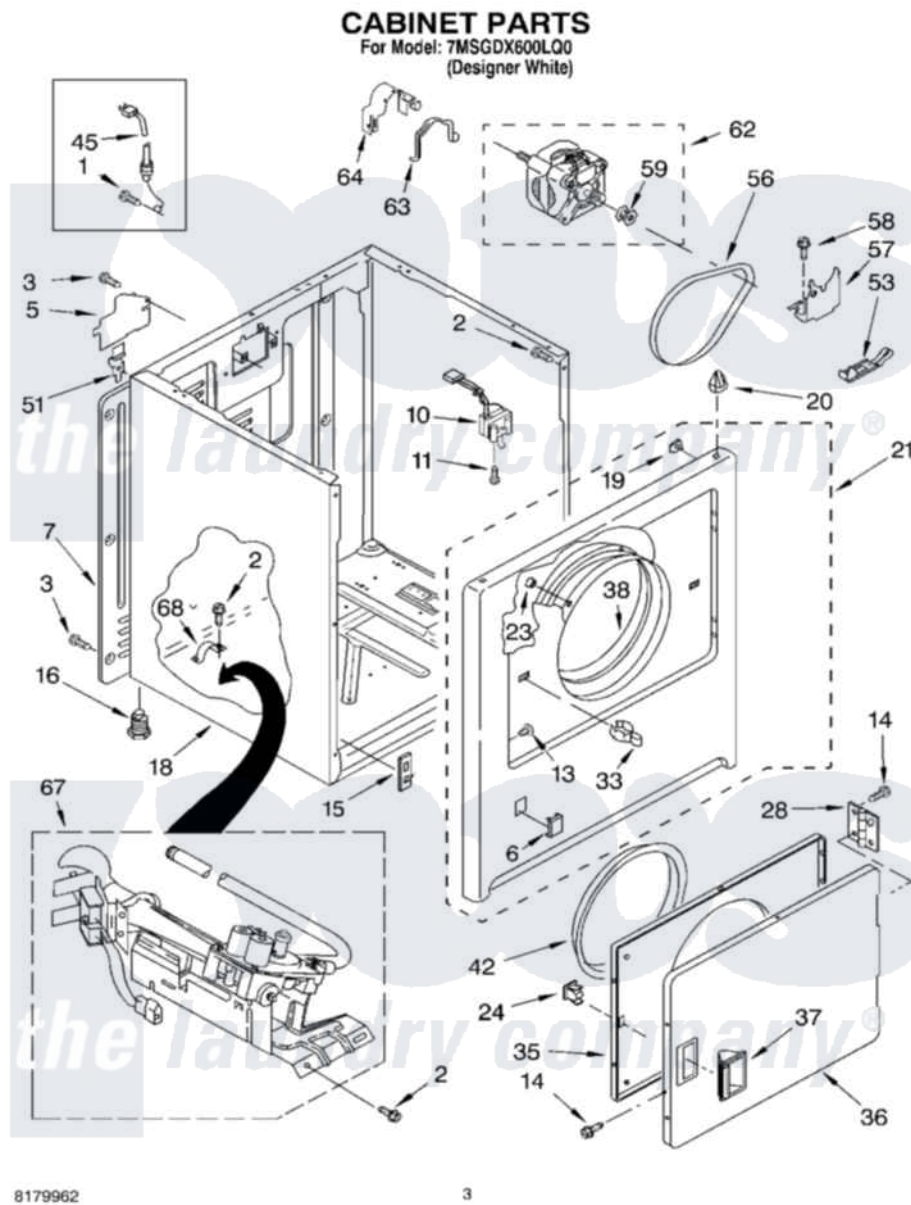

8179962

3

Whirlpool [Residential Whirlpool 7MSGDX600LQ0 Dryer Parts](#) Parts Diagram 02 - CABINET PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	697776	4331106		Screw, No.10-32 X 7/16
2	343641	681414		Screw, 10AB X 1/2
3	693995			Screw, Hex Head
5	3396795			Cover, Terminal Block
6	3394975			Plug, Front Panel
7	3396807	280040		Panel-Rear
10	3406104	3406105		Door Switch Assembly
11	697773	3395530		Screw
13	3404413			Plug, Hinge Hole
14	342055	488627		Screw
15	3394083			Clip, Front Panel
16	3392100	49621		Feet-Leveling
18	8530603	8533643		Cabinet
19	98234			Clip, U-Bend
20	690363	18776		Lock, Front Top
21	3403574	279846		Panel

23	685203	279220	Clip
24	690081	279570	Latch
28	3405514	W10362431	Hinge And Pin Assembly
33	696144	279570	Latch
35	3403371		Door, Inner
36	3403361		Door Front
37	3405184		Handle, Door
38	8066124	279264	Air Channel Box
42	3405245		5/16-18 X 3/4
45	344020	3401402	Cord, Power
51	238088	8066217	Hinge, Top
53	3394332	691366	Idler And Pulley Assembly
56	8066065	341241	Belt
57	348780		Base, Motor
58	3400500		Bolt, 3405245 5/16-18 X 3/4
59	3394341	W10299847	Pulley-Motor
62	8538262	279827	Motor-Drve
63	660658		Clamp, Motor Mounting 343481 685441
64	3404162		Clamp, Motor
67	8318272	W10465748	Burner-Gas
68	341029		Clamp, Pipe Door Spring

