


# Whirlpool 7MSGDX600MQ0 02 - CABINET PARTS

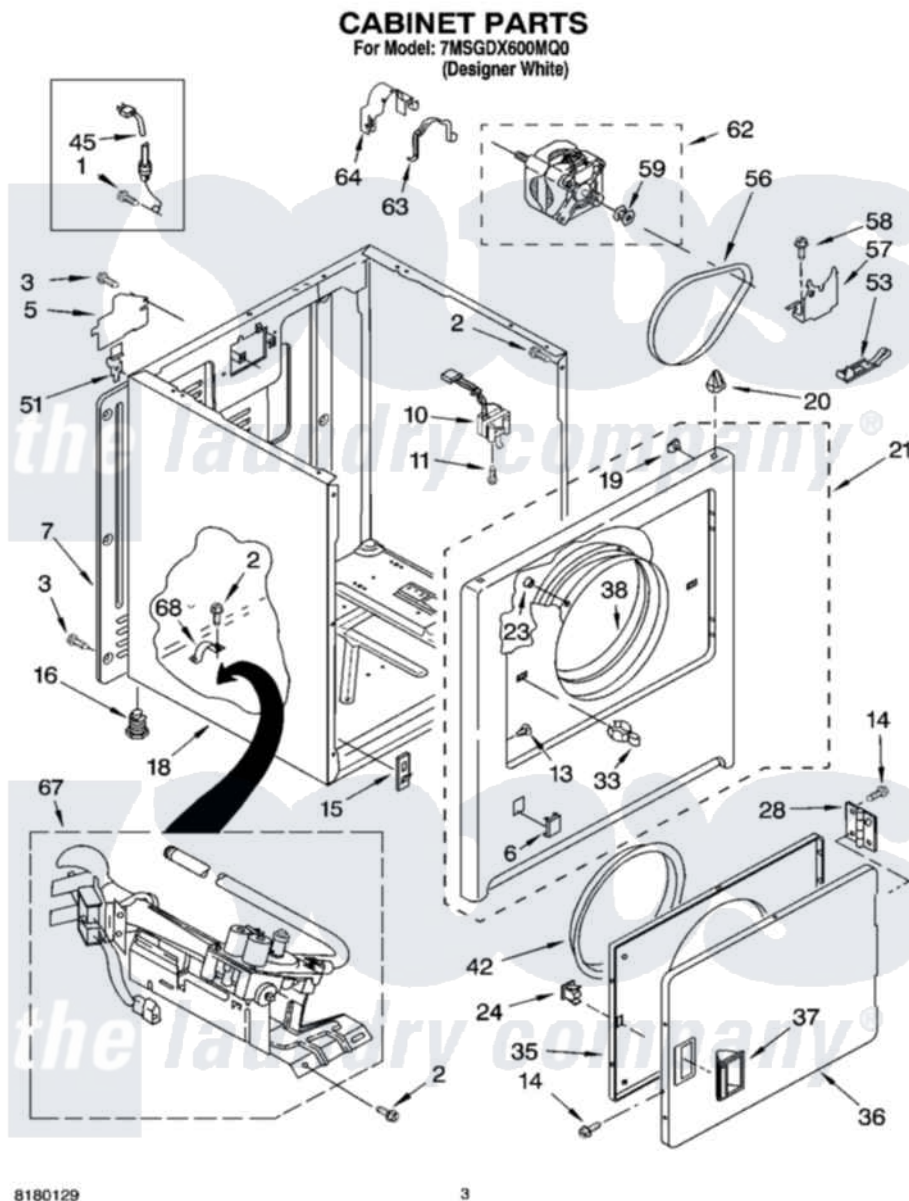

Whirlpool Residential Whirlpool 7MSGDX600MQ0 Dryer Parts Parts Diagram 02 - CABINET PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	697776	<a href="#">4331106</a>		Screw, No.10-32 X 7/16
2	343641	<a href="#">681414</a>		Screw, 10AB X 1/2
3	<a href="#">693995</a>			Screw, Hex Head
5	<a href="#">3396795</a>			Cover, Terminal Block
6	<a href="#">3394975</a>			Plug, Front Panel
7	3396807	<a href="#">280040</a>		Panel-Rear
10	3406104	<a href="#">3406105</a>		Door Switch Assembly
11	697773	<a href="#">3395530</a>		Screw
13	<a href="#">3404413</a>			Plug, Hinge Hole
14	342055	<a href="#">488627</a>		Screw
15	<a href="#">3394083</a>			Clip, Front Panel
16	3392100	<a href="#">49621</a>		Feet-Leveling
18	8530603	<a href="#">8533643</a>		Cabinet
19	<a href="#">98234</a>			Clip, U-Bend
20	690363	<a href="#">18776</a>		Lock, Front Top
21	3403574	<a href="#">279846</a>		Panel

23	685203	<a href="#">279220</a>	Clip
24	690081	<a href="#">279570</a>	Latch
28	3405514	<a href="#">W10362431</a>	Hinge And Pin Assembly
33	696144	<a href="#">279570</a>	Latch
35	<a href="#">3403371</a>		Door, Inner
36	<a href="#">3403361</a>		Door Front
37	<a href="#">3405184</a>		Handle, Door
38	8066124	<a href="#">279264</a>	Air Channel Box
42	<a href="#">3405245</a>		5/16-18 X 3/4
45	344020	<a href="#">3401402</a>	Cord, Power
51	238088	<a href="#">8066217</a>	Hinge, Top
53	3394332	<a href="#">691366</a>	Idler And Pulley Assembly
56	8066065	<a href="#">341241</a>	Belt
57	<a href="#">348780</a>		Base, Motor
58	<a href="#">3400500</a>		Bolt, 3405245 5/16-18 X 3/4
59	3394341	<a href="#">W10299847</a>	Pulley-Motor
62	8538262	<a href="#">279827</a>	Motor-Drve
63	<a href="#">660658</a>		Clamp, Motor Mounting 343481 685441
64	<a href="#">3404162</a>		Clamp, Motor
67	8318272	<a href="#">W10465748</a>	Burner-Gas
68	<a href="#">341029</a>		Clamp, Pipe Door Spring

