


Whirlpool 7MWG45500SQ0 01 - TOP AND CONSOLE PARTS

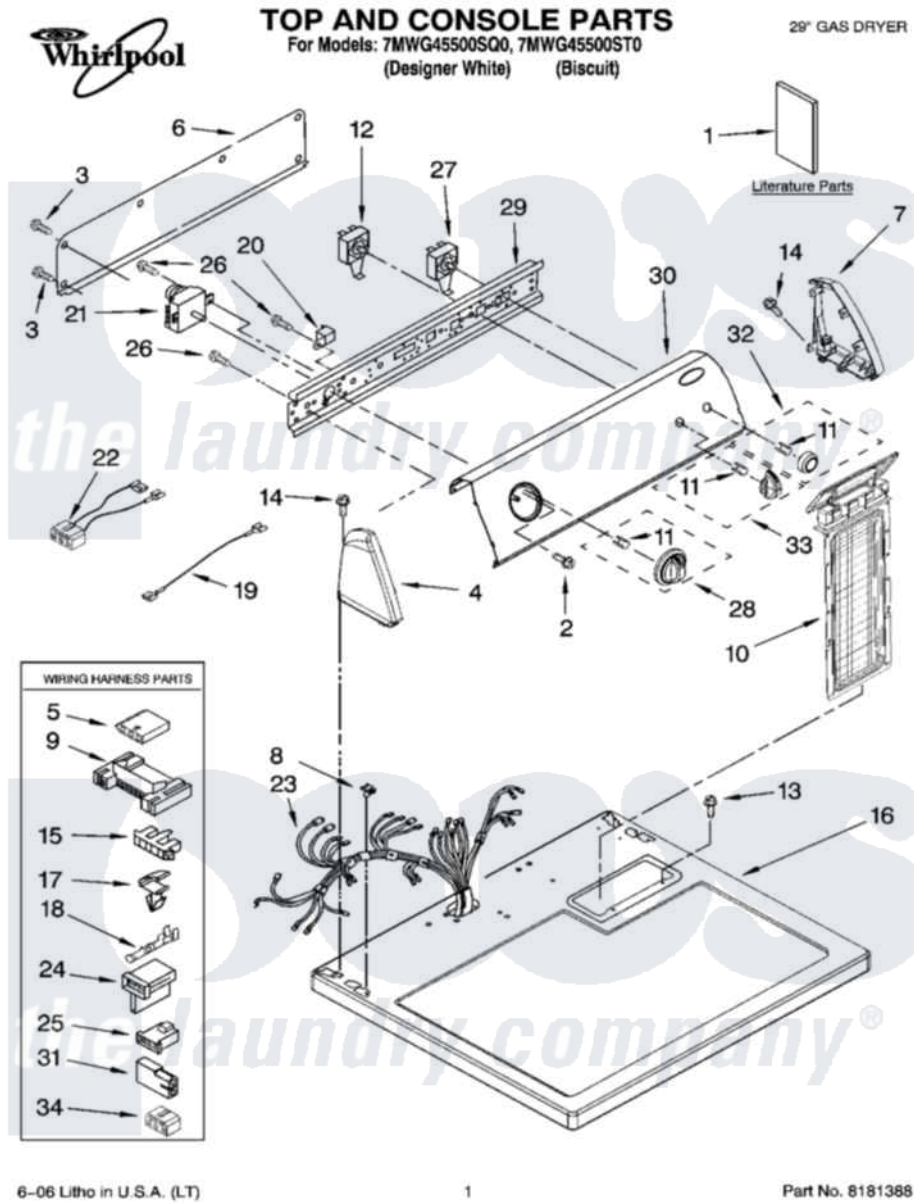

6-06 Litho in U.S.A. (LT)

1

Part No. 8181388

Whirlpool [Residential Whirlpool 7MWG45500SQ0 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8565897		Not Available	Use And Care Guide
"	8579563		Not Available	Sheet, Cycle Feature
"	8564241		Not Available	Instructions, Installation
"	8533203		Not Available	Wiring Diagram
"	BLANK		Not Available	Following May Be Purchased
"	BLANK		Not Available	DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	8533951	3400859		Screw, Grounding
3	693995			Screw, Hex Head
4	8271369	279962		Endcap
"	8314852			Cap, End
5	3936144			Do-It-Yourself Repair Manuals
6	8274261			Do-It-Yourself Repair Manuals
7	8271363	279962		Endcap
"	8314851			Cap, End

8	357213		Nut, Push-In
9	3395683		Receptacle, Multi-Terminal
10	8557861		Screen, Lint
"	8557862		Screen, Lint
11	8536939		Clip, Knob
12	3405152		Switch, Wrinkle Shield
13	688983	487240	Screw, For Mtg. Service Capacitor
14	388326		Screw, 8-18 X 1.25
15	3397269		Connector, Timer
16	8557930	8563985	Top
"	8557931	8563986	Top
17	3394427		Clip-Harness
18	94614		Terminal
19	3401674		Wire, Jumper
20	694419		Mini-Buzzer
21	3976584		Timer Assembly
22	8283292	8283276	Wire, Jumper
23	8299876		Harness, Wiring
24	3403499		Connector, 2-Position
25	3403498		Connector, 3-Position
26	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
27	3977456		Switch, Push-To-Start
28	8566061		Timer Knob Assembly
"	8566064		Timer Knob Assembly
29	8544895		Bracket, Control
30	8543035		Panel, Control
"	8543036		Panel, Control
31	717252		Receptacle, Terminal
32	8566065		Knob, Push-To-Start
"	8566068		Knob, Push-To-Start
33	8565944		Knob, Control
"	8565947		Knob, Control
34	3347243		Block, Disconnect

