


Whirlpool 7MWG45500SQ1 01 - TOP AND CONSOLE PARTS

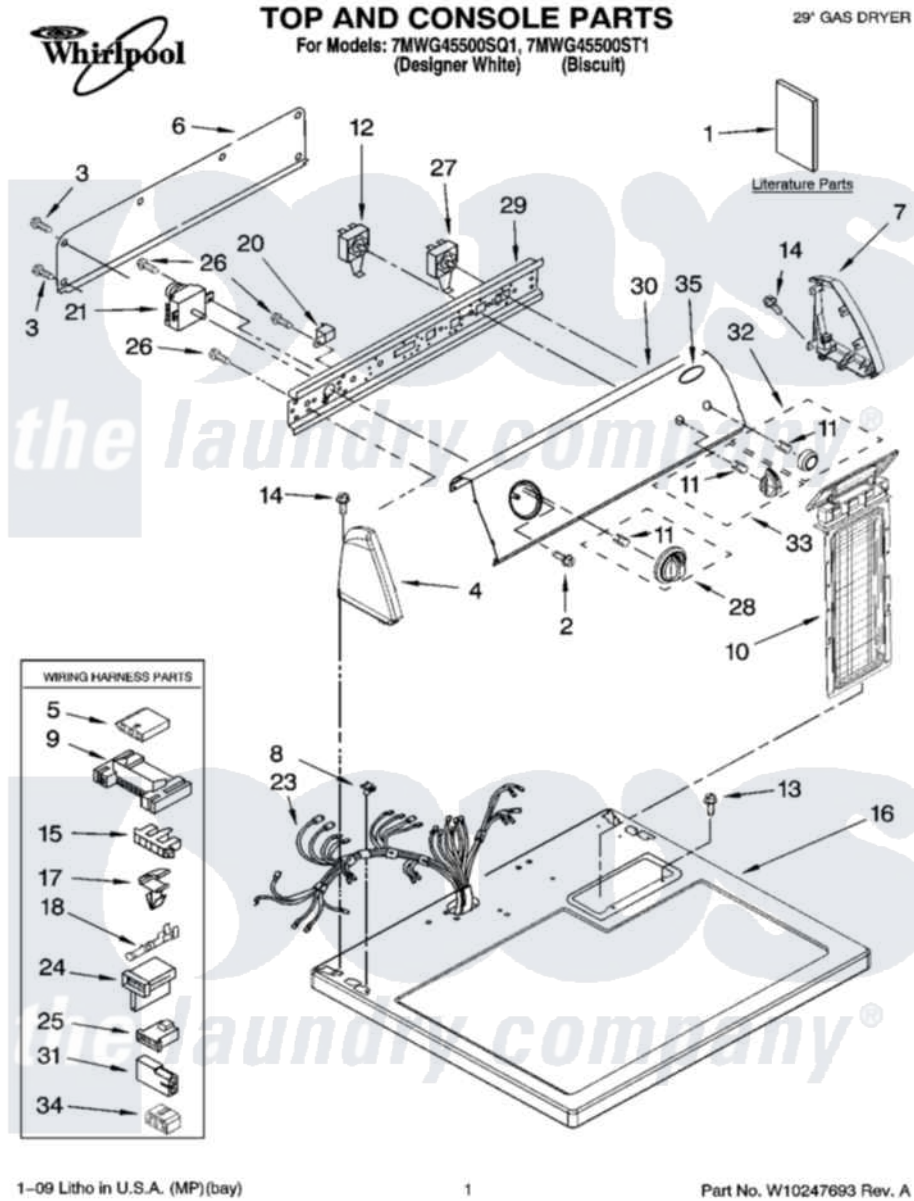

Whirlpool Residential Whirlpool 7MWG45500SQ1 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8565897		Not Available	Use And Care Guide
"	8579563		Not Available	Sheet, Cycle Feature
"	8564241		Not Available	Instructions, Installation
"	W10185979			Wiring Diagram Cycle Feature
2	8533951	3400859		Screw, Grounding
3	693995			Screw, Hex Head
4	8271365	279962		Endcap
"	8271368	279965		Endcap
5	3936144			Do-It-Yourself Repair Manuals
6	8274261			Do-It-Yourself Repair Manuals
7	8271359	279962		Endcap
"	8271362	279965		Endcap
8	357213			Nut, Push-In
9	3395683			Receptacle, Multi-Terminal
10	8557861			Screen, Lint
"	8557862			Screen, Lint

11	8536939		Clip, Knob
12	3405152		Switch, Wrinkle Shield
13	688983	487240	Screw, For Mtg. Service Capacitor
14	388326		Screw, 8-18 X 1.25
15	3397269		Connector, Timer
16	8557930	8563985	Top
"	8557931	8563986	Top
17	3394427		Clip-Harness
18	94614		Terminal
20	694419		Mini-Buzzer
21	W10185969		Timer Assembly, 60 Hz
23	W10111050		Harness, Wiring
24	3403499		Connector, 2-Postion
25	3403498		Connector, 3-Position
26	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
27	3977456		Switch, Push-To-Start
28	8566061		Timer Knob Assembly
"	8566064		Timer Knob Assembly
29	8544895		Bracket, Control
30	8543035		Panel, Control
"	8543036		Panel, Control
31	717252		Receptacle, Terminal
32	8566065		Knob, Push-To-Start
"	8566068		Knob, Push-To-Start
33	8565944		Knob, Control
"	8565947		Knob, Control
34	3347243		Block, Disconnect
35	3400985		Medallion

