


Whirlpool 7MWG66705WT1 01 - TOP AND CONSOLE PARTS

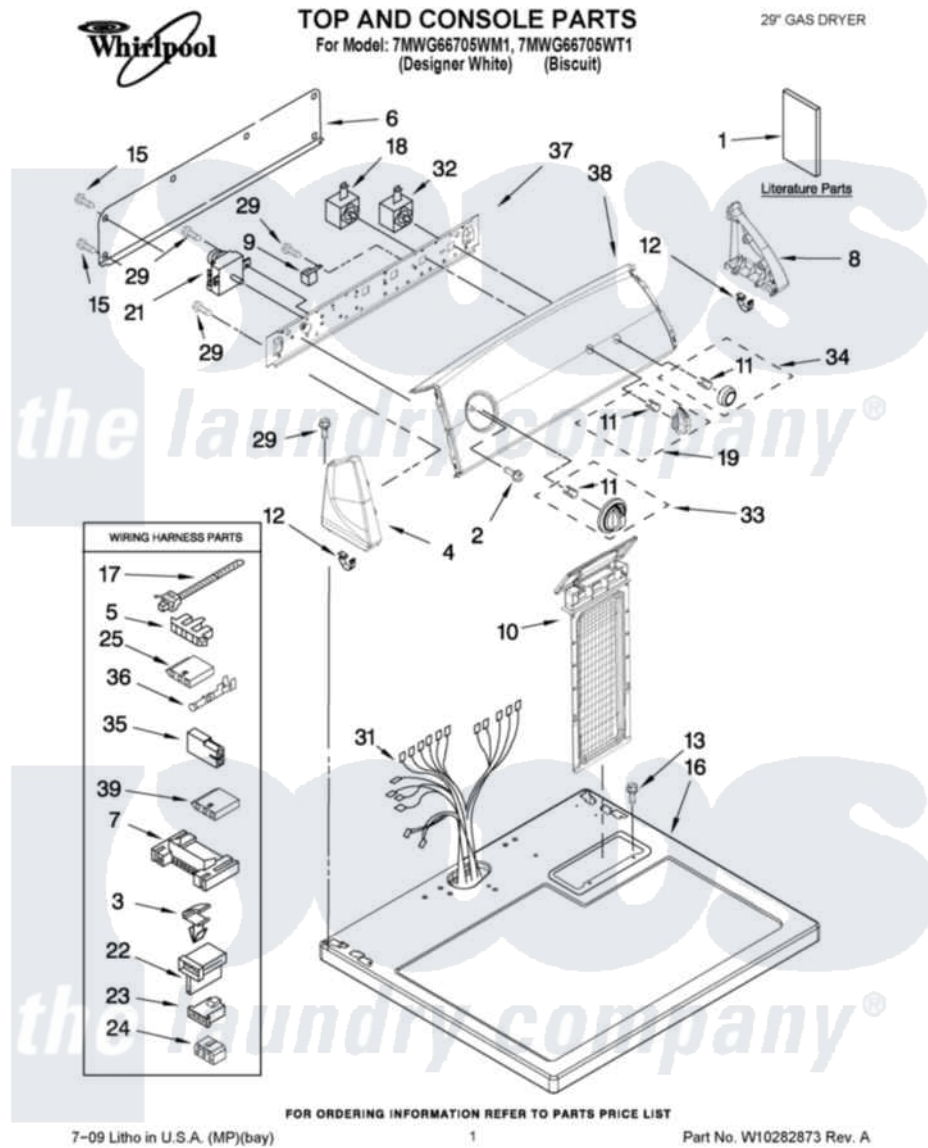

Whirlpool Residential Whirlpool 7MWG66705WT1 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8564241		Not Available	Instructions, Installation
"	W10245390		Not Available	Sheet, Cycle Feature
"	8565897		Not Available	Use And Care Guide
"	W10185985		Not Available	Wiring Diagram
2	8533951	3400859		Screw, Grounding
3	3394427			Clip-Harness
4	8566035	8565957		Cap, End
"	8566036	8565958		Cap, End
5	3397269			Connector, Timer
6	8274261			Do-It-Yourself Repair Manuals
7	3395683			Receptacle, Multi-Terminal
8	8566032	8565954		Cap, End
"	8566033	8565955		Cap, End
9	694419			Mini-Buzzer
10	8557857			Screen, Lint
"	8557858			Screen, Lint

11	8536939		Clip, Knob
12	8312709		Clip-Console
13	688983	487240	Screw, For Mtg. Service Capacitor
15	693995		Screw, Hex Head
16	8559800	8563663	Top
17	8563660	8563664	Top
"	3391249		Cable Tie, Push Mount
18	3399639		Switch, Rotary Temperature
19	8565944		Knob, Control
"	8565947		Knob, Control
21	W10185981		Timer Assembly
22	3403499		Connector, 2-Position
23	3403498		Connector, 3-Position
24	3347243		Block, Disconnect
25	3401144		Connector
29	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
31	W10186122		Harness, Wiring
32	3398095		Switch, Push-To-Start
33	8566061		Timer Knob Assembly
"	8566064		Timer Knob Assembly
34	8566073		Knob, Push-To-Start
"	8566076		Knob, Push-To-Start
35	717252		Receptacle, Terminal
36	94614		Terminal
37	8566052		Bracket, Console
38	W10244060		Panel, Control
"	W10244061		Panel, Control
39	3936144		Do-It-Yourself Repair Manuals

