


Whirlpool 7MWG66740SG0 01 - TOP AND CONSOLE PARTS

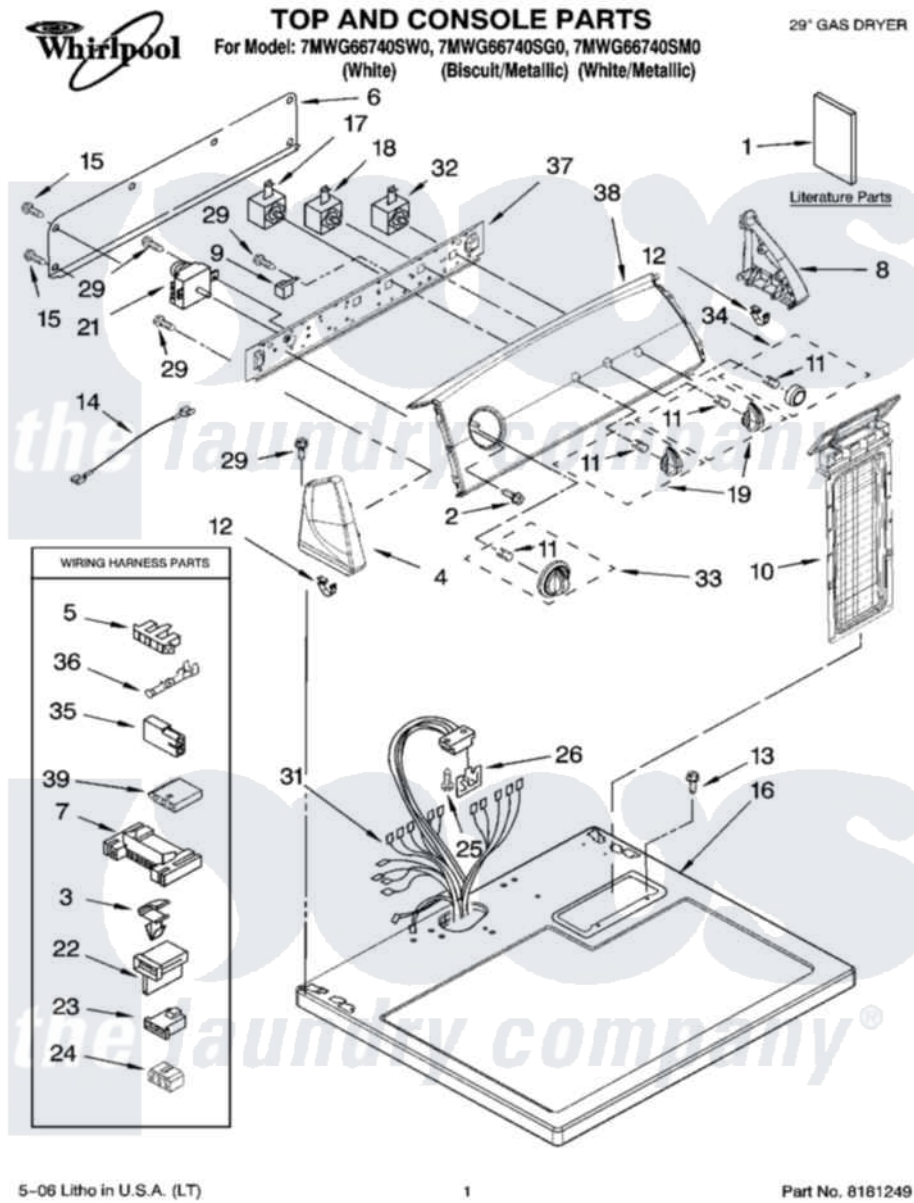

5-06 Litho in U.S.A. (LT)

1

Part No. 8161249

Whirlpool [Residential Whirlpool 7MWG66740SG0 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8564241		Not Available	Instructions, Installation
"	8579658		Not Available	Sheet, Cycle Feature
"	8565897		Not Available	Use And Care Guide
"	8533206		Not Available	Wiring Diagram
"	BLANK		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	8533951	3400859		Screw, Grounding
3	3394427			Clip-Harness
4	8565957			Cap, End
"	8565958			Cap, End
5	3397269			Connector, Timer
6	8274261			Do-It-Yourself Repair Manuals
7	3395683			Receptacle, Multi-Terminal
8	8565954			Cap, End

"	8565955		Cap, End
9	694419		Mini-Buzzer
10	8557857		Screen, Lint
"	8557858		Screen, Lint
11	8536939		Clip, Knob
12	8312709		Clip-Console
13	688983	487240	Screw, For Mtg. Service Capacitor
14	3401684		Jumper, Wire
15	693995		Screw, Hex Head
16	8559800	8563663	Top
"	8563660	8563664	Top
17	3405155		Switch, Temperature
18	3405154		Switch Rotary
19	8565944		Knob, Control
"	8565947		Knob, Control
21	3406725		Timer Assembly
22	3403499		Connector, 2-Postion
23	3403498		Connector, 3-Position
24	3347243		Block, Disconnect
25	359625	487240	Screw, For Mtg. Service Capacitor
26	8558178		Control, Electronic
29	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
31	8299891		Harness, Wiring
32	3398095		Switch, Push-To-Start
33	8566061		Timer Knob Assembly
"	8566064		Timer Knob Assembly
34	8566073		Knob, Push-To-Start
"	8566076		Knob, Push-To-Start
35	717252		Receptacle, Terminal
36	94614		Terminal
37	8566052		Bracket, Console
38	8543041		Panel, Control
"	8543042		Panel, Control
"	8543043		Panel, Control
39	3936144		Do-It-Yourself Repair Manuals

