


# Whirlpool 7MWG66740SW0 01 - TOP AND CONSOLE PARTS

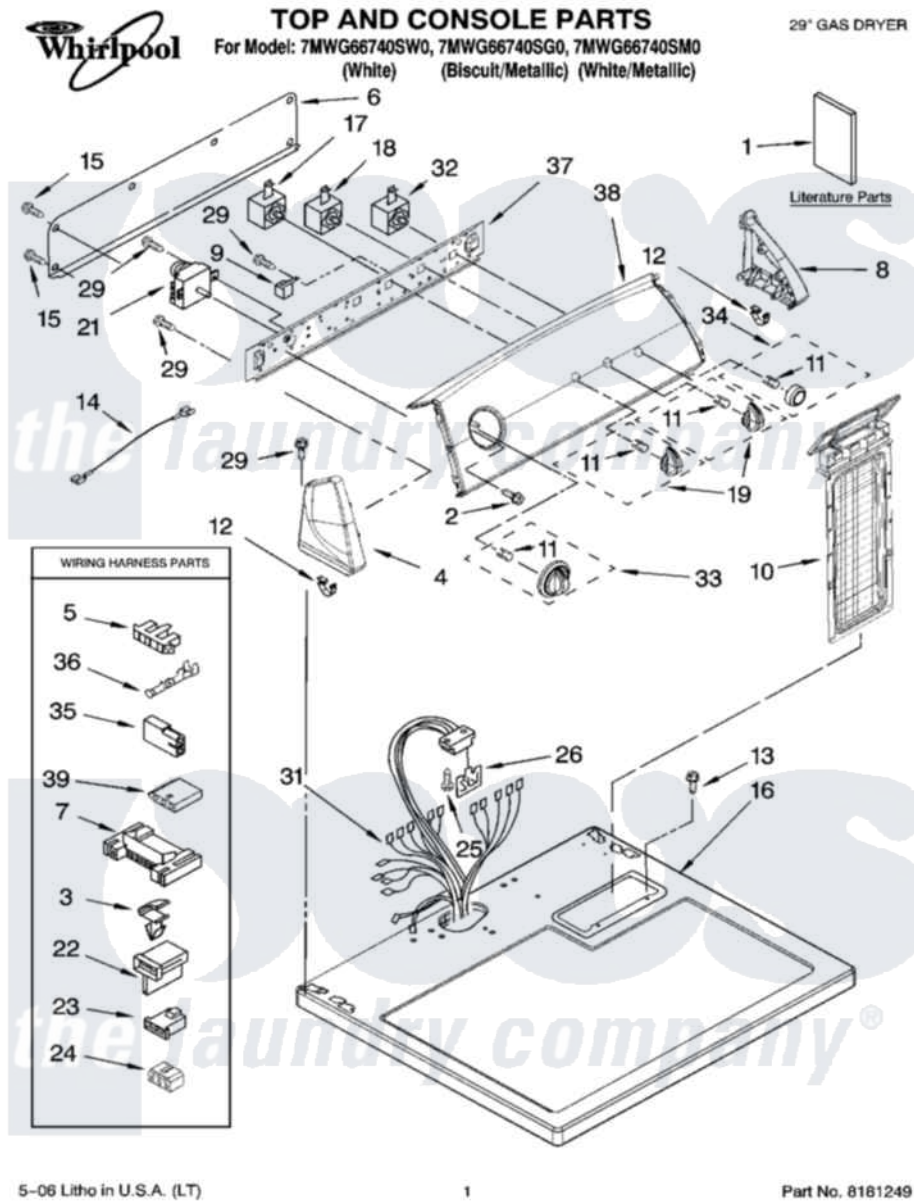

5-06 Litho in U.S.A. (LT)

1

Part No. 8161249

Whirlpool [Residential Whirlpool 7MWG66740SW0 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8564241		Not Available	Instructions, Installation
"	8579658		Not Available	Sheet, Cycle Feature
"	8565897		Not Available	Use And Care Guide
"	8533206		Not Available	Wiring Diagram
"	BLANK		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	8533951	<a href="#">3400859</a>		Screw, Grounding
3	<a href="#">3394427</a>			Clip-Harness
4	<a href="#">8565957</a>			Cap, End
"	<a href="#">8565958</a>			Cap, End
5	<a href="#">3397269</a>			Connector, Timer
6	<a href="#">8274261</a>			Do-It-Yourself Repair Manuals
7	<a href="#">3395683</a>			Receptacle, Multi-Terminal
8	<a href="#">8565954</a>			Cap, End

"	<a href="#">8565955</a>		Cap, End
9	<a href="#">694419</a>		Mini-Buzzer
10	<a href="#">8557857</a>		Screen, Lint
"	<a href="#">8557858</a>		Screen, Lint
11	<a href="#">8536939</a>		Clip, Knob
12	<a href="#">8312709</a>		Clip-Console
13	688983	<a href="#">487240</a>	Screw, For Mtg. Service Capacitor
14	<a href="#">3401684</a>		Jumper, Wire
15	<a href="#">693995</a>		Screw, Hex Head
16	8559800	<a href="#">8563663</a>	Top
"	8563660	<a href="#">8563664</a>	Top
17	<a href="#">3405155</a>		Switch, Temperature
18	<a href="#">3405154</a>		Switch Rotary
19	<a href="#">8565944</a>		Knob, Control
"	<a href="#">8565947</a>		Knob, Control
21	<a href="#">3406725</a>		Timer Assembly
22	<a href="#">3403499</a>		Connector, 2-Postion
23	<a href="#">3403498</a>		Connector, 3-Position
24	<a href="#">3347243</a>		Block, Disconnect
25	359625	<a href="#">487240</a>	Screw, For Mtg. Service Capacitor
26	<a href="#">8558178</a>		Control, Electronic
29	8533971	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
31	<a href="#">8299891</a>		Harness, Wiring
32	<a href="#">3398095</a>		Switch, Push-To-Start
33	<a href="#">8566061</a>		Timer Knob Assembly
"	<a href="#">8566064</a>		Timer Knob Assembly
34	<a href="#">8566073</a>		Knob, Push-To-Start
"	<a href="#">8566076</a>		Knob, Push-To-Start
35	<a href="#">717252</a>		Receptacle, Terminal
36	<a href="#">94614</a>		Terminal
37	<a href="#">8566052</a>		Bracket, Console
38	<a href="#">8543041</a>		Panel, Control
"	<a href="#">8543042</a>		Panel, Control
"	<a href="#">8543043</a>		Panel, Control
39	<a href="#">3936144</a>		Do-It-Yourself Repair Manuals

