


Whirlpool 7MWGD8300SW1 02 - CABINET PARTS

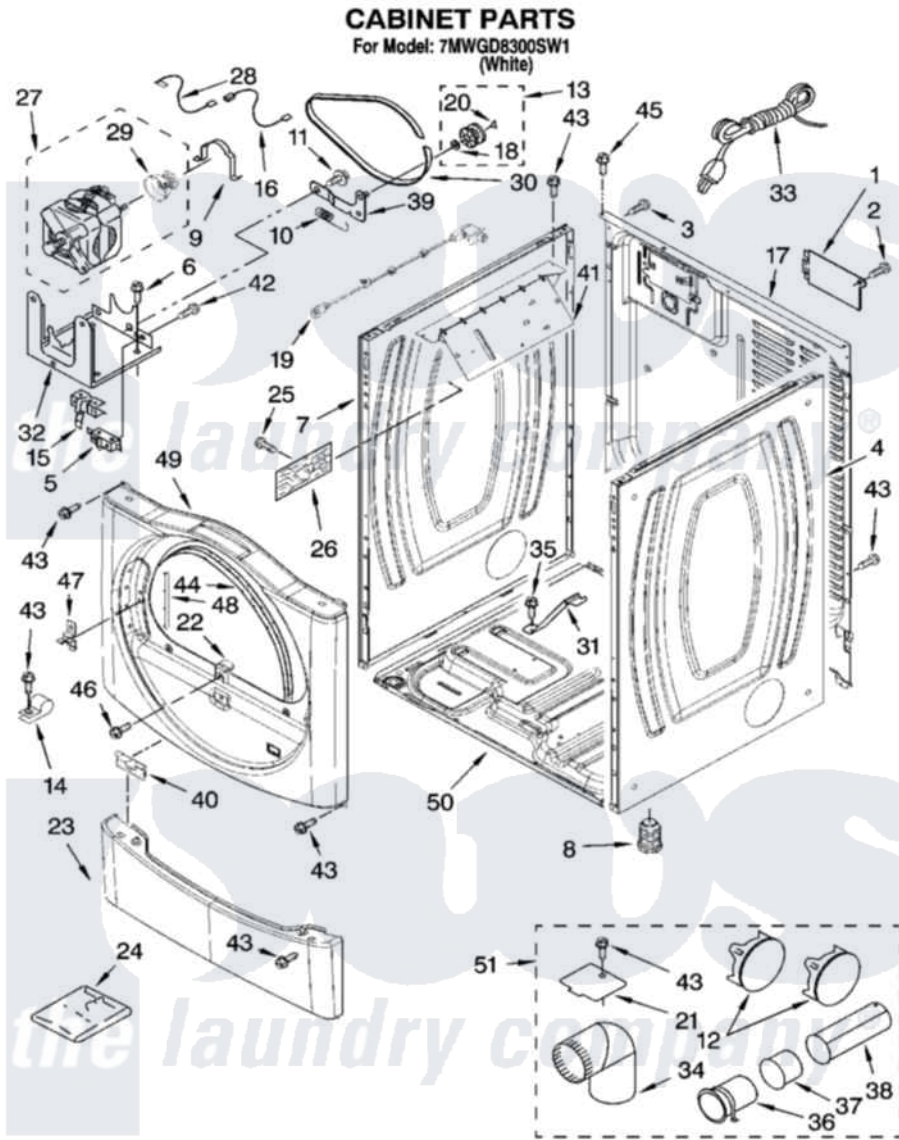

W10163446

3

Whirlpool [Residential Whirlpool 7MWGD8300SW1 Dryer Parts](#) Parts Diagram 02 - CABINET PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8317340			Cover, Terminal Block
2	3390814	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
3	8533974	4331106		Screw, No.10-32 X 7/16
4	8565048			Panel, Side
5	3394881	279782		Switch-Lid
6	343641	681414		Screw, 10AB X 1/2
7	8565054			Panel, Side
8	3392100	49621		Feet-Leveling
"	279810			Foot-Optional
9	660658			Clamp, Motor Mounting 343481 685441
10	3387374			Spring, Idler
11	3389420			Retainer-Idler 1/4-20 X 1/16
12	697750	W10470674		Dryer Exhaust Kit
13	3388672	279640		Pulley-Idr
14	3978776			Bracket, Gas Pipe Switch

15	8066120		Lever, Door Switch
16	3394081		Wire, Broken Belt Switch
17	8565059		Panel, Rear
18	233520		Washer, Thrust
19	8574875	W10318609	Switch, Assembly Door
20	W10121334		Washer, Thrust
21	8066115	3394331	Plate Cover
22	8580015		Ramp, Door
23	8540621		Panel, Toe
24	8572546		Odor Remover
25	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
26	W10111606		Board, Control
27	8538263	279787	Motor-Drive
28	3398948		Wire, Jumper
29	8578220		Pulley, Motor
30	3387610	661570	Belt
31	8529757		Bracket, Burner
32	3387118		Bracket, Motor
33	3401401	3401402	Cord, Power
34	49026		4" - 90° Elbow
35	693995		Screw, Hex Head
36	8563747		Exhaust Pipe Medium Pipe
37	8563750		Exhaust Pipe
38	8563749		Exhaust Pipe
39	3388674	W10118756	Idler Bracket
40	8519459		Clip, Toe Panel
41	8563727		Bracket, Control
42	98129		Screw, 6-20 X 1 1/16
43	3390647	488729	Screw
44	3387242		Seal, Front Panel
45	3393008	308685	Side Trim)
46	3357011	308685	Side Trim)
47	8565122		Strike, Door
48	8565043		Plug, Strip Front Panel
49	8580257		Front Panel
50	8565046		(BROKEN BELT BASE, CABINET SWITCH)
"	BLANK	Not Available	Optional Parts Not Included
51	279818	W10470674	Dryer Exhaust Kit