


Whirlpool 7MWGD9150XW0 02 - CABINET PARTS

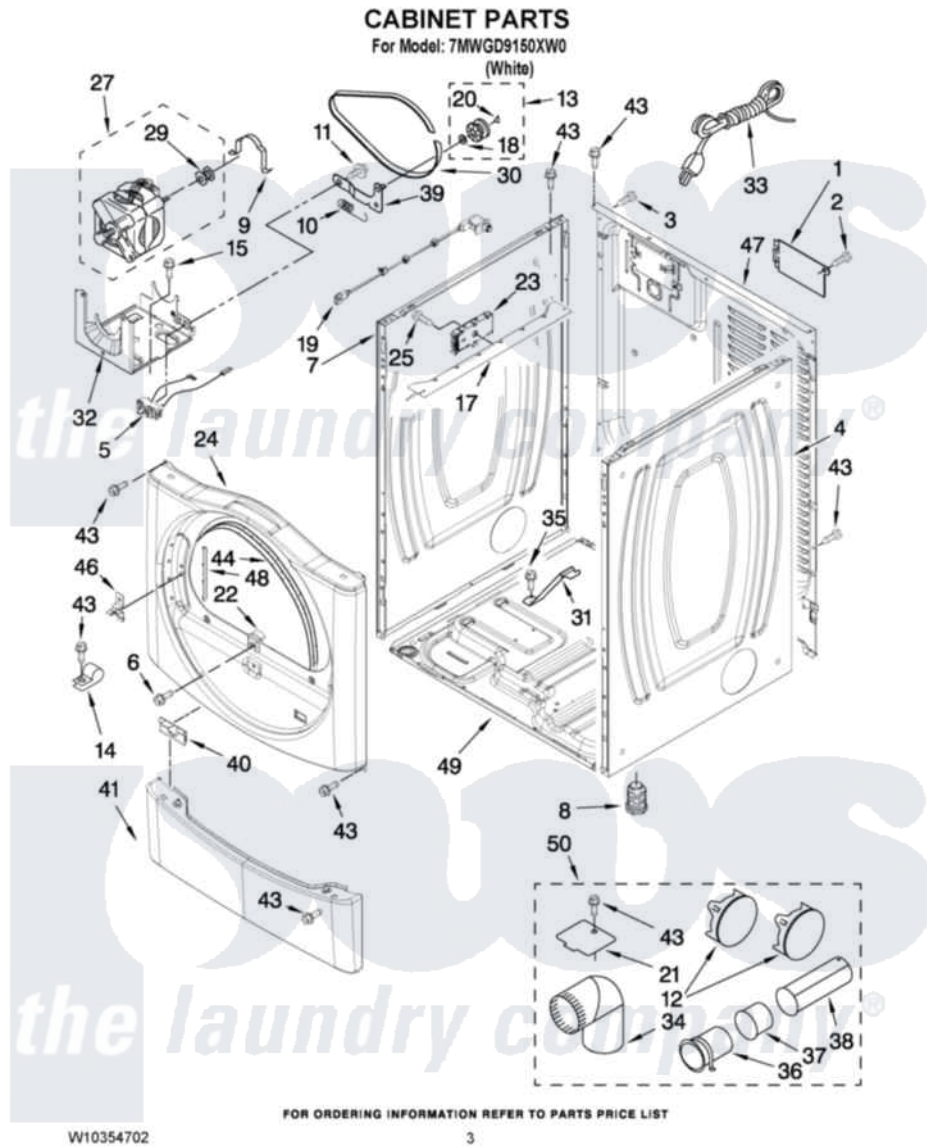

Whirlpool Residential Whirlpool 7MWGD9150XW0 Dryer Parts Parts Diagram 02 - CABINET PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8317340			Cover, Terminal Block
2	3390814	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
3	8533974	4331106		Screw, No.10-32 X 7/16
4	8565048			Panel, Side
5	W10246525	W10314253		Switch, Assembly Broken Belt
6	3357011	308685		Side Trim)
7	8565054			Panel, Side
8	3392100	49621		Feet-Leveling
NI	279810			Foot-Optional
9	660658			Clamp, Motor Mounting 343481 685441
10	3387374			Spring, Idler
11	3389420			Retainer-Idler 1/4-20 X 1/16
12	49252			Plug, Multivent
13	3388672	279640		Pulley-ldr
14	3978776			Bracket, Gas Pipe Switch

15	343641	681414	Screw, 10AB X 1/2
17	8563727		Bracket, Control
18	W10121334		Washer, Thrust
19	W10318609		Switch, Assembly Door
20	690997		Washer, Thrust
21	8066115	3394331	Plate Cover
22	8580015		Ramp, Door
23	W10235613		Board, Control
24	8580257		Front Panel
25	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
27	8538263	279787	Motor-Drive
29	8578220		Pulley, Motor
30	3387610	661570	Belt
31	8529757		Bracket, Burner
32	W10242878		Bracket, Motor Mounting
33	3401401	3401402	Cord, Power
34	49026		4" - 90° Elbow
35	693995		Screw, Hex Head
36	3395532		Exhaust Pipe And Bracket
37	3395534		Exhaust Pipe
38	3395535	8563749	Exhaust Pipe
39	3388674	W10118756	Idler Bracket
40	8519459		Clip, Toe Panel
41	8540621		Panel, Toe
43	3390647	488729	Screw
44	3387242		Seal, Front Panel
46	8565122		Strike, Door
47	8565059		Panel, Rear
48	W10085210		Label-Hinge Hole Cover Front Panel
49	8565046		(BROKEN BELT BASE, CABINET SWITCH)
50	W10331132		Dryer Exhaust Kit

