


Whirlpool 7MWGD9270XR0 01 - TOP AND CONSOLE PARTS

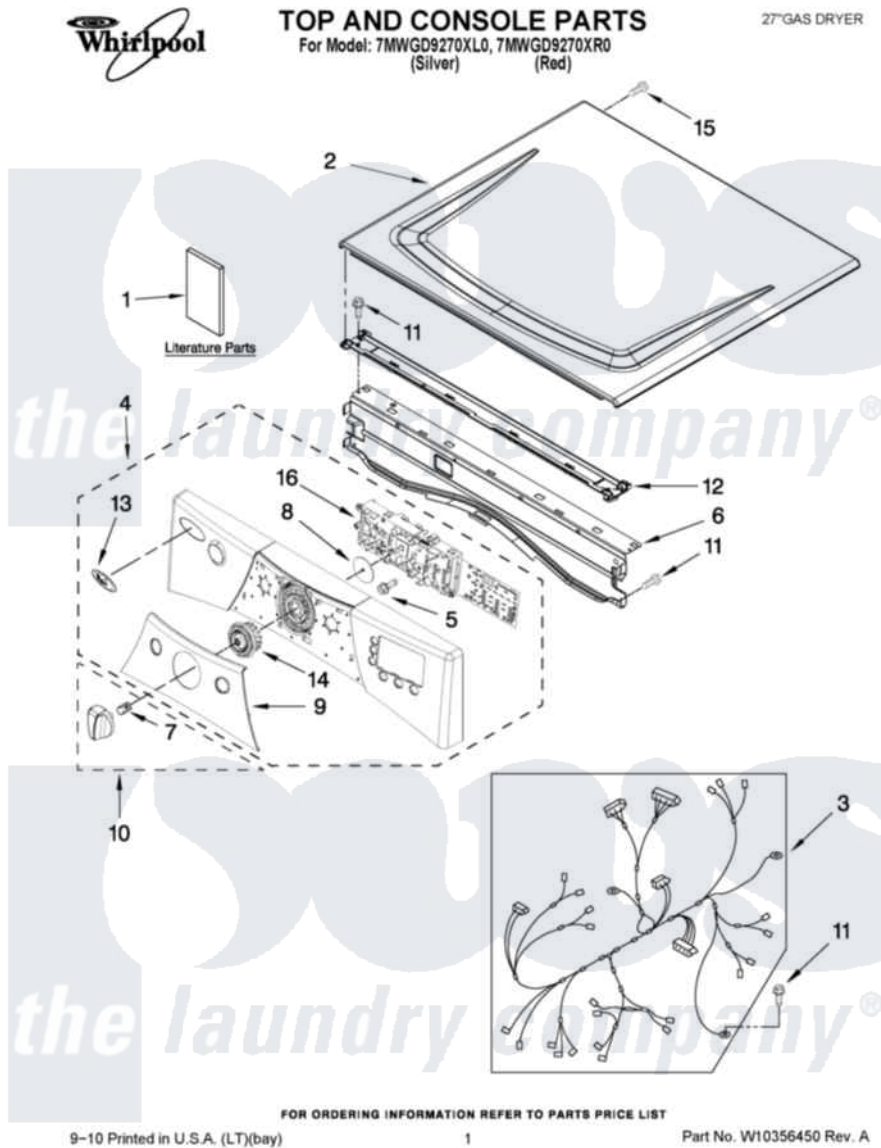

Whirlpool Residential Whirlpool 7MWGD9270XR0 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10339519		Not Available	USE & CARE GUIDE
"	W10294025		Not Available	TECH SHEET
2	W10251213			Top
"	W10251212	W10336090		Top
3	W10278758			Harness, Main
4	W10215464			Panel, Console
"	W10215463			Panel, Console
5	W10006580			Screw, M3-1.12 X12 Pn 6l Spl
6	8565237			Bracket, Console
7	W10153920			Spring, Knob
8	8572039			Seal, User Interface
9	W10215468			Cover, Center
"	W10215469			Cover, Center
10	W10247262			Knob Assembly
11	3390647	488729		Screw
12	W10266747			Channel-Water, Dryer

13	W10117943	8303811	Badge, Assembly
14	W10237301		Cycle, Light Guide
15	3400238		Screw, 2-28 X 1/2
16	W10215460	W10418068	Control-Elec

