


Whirlpool 7MWS89700SM0 03 - AGITATOR, BASKET AND TUB PARTS

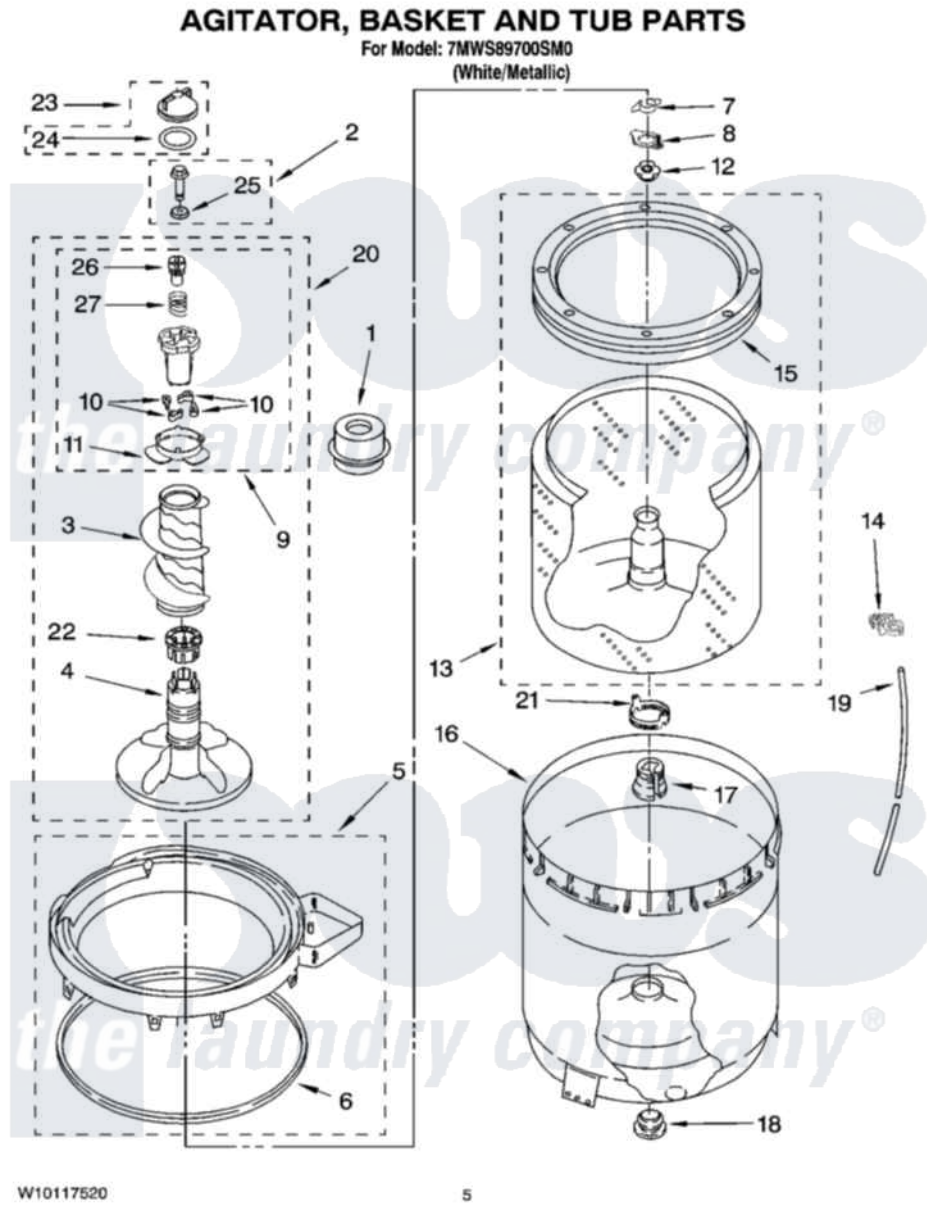

W10117520

5

Whirlpool [Residential Whirlpool 7MWS89700SM0 Washer Parts](#) Parts Diagram 03 - AGITATOR, BASKET AND TUB PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	8580006			Dispenser, Fabric Softener
2	358237			Screw And Washer
3	8054468			Auger, Agitator
4	8578209			Agitator, Complete Assembly
5	8528150	W10445870		Ring-Tub
6	3976308			Gasket, Tub Ring
7	3354845			Clip, Agitator
8	8543666			Washer, Agitator
9	8537434			Cam, Driven
10	3366877	80040		Dog-Agitator
11	8055141			Bearing-Driven Cam
12	21366			Nut, Spanner
13	8526016	W10389328		Clothes Container, Assembly
14	2219077			Clip, Pressure Switch Hose
15	8519788	387240		Ring, Balance
16	63849			Strain Relief, Power Cord

17	389140		Tub Block, Basket Drive
18	383727		Gasket, Centerpod
19	3347780	353244	Hose, Pressure Switch
20	8578210		Agitator, Complete Assembly
21	8577198		Filter, Lint
22	8055228		Spacer, Thrust
23	3354733	W10074580	Cap, Barrier
24	3348855	W10072840	Fabric Softener
25	3949550		Washer
26	8533540		Retainer, Spring
27	8055140		Spring, Compression

Howes
the laundry company®

Howes
the laundry company®

Howes
the laundry company®