


Whirlpool 7MWT96680TQ0 02 - CONTROLS AND REAR PANEL PARTS

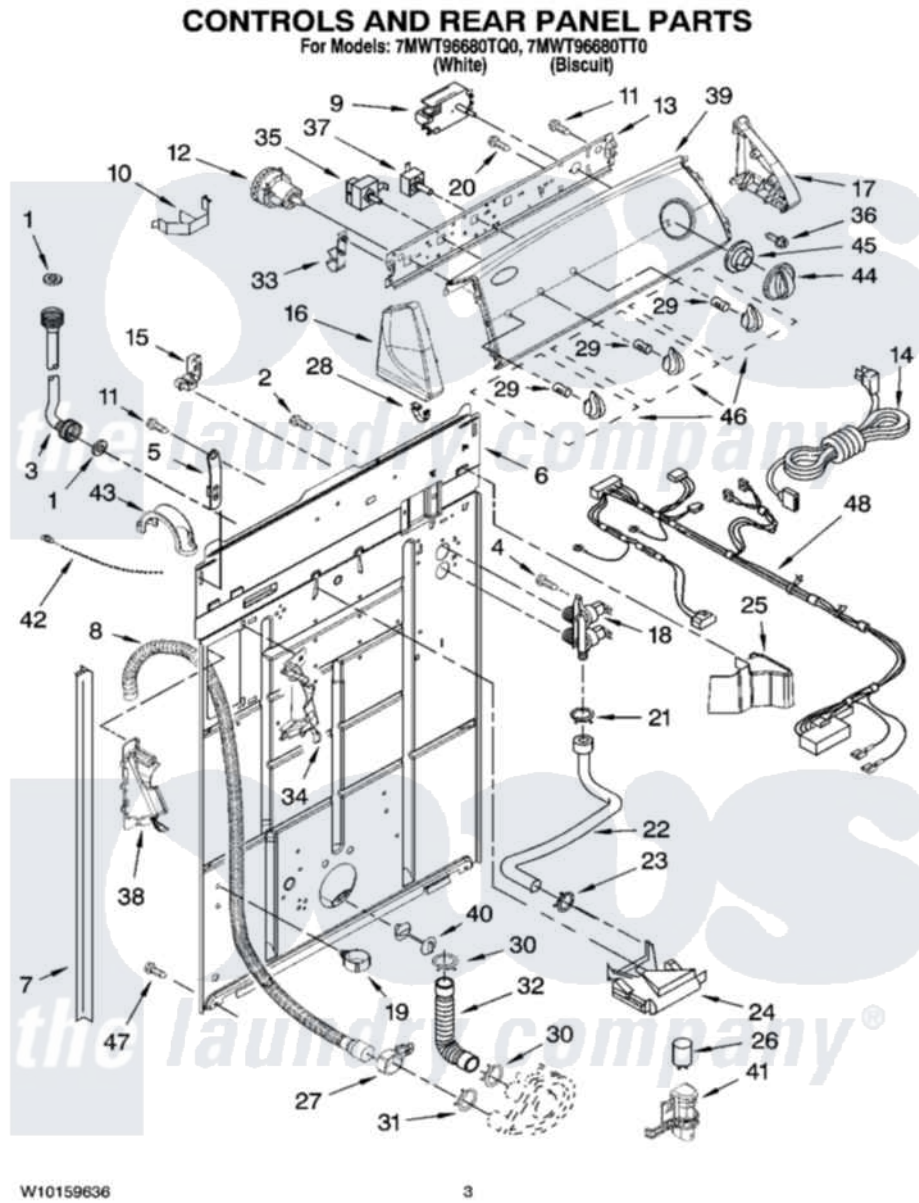

Whirlpool [Residential Whirlpool 7MWT96680TQ0 Washer Parts](#) Parts Diagram 02 - CONTROLS AND REAR PANEL PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	3976300	16123		Washer Inlet-Hose Miscellaneous Parts Must be Ordered Separately.
2	3351614			Screw, Gearcase Cover Mounting
3	8571377	89503		Hose-Inlet
"	8571378	89503		Hose-Inlet
4	9740848			Screw, Mixing Valve Mounting
5	8568314			Strap, Console
6	8318015			Panel, Rear
7	62747			Pad, Rear Panel
8	W10122138	W10096921		Drain Hose Assembly
9	3949208			Timer, Control
10	8055003			Clip, Harness And Pressure Switch
11	90767			Screw, 8A X 3/8 HeX Washer Head Tapping
12	3366847	W10337780		Switch-WL

13	8566003		Bracket, Control
14	W10115689		Cord, Power
15	3952821	285777	Relief-Str
16	8565957		Cap, End
"	8565958		Cap, End
17	8565954		Cap, End
"	8565955		Cap, End
18	3952164	285805	Valve-Inlet
19	8541667		Clamp, Hose
20	3400073		Screw, Ground
21	301958	596669	Clamp, Manifold
22	8541607	3357328	Hose, Vacuum Break
23	370450	596669	Clamp, Manifold
24	387606	3360977	Break-Vac
25	8314879		Shield, Inlet Valve
26	8572717		Capacitor, Motor Start
27	8541668		Clamp, Hose
28	8312709		Clip-Console
29	8536939		Clip, Knob
30	3363366	616099	Clamp
31	8317496	285655	Clamp, Hose
32	3951449	285871	Hose
33	8317975		Restraint, Harness
34	8541669		Bucket, Drain Hose
35	661612	W10168256	Switch, Water Temperature
36	3400818		Screw, Timer Mounting
37	3949187	W10168262	Switch, Rotary
38	8541658		Bucket, Drain Hose
39	8543015		Panel, Console
"	8543016		Panel, Console
40	8519200		Support, Rear Panel
41	8318046		Clip, Capacitor
42	3347868	W10339879	Tie, Cable
43	8577378		U-Bend, Drain Hose
44	8566022		Knob, Timer
"	8566025		Knob, Timer
45	8566018		Dial,
46	8565944		Knob, Control
"	8565947		Knob, Control
47	62863	3390631	Screw, 10-16 X 3/8
48	3956729		Harness, Wiring

the laundry company[®]