


Whirlpool 7MWT97940SB0 03 - AGITATOR, BASKET AND TUB PARTS

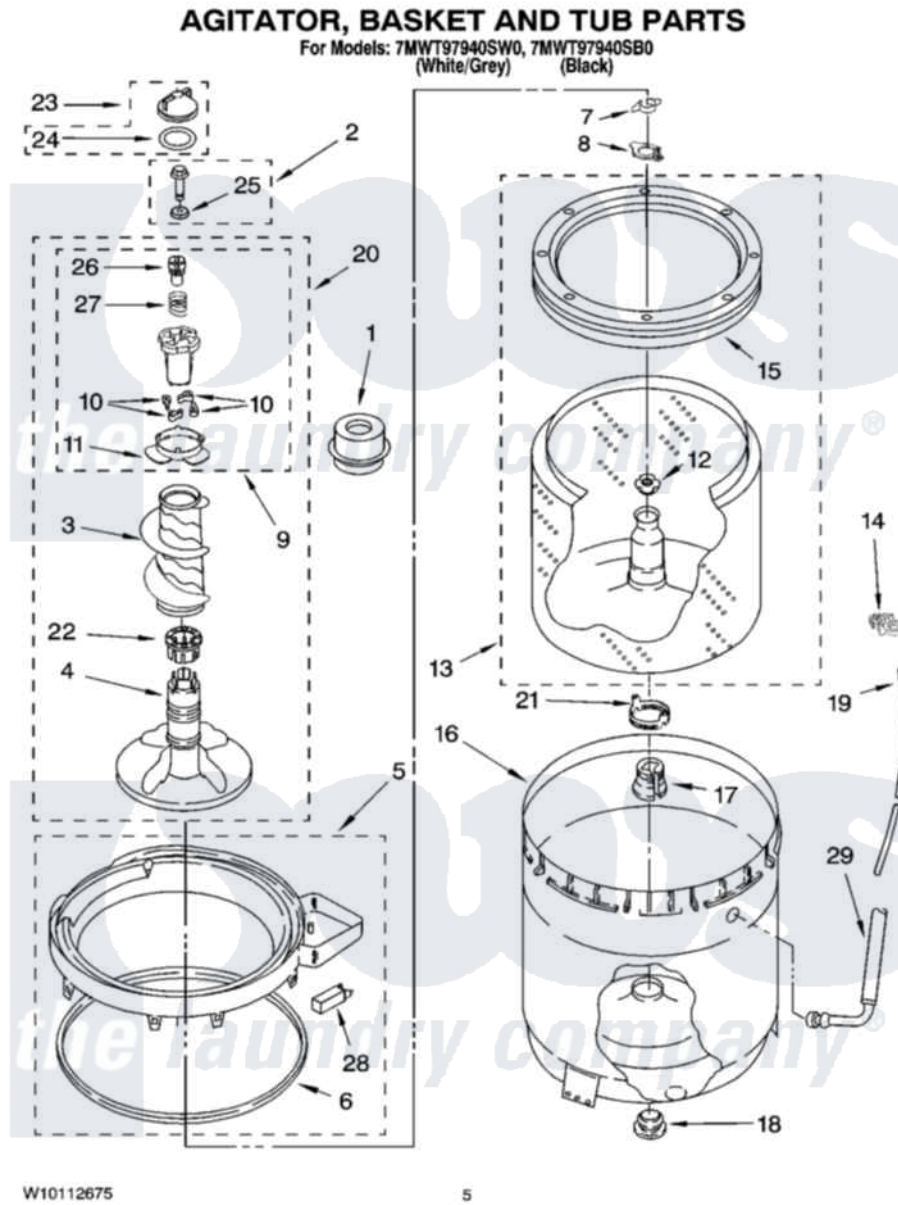

W10112675

5

Whirlpool Residential Whirlpool 7MWT97940SB0 Washer Parts Parts Diagram 03 - AGITATOR, BASKET AND TUB PARTS

Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8580006			Dispenser, Fabric Softener
2	358237			Screw And Washer
3	8054468			Auger, Agitator
4	8578209			Agitator, Complete Assembly
5	3954507	W10213410		Ring-Tub
6	3359585	3976308		Gasket, Tub Ring
7	3354845			Clip, Agitator
8	8543666			Washer, Agitator
9	8537434			Cam, Driven
10	3366877	80040		Dog-Agitator
11	8055141			Bearing-Driven Cam
12	21366			Nut, Spanner
13	8526016	W10389328		Clothes Container, Assembly
14	2219077			Clip, Pressure Switch Hose
15	8519788	387240		Ring, Balance
16	8283125			Tub

17	389140		Tub Block, Basket Drive
18	383727		Gasket, Centerpod
19	3347780	353244	Hose, Pressure Switch
20	8578210		Agitator, Complete Assembly
21	8577198		Filter, Lint
22	8055228		Spacer, Thrust
23	3354733	W10074580	Cap, Barrier
24	3348855	W10072840	Fabric Softener
25	3949550		Washer
26	8533540		Retainer, Spring
27	8055140		Spring, Compression
28	8318246	W10213410	Ring-Tub
29	3948705		Hose, Bleach

the laundry company[®]

the laundry company[®]

the laundry company[®]