


Whirlpool 8TL6132LT0 02 - CONTROLS AND REAR PANEL PARTS

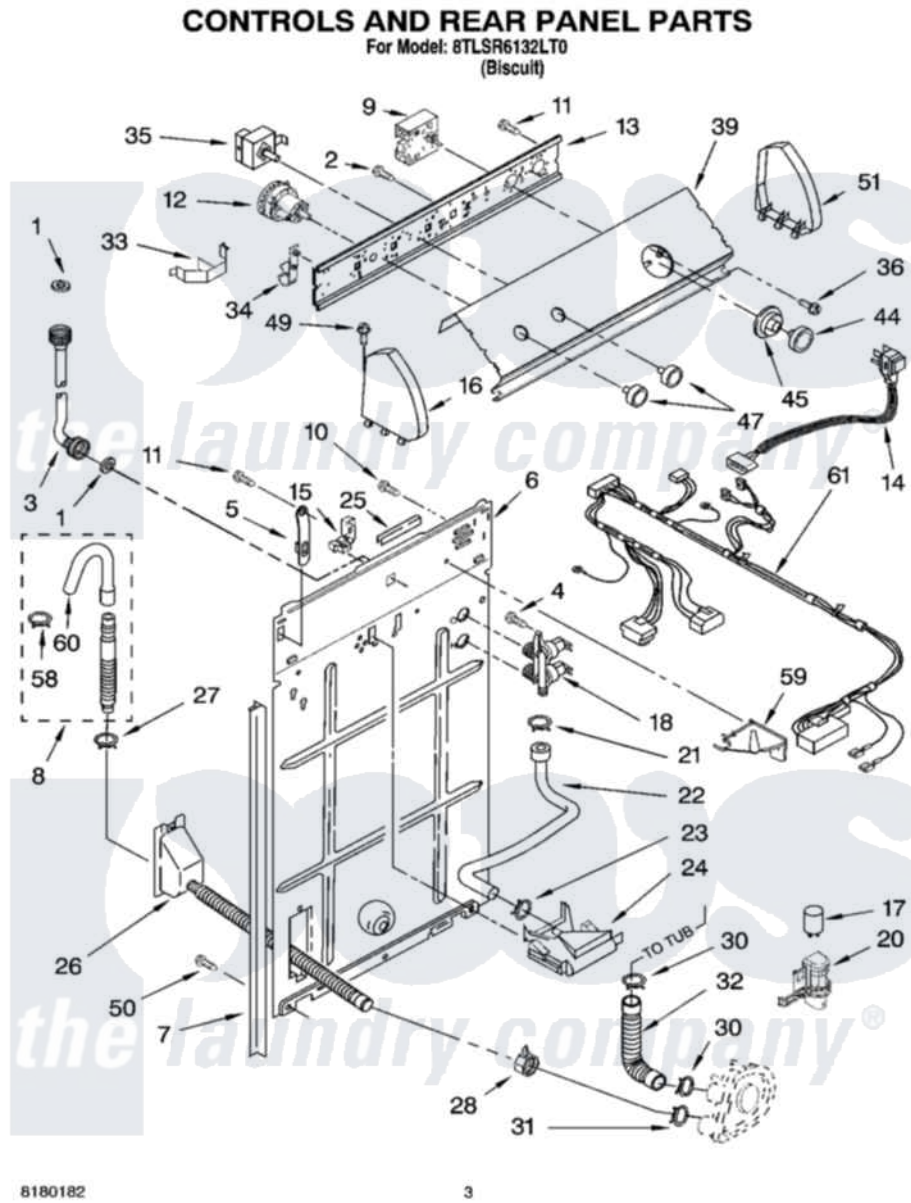

Whirlpool [Residential Whirlpool 8TL6132LT0 Washer Parts](#) Parts Diagram 02 - CONTROLS AND REAR PANEL PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	16123			Washer Inlet-Hose Miscellaneous Parts Must be Ordered Separately.
2	3179795			Screw, Ground
3	3949374	89503		Hose-Inlet
"	3949375	89503		Hose-Inlet
4	9740848			Screw, Mixing Valve Mounting
5	8318255	8568314		Strap, Console
6	8318405			Panel, Rear
7	62747			Pad, Rear Panel
8	3951609	285664		Hose
"	661577	285666		Hose
"	3357090	285702		Hose
9	8541393			Timer, Control
10	3351614			Screw, Gearcase Cover Mounting
11	00767			Screw, 8A X 3/8 HeX Washer

11	30707		Head Tapping
12	3366849	W10339228	Switch-WL
13	3948608		Bracket, Control
14	8532158	W10130795	Cord-Power
15	3949468	285777	Relief-Str
16	8271368	279965	Endcap
17	661606	8572717	Capacitor, Motor Start
18	3952164	285805	Valve-Inlet
20	8318046		Clip, Capacitor
21	301958	596669	Clamp, Manifold
22	8541607	3357328	Hose, Vacuum Break
23	370450	596669	Clamp, Manifold
24	387606	3360977	Break-Vac
25	303294	3367669	Protector, Edge
26	8317940	W10358149	Drain Hose Assembly
27	3366912	356138	Clamp, Hose
28	3976395		Restraint, Hose
30	3363366	616099	Clamp
31	8317496	285655	Clamp, Hose
32	3951449	285871	Hose
33	8055003		Clip, Harness And Pressure Switch
34	8317975		Restraint, Harness
35	661612	W10168256	Switch, Water Temperature
36	3400818		Screw, Timer Mounting
39	8539606		Panel, Console
44	8271347	3957822	Knob, Timer
45	8271370	3957850	Dial, Timer
47	8271348	3957797	Knob, Push-To-Start
49	388326		Screw, 8-18 X 1.25
50	62863	3390631	Screw, 10-16 X 3/8
51	8271362	279965	Endcap
58	3366913	3357331	Clamp, Drain
59	8539874		Shield, Suds
60	3357027		Nozzle, Hose Drain
61	3956877		Wiring Harness

