


Whirlpool BYCWD6274W3 01 - WASHER/DRYER CONTROL PANEL PARTS

WASHER/DRYER CONTROL PANEL PARTS

For Model: BYCWD6274W3
(Designer White)

WASHER/DRYER

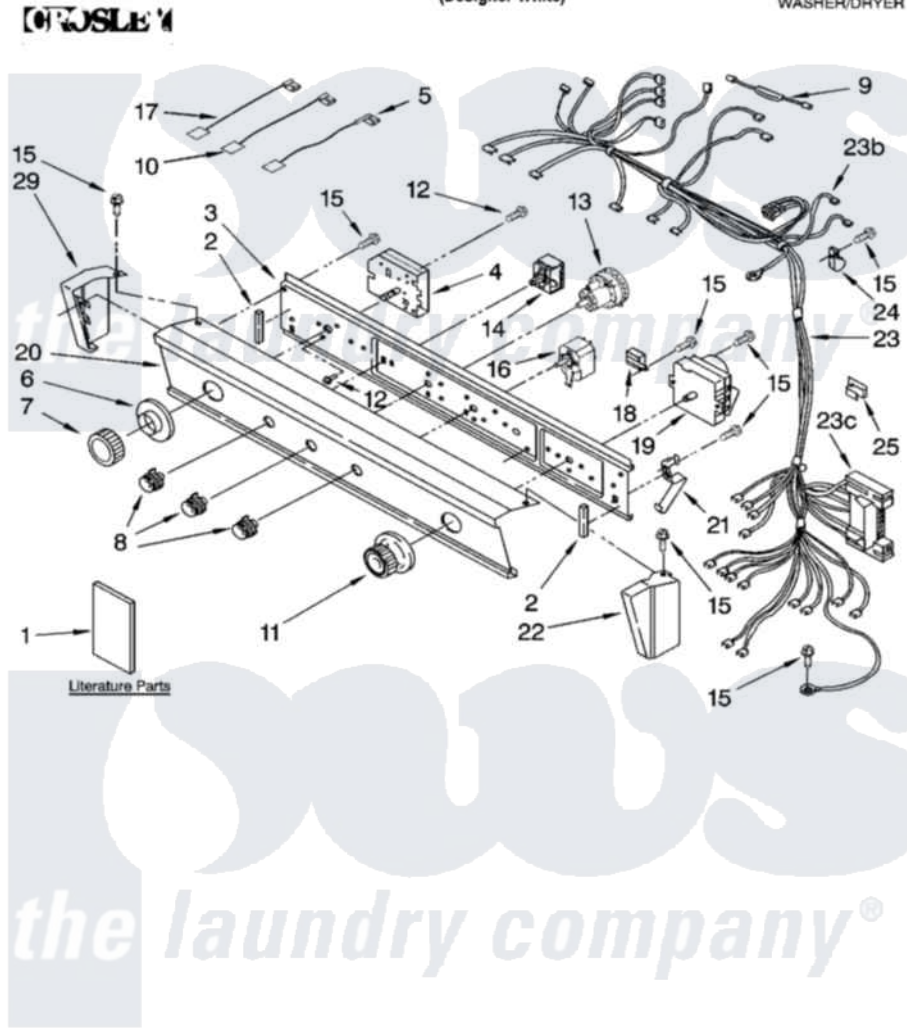

11-03 Litho in U.S.A. (djc)

1

Part No. 8180165

Whirlpool [Residential Whirlpool BYCWD6274W3 Washer/Dryer Parts](#) Parts Diagram 01 - WASHER/DRYER CONTROL PANEL PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	LIT8542746		Not Available	Literature Parts (Installation Instructions (English))
"	LIT8546451		Not Available	Literature Parts (Use & Care Guide)
"	LIT8546674		Not Available	Literature Parts (Wiring Diagram)
"	LIT3956354		Not Available	Literature Parts (Energy Guide)
"	LIT8546452		Not Available	Literature Parts (Sheet, Cycle Feature)
2	3390688			Spacer- Foam Pad
3	8528583			Bracket, Control
4	3948357			Timer, Washer
5	3401674			Wire, Jumper
6	3403097	3957845		Dial,
7	3364291			Knob, Timer
8	3950759	3957796		Knob, Control

9	3401078	279872	Resistor
10	3401684		Jumper, Wire
11	3406146	3957750	Knob, Timer
12	3400064		Screw, Timer Mounting
13	8546175	W10311356	Switch-WL
14	3405157		Switch, Temperature
15	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
16	3404233		Switch, Push-To-Start
17	3393810		Jumper Wire
18	694419		Mini-Buzzer
19	3976569		Timer, Dryer
20	3406827		Panel, Control
21	3389453		Bracket, Hinge
22	3389456		End Cap
23	8299835	8576535	Harns-Wire
"	2154470		Receptacle,
"	3395683		Receptacle, Multi-Terminal
24	3390604		Clamp, Harness
25	3390422	W10134185	Clip, Harness
29	3389464		End Cap

