


# Whirlpool BYCWD6274W3 05 - DRYER SUPPORT AND WASHER HARNESS PARTS

## DRYER SUPPORT AND WASHER HARNESS PARTS

For Model: BYCWD6274W3  
(Designer White)

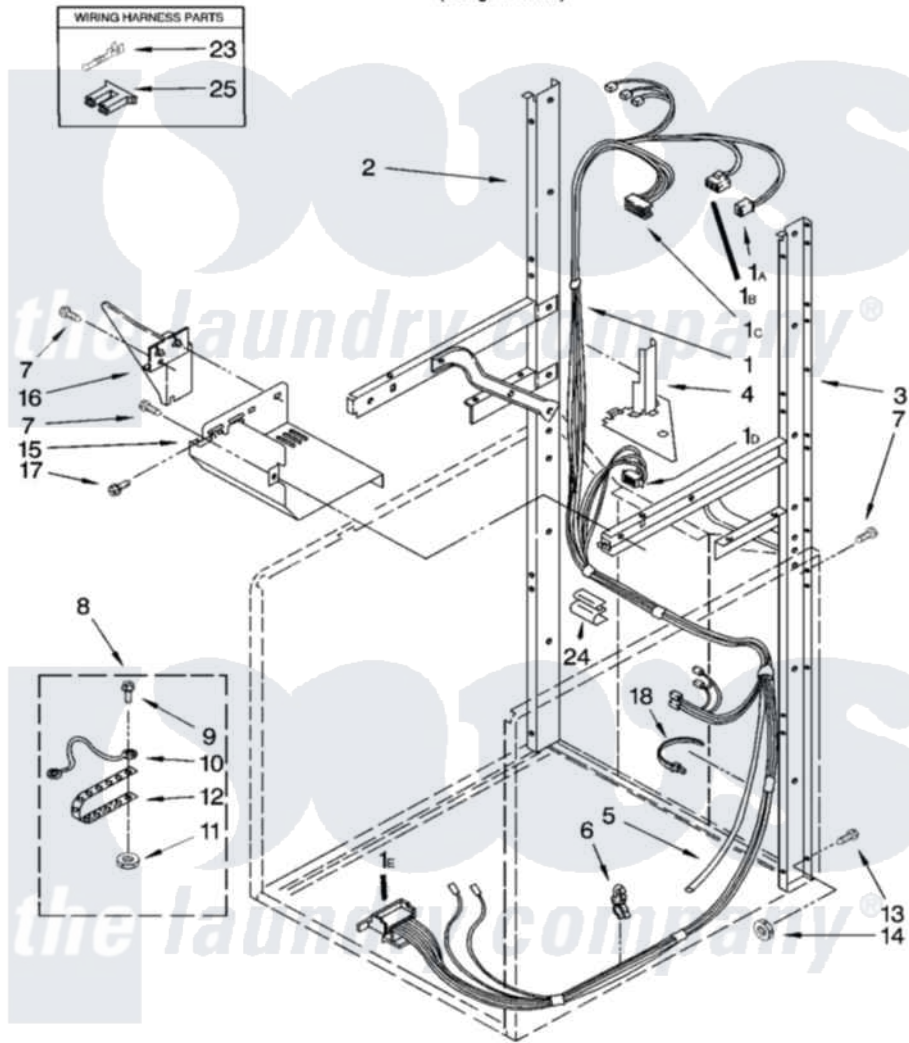

8180165

7

Whirlpool [Residential Whirlpool BYCWD6274W3 Washer/Dryer Parts](#) Parts Diagram 05 - DRYER SUPPORT AND WASHER HARNESS PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">8299848</a>			Harness - Washer 1a 3350130 Plug, 3 Way 1B 3347243 Connector, 5 Way 1C 352089 Block, Disconnect - Timer 1D 3350211 Receptacle
2	<a href="#">3388851</a>			Channel Assembly
"	BLANK		Not Available	(Left Hand Side)
3	<a href="#">3388850</a>			Channel Assembly
"	BLANK		Not Available	(Right Hand Side)
4	<a href="#">3390609</a>			Shield, Harness
5	<a href="#">8545438</a>			Hose, Pressure Switch
6	<a href="#">8281256</a>			Clip, Harness
7	343641	<a href="#">681414</a>		Screw, 10AB X 1/2
8	<a href="#">685463</a>			Kit, Grounding Plug, Dryer Side Panel
9	<a href="#">3400036</a>			Screw, 10-24 X 1
10	<a href="#">685449</a>			Wire, Ground

11	3400902	<a href="#">680762</a>	Nut
12	<a href="#">22965</a>		Strap, Grounding
13	3400300	<a href="#">Y015627</a>	Screw- Hex
14	3393930	<a href="#">4342911</a>	Nut
15	<a href="#">3394350</a>		Shield, Front
16	<a href="#">3390336</a>		Shield, Thermostat
17	3393008	<a href="#">308685</a>	Side Trim )
18	<a href="#">3391249</a>		Cable Tie, Push Mount
23	<a href="#">94614</a>		Terminal
24	<a href="#">63523</a>		Harness, Protector
25	<a href="#">3354925</a>		Block, Connector

