


# Whirlpool BYCWD6274W3 09 - MACHINE BASE PARTS

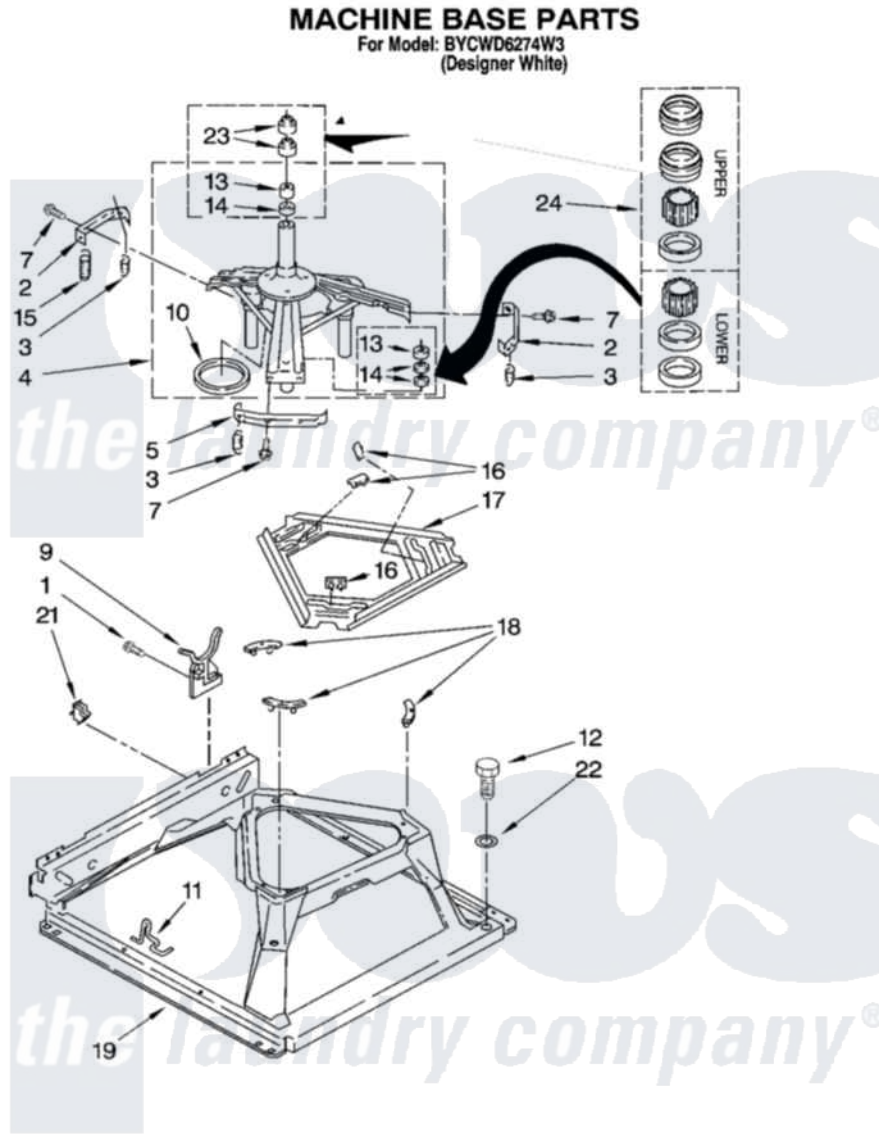

14

8180165

Whirlpool Residential Whirlpool BYCWD6274W3 Washer/Dryer Parts Parts Diagram 09 - MACHINE BASE PARTS  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	343641	<a href="#">681414</a>		Screw, 10AB X 1/2
2	<a href="#">64067</a>			Bracket, Spring Outer
3	<a href="#">63907</a>			Spring, Suspension
4	3362087	<a href="#">280184</a>		Support
5	<a href="#">64065</a>			Bracket, Spring Outer
7	<a href="#">3400076</a>			Screw, Bracket Mounting
9	<a href="#">3350506</a>			Retainer, Hose
10	<a href="#">63134</a>			Ring, Sound Deadening
11	63806	<a href="#">W10145155</a>		Retainer, Suspension Spring
12	<a href="#">3400501</a>			Screw, 5/16-18 X 1 3/32
13	3347047	<a href="#">8546455</a>		Bearing, Centerpost
14	357409	<a href="#">359449</a>		Seal, Agitator Shaft
15	388492	<a href="#">W10250667</a>		Spring, Counterweight
16	62568	<a href="#">285219</a>		Pad
17	<a href="#">3946509</a>			Plate, Suspension
18	3363660	<a href="#">285744</a>		Pad

19	<a href="#">3349343</a>		Base Assembly
21	<a href="#">3349749</a>		Restrainer, Base
22	<a href="#">3349340</a>		Washer
23	356934	<a href="#">8577376</a>	Seal, Centerpost
24	<a href="#">285203</a>		Centerpost Bearing Kit

