


Whirlpool BYCWD6274W4 01 - WASHER/DRYER CONTROL PANEL PARTS

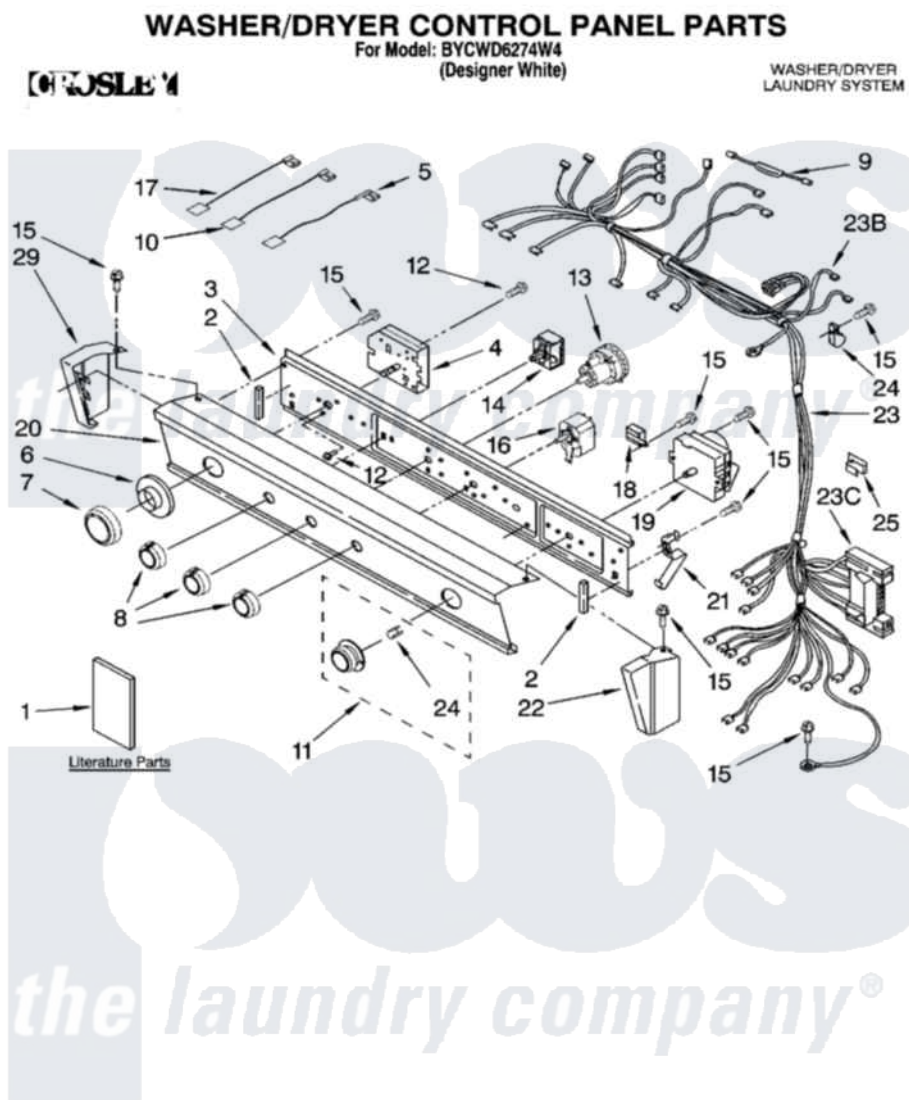

10-05 Litho in U.S.A. (LT)

1

Part No. 8180861

Whirlpool [Residential Whirlpool BYCWD6274W4 Washer/Dryer Parts](#) Parts Diagram 01 - WASHER/DRYER CONTROL PANEL PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	8577199		Not Available	Installation Instructions (English)
"	8546451		Not Available	Use & Care Guide
"	8546674		Not Available	Wiring Diagram
"	8576494		Not Available	Energy Guide
"	8546452		Not Available	Sheet, Cycle Feature
2	3390688			Spacer- Foam Pad
3	8528583			Bracket, Control
4	3948357			Timer, Washer
5	3401674			Wire, Jumper
6	3957845			Dial,
7	3957825			Knob, Timer
8	3957796			Knob, Control
9	3401078	279872		Resistor
10	3401684			Jumper, Wire

11	3957750		Knob, Timer
12	3400064		Screw, Timer Mounting
13	8546175	W10311356	Switch-WL
14	3405157		Switch, Temperature
15	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
16	3404233		Switch, Push-To-Start
17	3393810		Jumper Wire
18	694419		Mini-Buzzer
19	3976569		Timer, Dryer
20	3406827		Panel, Control
21	3389453		Bracket, Hinge
22	3389456		End Cap
23	8299835	8576535	Harns-Wire
"	2154470		Receptacle,
"	3395683		Receptacle, Multi-Terminal
24	688805		Clip, Spring Knob
"	3390604		Clamp, Harness
25	3390422	W10134185	Clip, Harness
29	3389464		End Cap

