


Whirlpool BYCWD6274W4 05 - DRYER SUPPORT AND WASHER HARNESS PARTS

DRYER SUPPORT AND WASHER HARNESS PARTS

For Model: BYCWD6274W4
(Designer White)

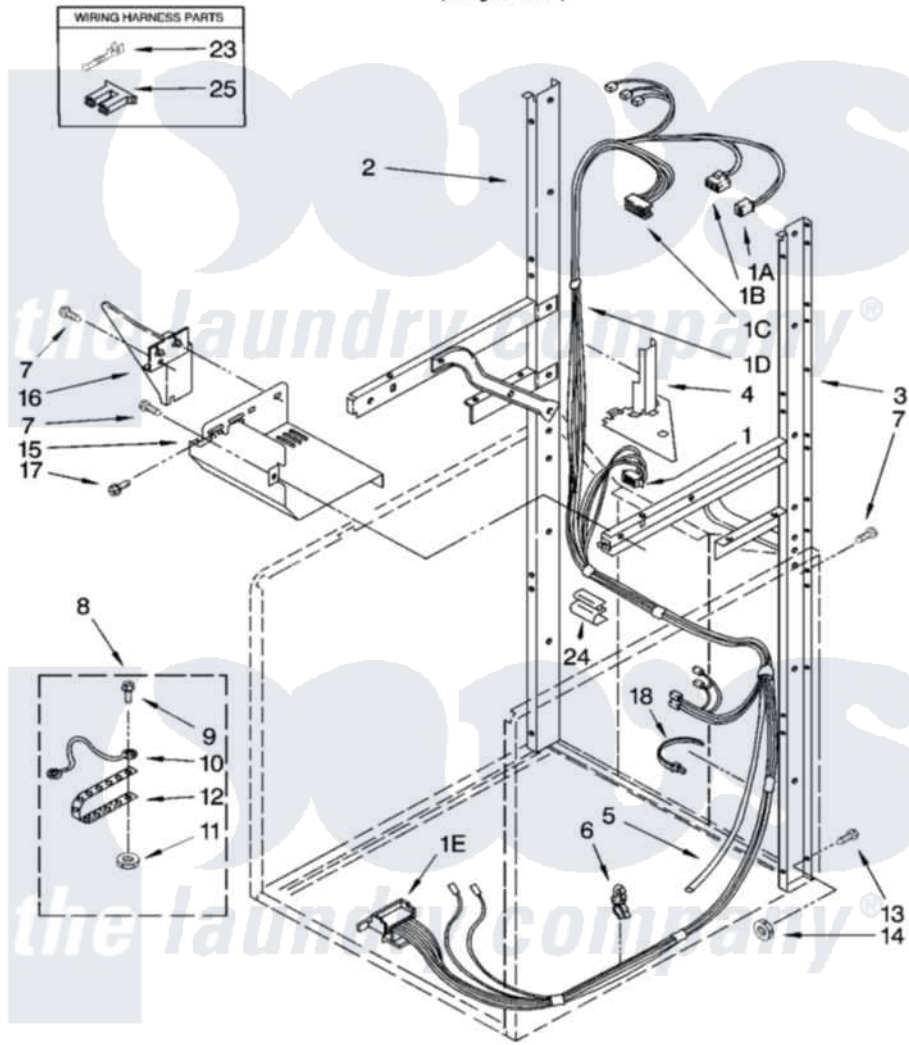

8180861

7

Whirlpool [Residential Whirlpool BYCWD6274W4 Washer/Dryer Parts](#) Parts Diagram 05 - DRYER SUPPORT AND WASHER HARNESS PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	8299848			Harness - Washer 1a 3350130 Plug, 3 Way 1B 3347243 Connector, 5 Way 1C 352089 Block, Disconnect - Timer 1D 3350211 Receptacle
"	3350130			Plug, Terminal
"	3347243			Block, Disconnect
"	352089			Timer, Block Disconnect
"	3350211		Not Available	Receptacle, 3 Way
"	62505			Block, Disconnect
2	3388851			Channel Assembly
"	BLANK		Not Available	(Left Hand Side)
3	3388850			Channel Assembly
"	BLANK		Not Available	(Right Hand Side)
4	3390609			Shield, Harness
5	8545438			Hose, Pressure Switch

6	8281256		Clip, Harness
7	343641	681414	Screw, 10AB X 1/2
8	685463		Kit, Grounding Plug, Dryer Side Panel
9	3400036		Screw, 10-24 X 1
10	685449		Wire, Ground
11	3400902	680762	Nut
12	22965		Strap, Grounding
13	3400300	Y015627	Screw- Hex
14	3393930	4342911	Nut
15	3394350		Shield, Front
16	3390336		Shield, Thermostat
17	3393008	308685	Side Trim)
18	3391249		Cable Tie, Push Mount
23	94614		Terminal
24	63523		Harness, Protector
25	3354925		Block, Connector

