


Whirlpool BYCWD6274W4 06 - WASHER TOP AND LID PARTS

WASHER TOP AND LID PARTS

For Model: BYCWD6274W4
(Designer White)

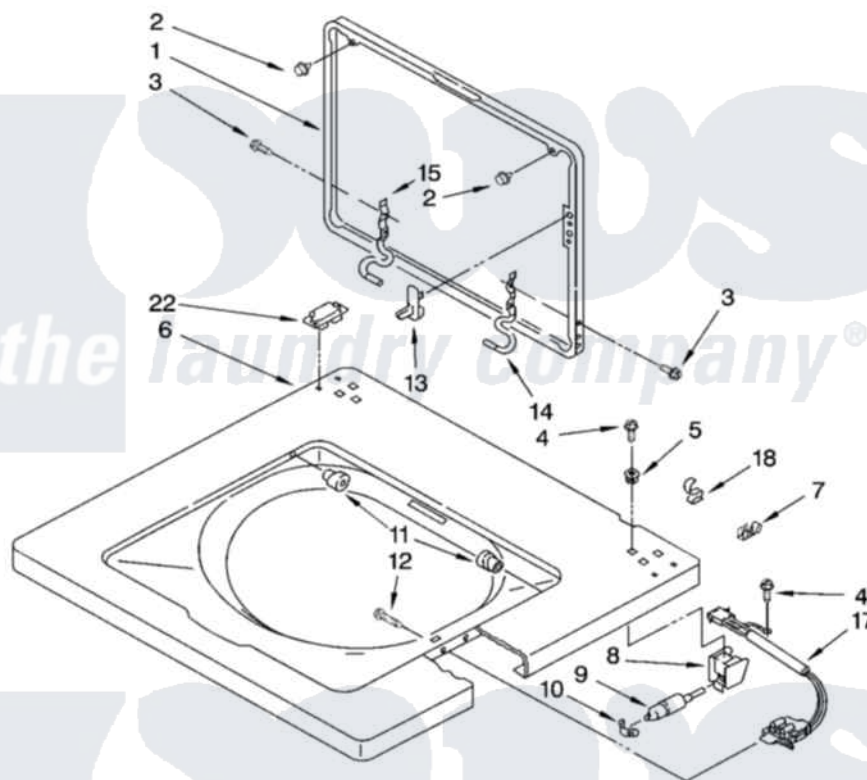

8180661

9

Whirlpool [Residential Whirlpool BYCWD6274W4 Washer/Dryer Parts](#) Parts Diagram 06 - WASHER TOP AND LID PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	3351652	W10193874		Lid
2	9724509			Bumper, Lid
3	3351355	W10119828		Screw, Lid Hinge Mounting
4	343641	681414		Screw, 10AB X 1/2
5	692400			Nut, Push-In
6	3349798			Top, Console
7	357572	W10113937		Clip, Grounding
8	3354020			Bracket, Mounting
9	3350152			Retainer, Lid Assembly
10	3350828			Clip-Cylinder Retainer
11	21258			Bearing, Lid Hinge
12	3356311			Screw And Washer, Lid Switch Shield
13	358684			Strike, Lid Switch
14	3350101			Hinge, RH
15	3350102			Hinge, L.H.

