


Whirlpool BYCWD6274W4 07 - WASHER CABINET PARTS

WASHER CABINET PARTS

For Model: BYCWD6274W4
(Designer White)

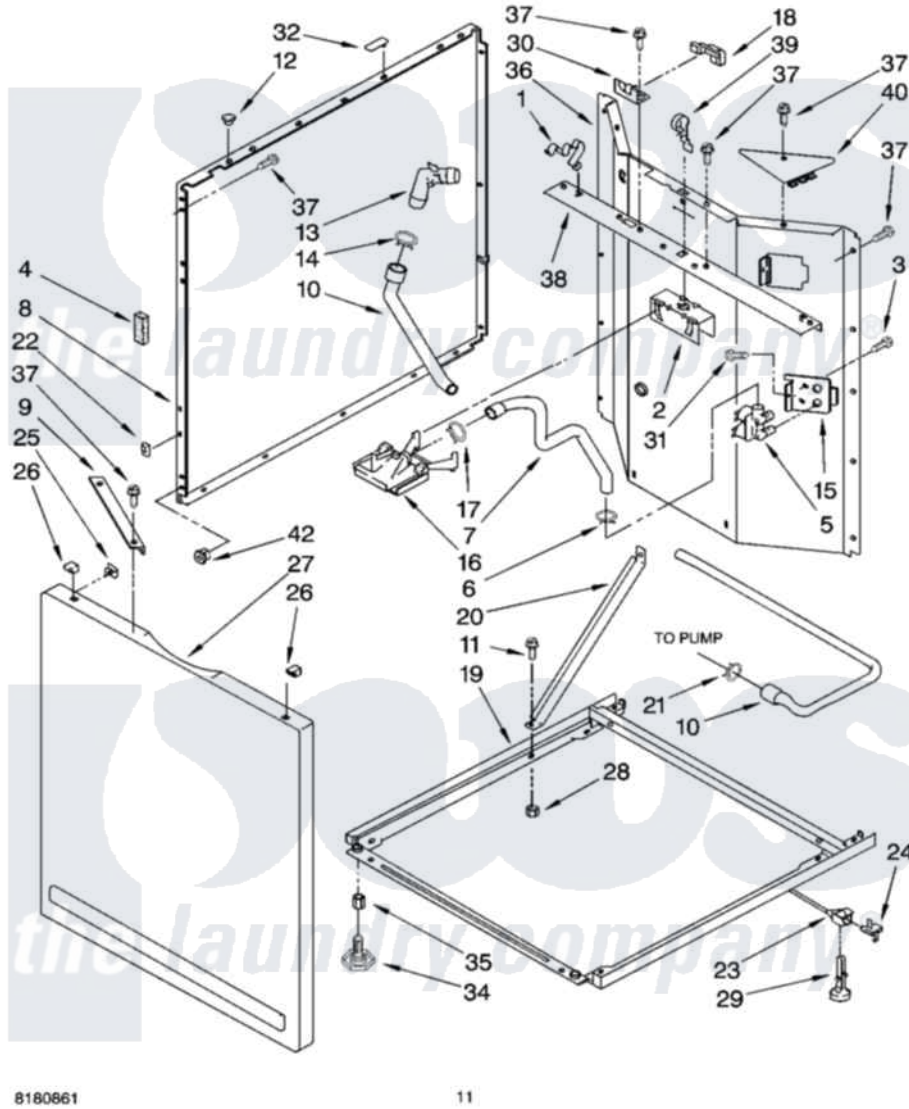

8180661

11

Whirlpool Residential Whirlpool BYCWD6274W4 Washer/Dryer Parts Parts Diagram 07 - WASHER CABINET PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	3349770			Clip, Spring Top
2	3349768			Bracket, Vacuum
3	62863	3390631		Screw, 10-16 X 3/8
4	3350013			Foam
5	8546060	3952162		Valve
6	370451	596669		Clamp, Manifold
7	3352236			Hose, Water Inlet
8	3349455			Panel, Side
9	3350745			Brace, Front Panel
10	3353841			Hose, Drain
11	3400502	Y015627		Screw- Hex
12	660975			Plug, Top To Cabinet
13	8557915			Connector, Hose
14	356138			Clamp, Hose
15	3349673			Bracket, Valve
16	387606	3360977		Break-Vac

17	371503	596669	Clamp, Manifold
18	3350145		Shield, Lid Switch
19	3402724		Base, Cabinet
20	3388857		Bracket, Base
21	371507	371502	Clamp, Hose
22	3394083		Clip, Front Panel
23	3349311		Link, Leveling
24	359364		Clip, Leveling Mechanism
25	98234		Clip, U-Bend
26	345670		Lock, Top
27	3349499		Panel, Front
28	3393930	4342911	Nut
29	358594		Foot, Rear
30	3350144		Bracket, Lid Switch
31	9740848		Screw, Mixing Valve Mounting
32	352292		Nut, Push-In
34	388094	W10001130	Foot, Leveling
35	3400917		Nut, Jam
36	3349493		Panel, Rear
37	343641	681414	Screw, 10AB X 1/2
38	3349697		Rail, Back Top
39	3350135		Spring, Lever Bracket
40	3390608		Shield, Corner Right Rear
42	352292		Nut, Push-In

the laundry company[®]

the laundry company[®]