


Whirlpool BYCWD6274W4 08 - BRAKE, CLUTCH, GEARCASE, MOTOR AND PUMP PARTS

BRAKE, CLUTCH, GEARCASE, MOTOR AND PUMP PARTS

For Model: BYCWD6274W4
(Designer White)

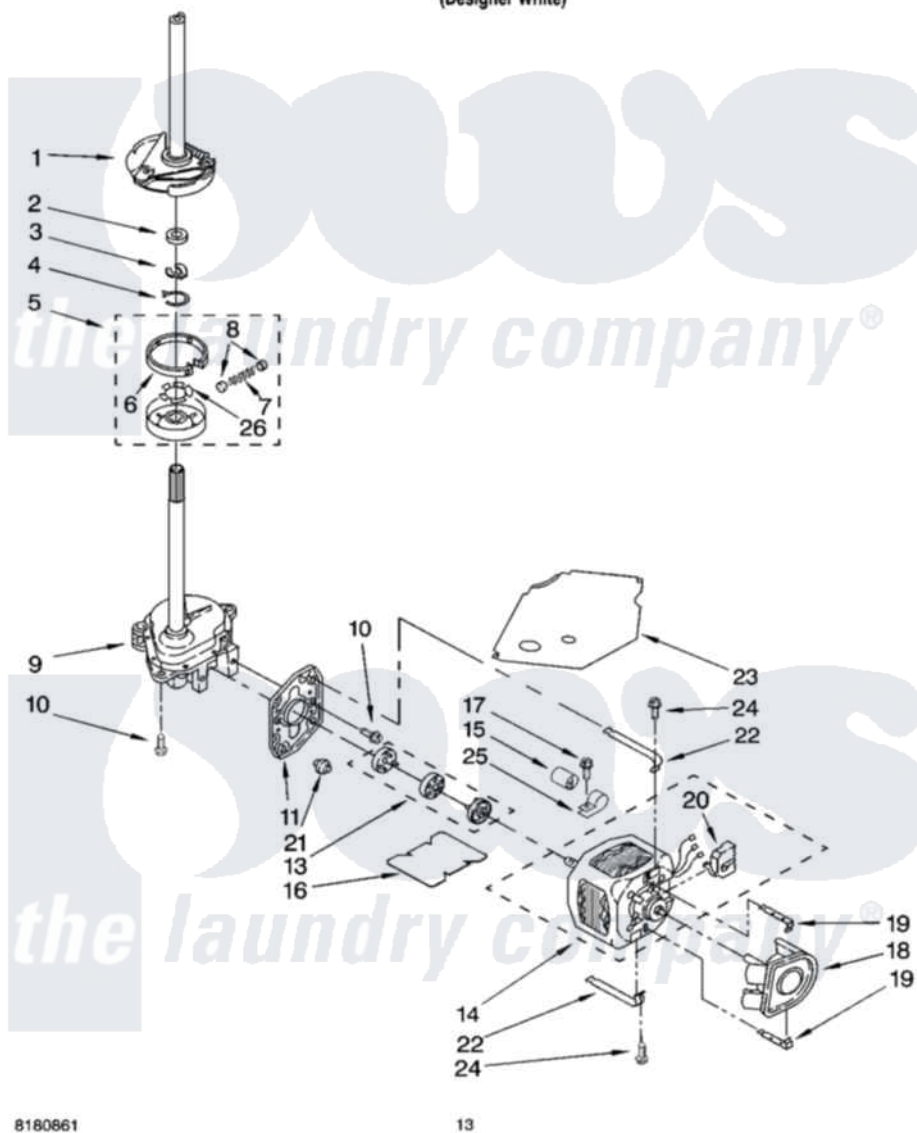

8180861

13

Whirlpool [Residential Whirlpool BYCWD6274W4 Washer/Dryer Parts](#) Parts Diagram 08 - BRAKE, CLUTCH, GEARCASE, MOTOR AND PUMP PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	388951	285792		Basketdrive
2	63292			Washer, Spin Tube Thrust
3	62697	W10080230		Ring, Spin Tube Support
4	63283	285353		Ring
5	3951311	285785		Clutch
6	3951308	285790		Lining
7	3946792			Spring And Damper Assembly
8	62646			Cap, Clutch Spring
9	8532118	3360629		Gearcase
10	3357334	3400516		Screw Anti-Rattle
11	62611			Plate, Motor Mount To Gearcase
13	3364003	285753A		Coupling
14	661600			Motor, Main Drive
15	661606	8572717		Capacitor, Motor Start

16	8316060		Shield, Tub To Motor
17	62863	3390631	Screw, 10-16 X 3/8
18	3363892		Pump, Complete
19	8546127		Retainer, Pump
20	62850	8529896	Switch, Main Drive Motor
21	62691		Grommet, Motor
22	3349637	W10086010	Retainer, Motor
23	3362089		Shield, Tub To Motor
24	3387485	273556	Screw, 10-16 X 5/8
25	357030		Clamp, Capacitor
26	3355454		Clip, Main Drive

