


Whirlpool BYCWD6274W4 09 - MACHINE BASE PARTS

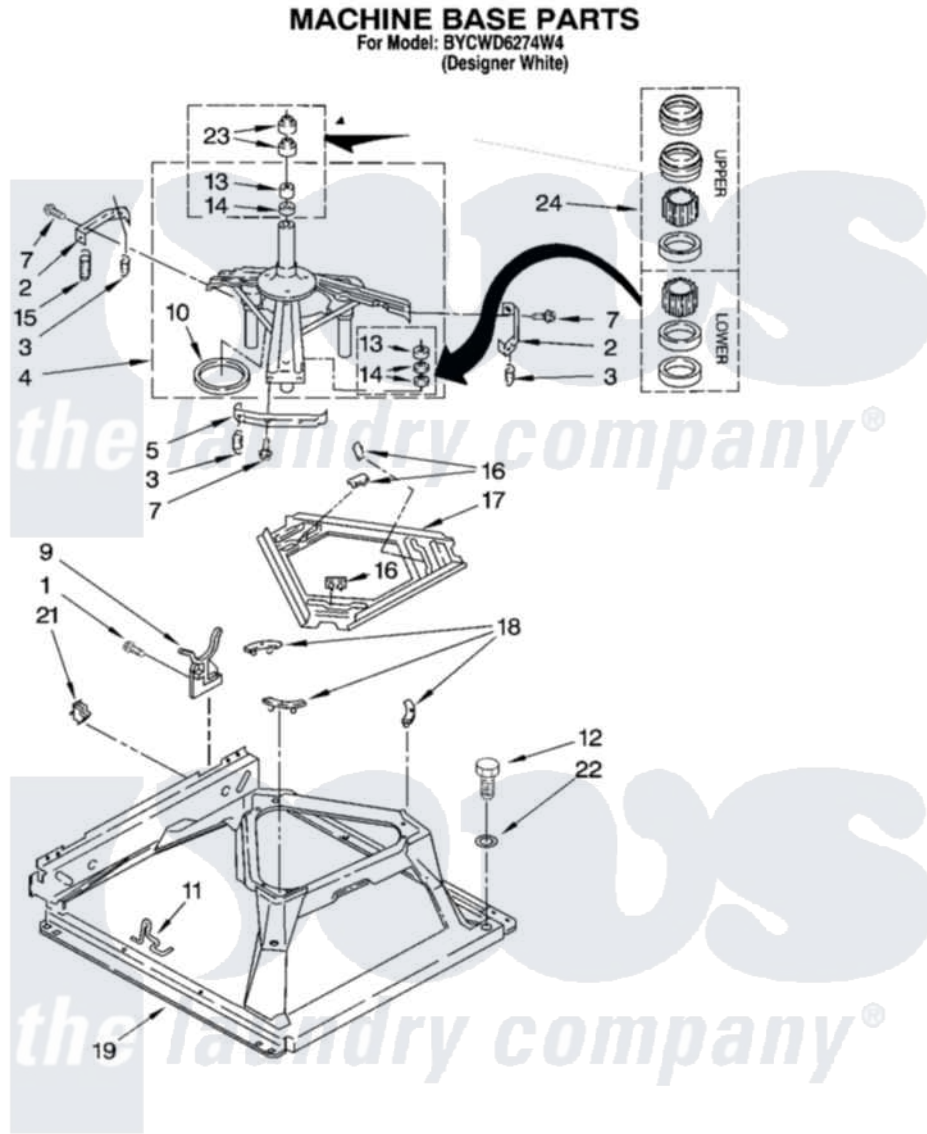

14

8180661

Whirlpool [Residential Whirlpool BYCWD6274W4 Washer/Dryer Parts](#) Parts Diagram 09 - MACHINE BASE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	343641	681414		Screw, 10AB X 1/2
2	64067			Bracket, Spring Outer
3	63907			Spring, Suspension
4	8575214	280184		Support
5	64065			Bracket, Spring Outer
7	3400076			Screw, Bracket Mounting
9	3350506			Retainer, Hose
10	63134			Ring, Sound Deadening
11	63806	W10145155		Retainer, Suspension Spring
12	3400501			Screw, 5/16-18 X 1 3/32
13	3347047	8546455		Bearing, Centerpost
14	357409	359449		Seal, Agitator Shaft
15	388492	W10250667		Spring, Counterweight
16	62568	285219		Pad
17	3946509			Plate, Suspension
18	3363660	285744		Pad

19	3349343		Base Assembly
21	3349749		Restrainer, Base
22	3349340		Washer
23	356934	8577376	Seal, Centerpost
24	285203		Centerpost Bearing Kit

