


Whirlpool CEDC392PQ0 03 - TOP AND CONSOLE PARTS, OPTIONAL PARTS (NOT INCLUDED)

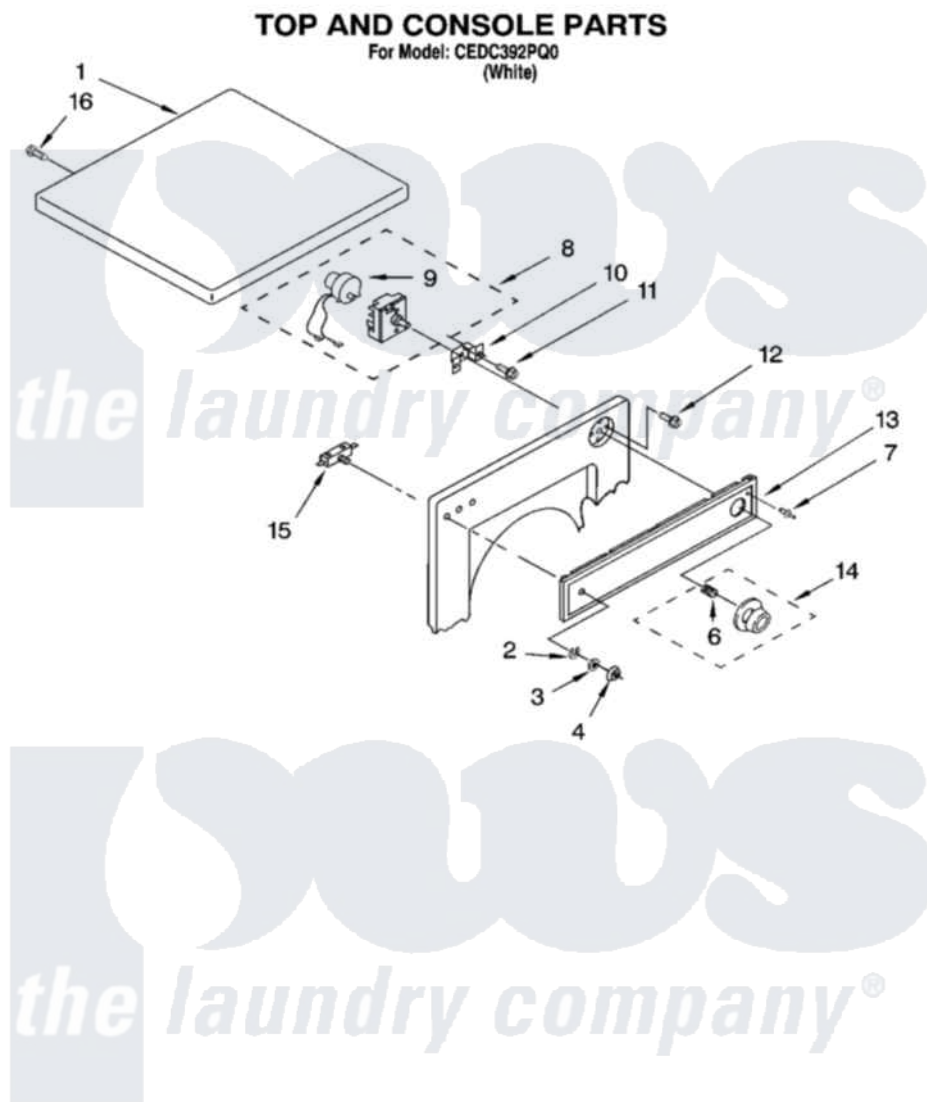

8180532

5

Whirlpool [Residential Whirlpool CEDC392PQ0 Dryer Parts](#) Parts Diagram 03 - TOP AND CONSOLE PARTS, OPTIONAL PARTS (NOT INCLUDED)
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	345703			Top
2	688193			Lockwasher
3	9831122			Nut, Hex
4	345530			Ring, Trim
6	688805			Clip, Spring Knob
7	307563	311928		Rivet, Plastic
8	9830837	8563881		Timer, 60 Hz
9	BLANK		Not Available	(Timer Motor Not Serviceable)
10	348171			Bracket, Timer
11	311865	486579		Screw
12	3390646	W10139210		Screw, 8-18 X 5/16
13	8562103			Panel, Control
14	3977652			Timer Knob And Dial
15	3977675			Switch, Push-To-Start
16	343641	681414		Screw, 10AB X 1/2

[72017](#)

Paint, Touch-Up

" [350938](#)

Paint, Pressurized Spray B

" [350930](#)

Paint, Pressurized Spray B

" [799344](#)

Paint, Touch-Up)

