


Whirlpool CEDS563MQ1 02 - TOP AND CONSOLE PARTS

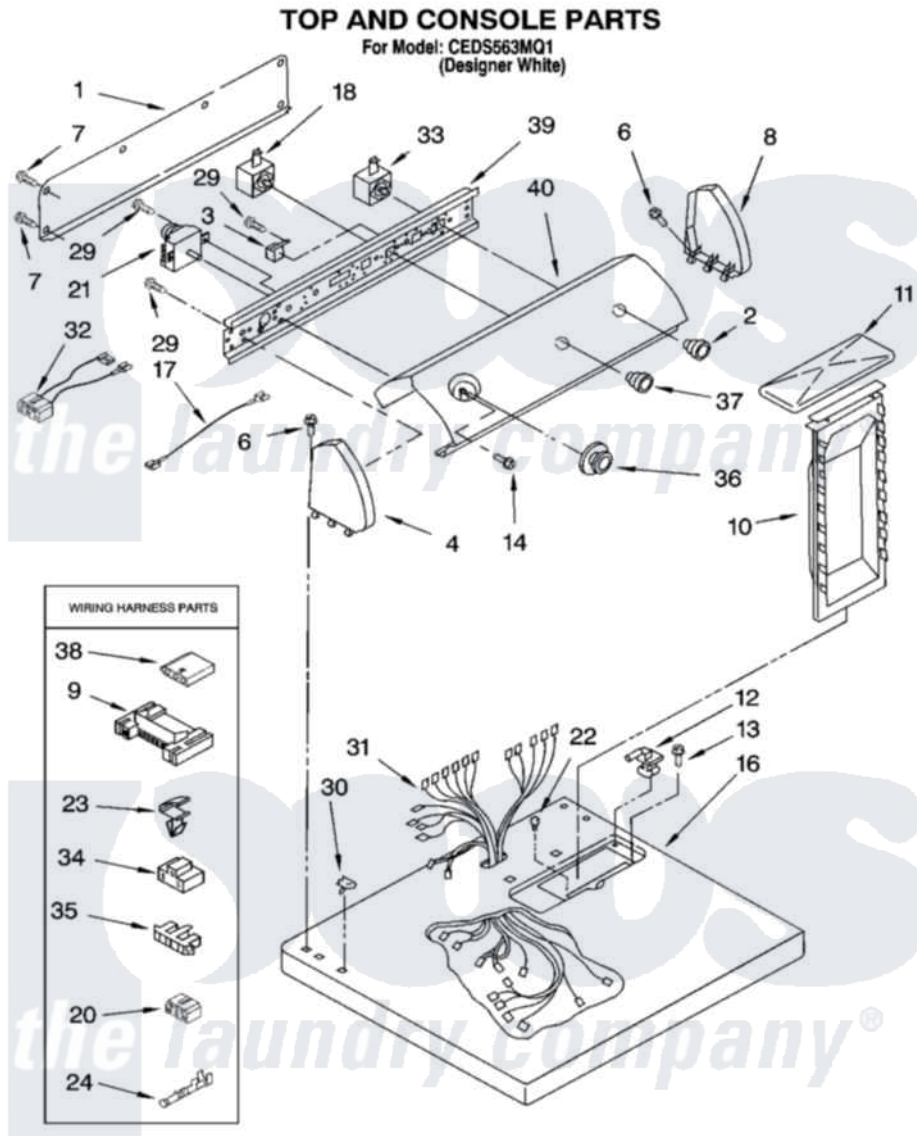

Whirlpool [Residential Whirlpool CEDS563MQ1 Dryer Parts](#) Parts Diagram 02 - TOP AND CONSOLE PARTS
[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	8274261			Do-It-Yourself Repair Manuals
2	3406133	3957800		Knob, Push-To-Start
3	694419			Mini-Buzzer
4	8274437	279960		Endcap
6	388326			Screw, 8-18 X 1.25
7	693995			Screw, Hex Head
8	8274434	279960		Endcap
9	3395683			Receptacle, Multi-Terminal
10	349639			HAndle And Lint Screen Assembly
11	8283378			Cover, Lint Screen
12	3978605	W10044470		Hinge, RH
"	3978606			Hinge, Lint Lid
13	688983	487240		Screw, For Mtg. Service Capacitor
14	3400859			Screw, Grounding
16	8271390	8521918		Top

17	3401671		Wire, Jumper
"	3401668		Wire, Jumper
18	3399638		Switch, Temperature
20	3347243		Block, Disconnect
21	3979618		Timer Assembly
22	297535	17258	Bumper
23	3394427		Clip-Harness
24	94614		Terminal
29	3390646	W10139210	Screw, 8-18 X 5/16
30	357213		Nut, Push-In
31	8299871	8576502	Harness, Wiring
32	3396028	8283286	Wire-Jumper
33	3398094		Switch, Push To Start
34	3401144		Connector
35	3397269		Connector, Timer
36	8283182	3957746	Knob
37	3950759	3957796	Knob, Control
38	3936144		Do-It-Yourself Repair Manuals
39	8271418		Bracket, Control
40	3977937		Panel, Control
"	N/A	Not Available	ACCESSORY PARTS
"	279948	4392065	Kit, Dryer Repair
"	8522199		Accessory Parts
"	3404351		Accessory Parts
"	72017		Paint, Touch-Up
"	350930		Paint, Pressurized Spray B
"	350938		Paint, Pressurized Spray B
"	799344		Paint, Touch-Up)

the laundry company[®]

the laundry company[®]