


Whirlpool CEDS563RQ1 02 - TOP AND CONSOLE PARTS

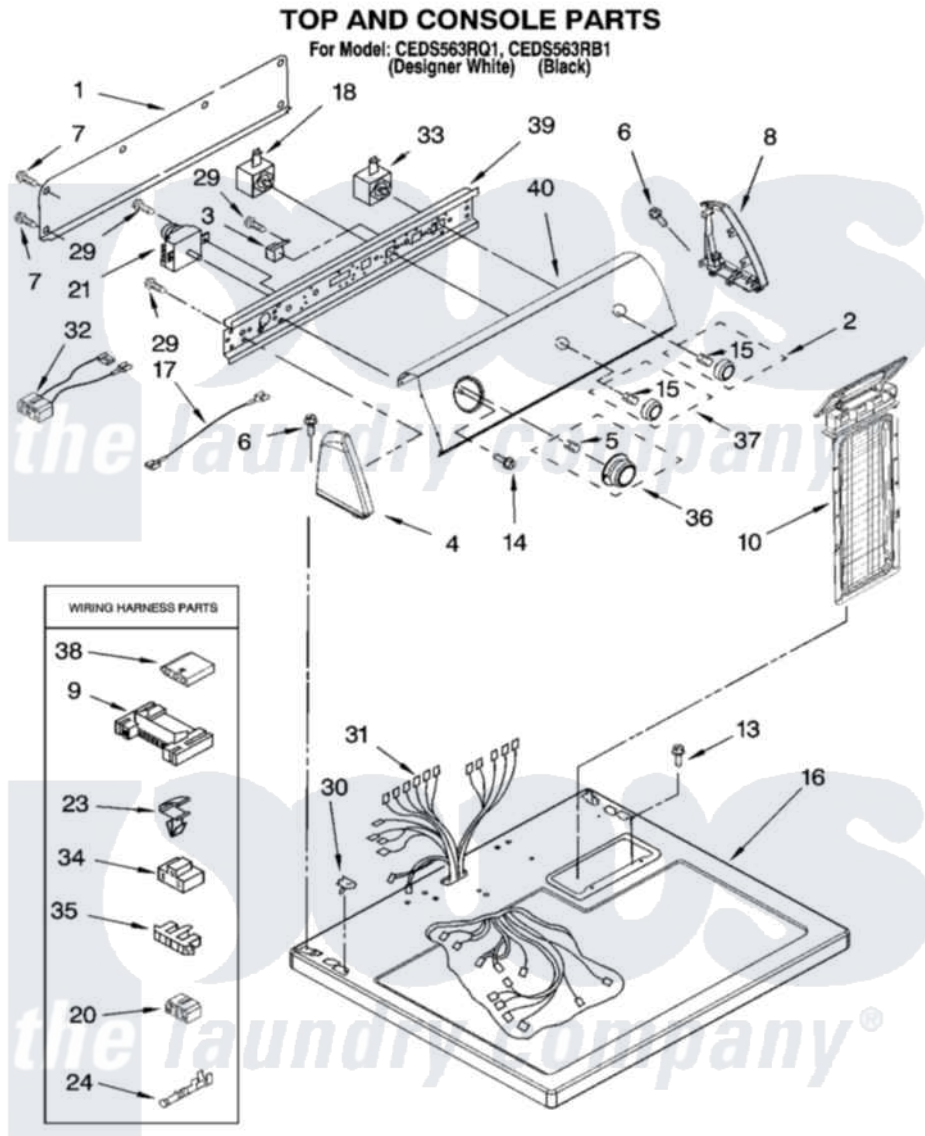

8180963

3

Whirlpool [Residential Whirlpool CEDS563RQ1 Dryer Parts](#) Parts Diagram 02 - TOP AND CONSOLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8274261			Do-It-Yourself Repair Manuals
2	8538959			Knob, Push-To-Start
3	694419			Mini-Buzzer
4	8271365	279962		Endcap
"	8271367	279964		Endcap
5	688805			Clip, Spring Knob
6	388326			Screw, 8-18 X 1.25
7	693995			Screw, Hex Head
8	8271359	279962		Endcap
"	8271361	279964		Endcap
9	3395683			Receptacle, Multi-Terminal
10	8558463			HAndle And Lint Screen Assembly
"	8558465			Screen, Lint
13	688983	487240		Screw, For Mtg. Service Capacitor
14	8533951	3400859		Screw, Grounding

15	8536939		Clip, Knob
16	8557930	8563985	Top
"	8557925		Not Available Top (Black)
17	3401671		Wire, Jumper
"	3401668		Wire, Jumper
18	3399638		Switch, Temperature
20	3347243		Block, Disconnect
21	3979618		Timer Assembly
23	3394427		Clip-Harness
24	94614		Terminal
29	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
30	357213		Nut, Push-In
31	8299873	8576503	Harness, Wiring
32	3396028	8283286	Wire-Jumper
33	3398094		Switch, Push To Start
34	3401144		Connector
35	3397269		Connector, Timer
36	8538953		Timer Knob Assembly
37	8538957		Knob, Control
38	3936144		Do-It-Yourself Repair Manuals
39	8271418		Bracket, Control
40	8577342		Panel, Control

