


Whirlpool CEDS563SQ0 02 - TOP AND CONSOLE PARTS

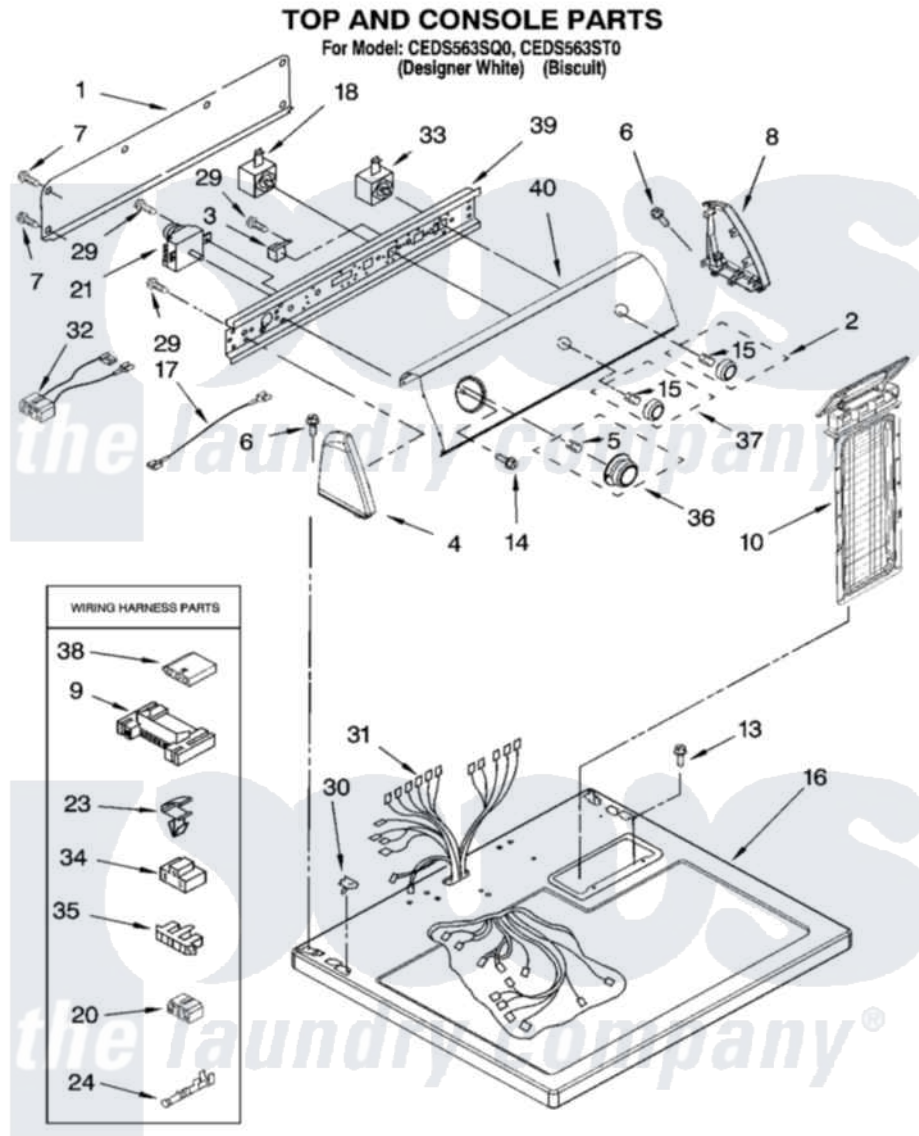

Whirlpool [Residential Whirlpool CEDS563SQ0 Dryer Parts](#) Parts Diagram 02 - TOP AND CONSOLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8274261			Do-It-Yourself Repair Manuals
2	8538959			Knob, Push-To-Start
"	8538960			Knob, Push-To-Start
3	694419			Mini-Buzzer
4	8271365	279962		Endcap
"	8271368	279965		Endcap
5	688805			Clip, Spring Knob
6	388326			Screw, 8-18 X 1.25
7	693995			Screw, Hex Head
8	8271359	279962		Endcap
"	8271362	279965		Endcap
9	3395683			Receptacle, Multi-Terminal
10	8558463			HAndle And Lint Screen Assembly
"	8558464			Screen, Lint
13	688983	487240		Screw, For Mtg. Service Capacitor

14	8533951	3400859	Screw, Grounding
15	8536939		Clip, Knob
16	8557930	8563985	Top
"	8557931	8563986	Top
17	3401671		Wire, Jumper
"	3401668		Wire, Jumper
18	3399638		Switch, Temperature
20	3347243		Block, Disconnect
21	3979618		Timer Assembly
23	3394427		Clip-Harness
24	94614		Terminal
29	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
30	357213		Nut, Push-In
31	8299871	8576502	Harness, Wiring
32	3396028	8283286	Wire-Jumper
33	3398094		Switch, Push To Start
34	3401144		Connector
35	3397269		Connector, Timer
36	8538953		Timer Knob Assembly
"	8538954		Timer Knob Assembly
37	8538957		Knob, Control
"	8538958		Knob, Control
38	3936144		Do-It-Yourself Repair Manuals
39	8271418		Bracket, Control
40	W10111095		Panel, Control
"	W10111096	W10151367	Panel-Control

the laundry company[®]

the laundry company[®]