


Whirlpool CEDS984RQ0 02 - TOP AND CONSOLE PARTS

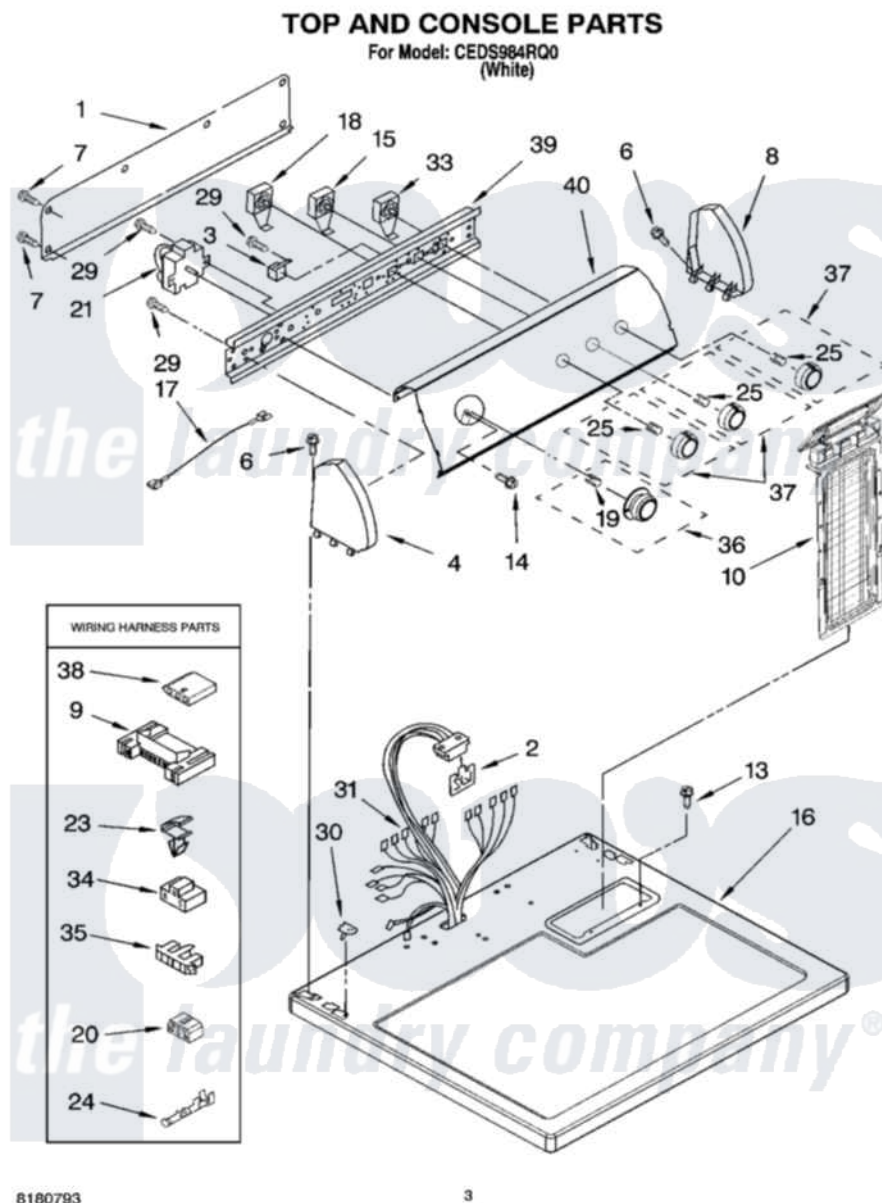

Whirlpool Residential Whirlpool CEDS984RQ0 Dryer Parts Parts Diagram 02 - TOP AND CONSOLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8274261			Do-It-Yourself Repair Manuals
2	8558178			Control, Electronic
3	694419			Mini-Buzzer
4	8271365	279962		Endcap
6	388326			Screw, 8-18 X 1.25
7	693995			Screw, Hex Head
8	8271359	279962		Endcap
9	3395683			Receptacle, Multi-Terminal
10	8558463			HAndle And Lint Screen Assembly
13	688983	487240		Screw, For Mtg. Service Capacitor
14	8533951	3400859		Screw, Grounding
15	3405154			Switch Rotary
16	8557930	8563985		Top
17	3401684			Jumper, Wire
18	8530152			Switch, Temperature

19	688805		Clip, Spring Knob
20	3347243		Block, Disconnect
21	3406725		Timer Assembly
23	3394427		Clip-Harness
24	94614		Terminal
25	8536939		Clip, Knob
29	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
30	357213		Nut, Push-In
31	8299889	8576506	Harness, Wiring
33	3398095		Switch, Push-To-Start
34	3401144		Connector
35	3397269		Connector, Timer
36	8538953		Timer Knob Assembly
37	8538957		Knob, Control
38	3936144		Do-It-Yourself Repair Manuals
39	8271418		Bracket, Control
40	8577343		Panel, Control

