


Whirlpool CEDX463RQ1 01 - TOP AND CONSOLE PARTS

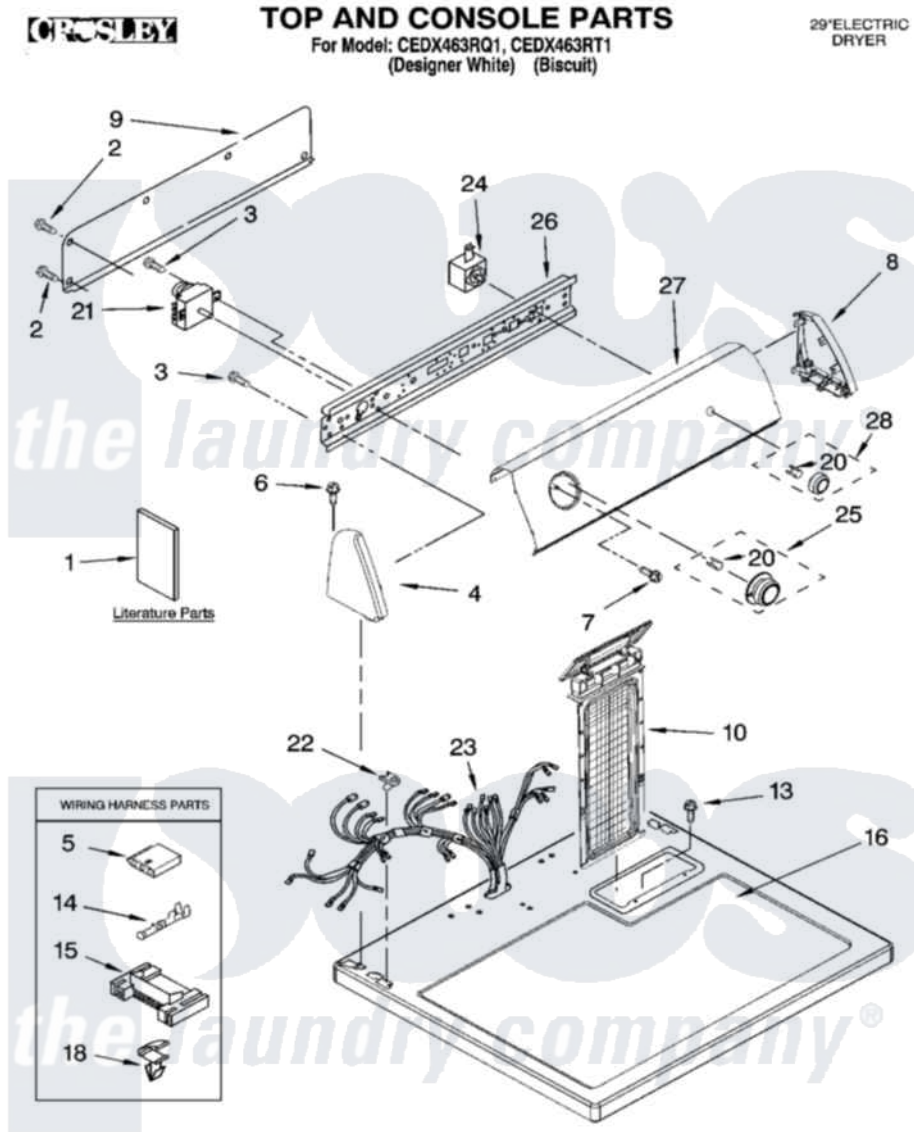

10-05 Litho in U.S.A.(LT)

1

Part No. 8180971

Whirlpool Residential Whirlpool CEDX463RQ1 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	8578544		Not Available	Guide, Use & Care
"	8577187		Not Available	Instructions, Installation
"	8577364		Not Available	Sheet, Cycle Feature
"	8528187			Wiring Diagram
"	N/A		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	693995			Screw, Hex Head
3	8533971	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
4	8271365	279962		Endcap
"	8271368	279965		Endcap
5	3936144			Do-It-Yourself Repair Manuals
6	388326			Screw, 8-18 X 1.25
7	8533951	3400859		Screw, Grounding
8	8271359	279962		Endcap

"	8271362	279965	Endcap
9	8274261		Do-It-Yourself Repair Manuals
10	8558467		Screen, Lint
"	8558468	Not Available	Screen, Lint (Biscuit)
13	688983	487240	Screw, For Mtg. Service Capacitor
14	94614		Terminal
15	3395683		Receptacle, Multi-Terminal
16	8557930	8563985	Top
"	8557931	8563986	Top
18	3394427		Clip-Harness
20	8536939		Clip, Knob
21	8299781		Timer, 60 Hz
22	357213		Nut, Push-In
23	8299867	W10450292	Harness, Wiring
24	3977456		Switch, Push-To-Start
25	3957383		Timer Knob Assembly
"	8538954		Timer Knob Assembly
26	8271418		Bracket, Control
27	8577341		Panel, Control
"	8577344		Panel, Control
28	8557462		Knob, Push-To-Start
"	8538960		Knob, Push-To-Start

