


# Whirlpool CEDX631VQ1 01 - TOP AND CONSOLE PARTS

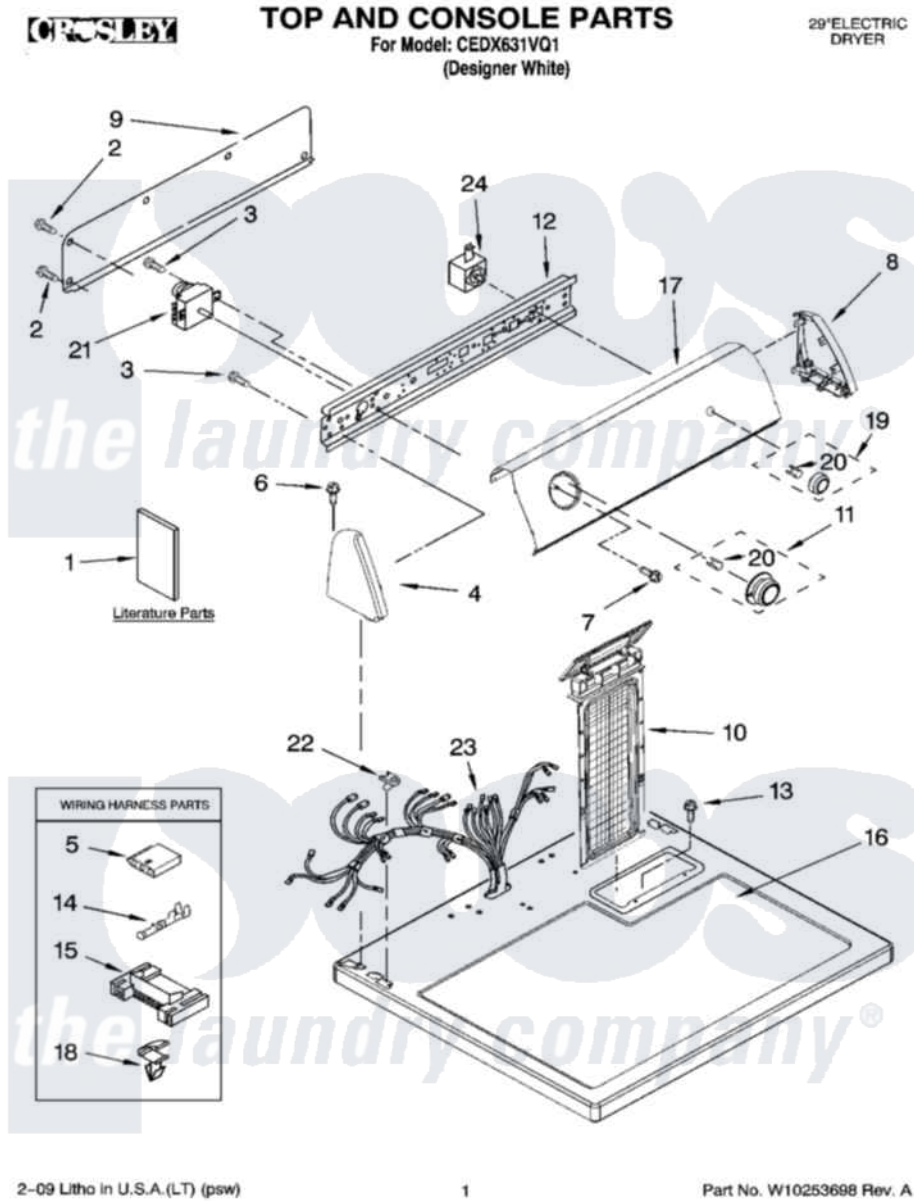

2-09 Litho in U.S.A.(LT) (psw)

1

Part No. W10253698 Rev. A

Whirlpool Residential Whirlpool CEDX631VQ1 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	W10223589		Not Available	Guide, Use & Care
"	8577187		Not Available	Instructions, Installation
"	W10112315		Not Available	Sheet, Cycle Feature
"	<a href="#">W10185979</a>			Wiring Diagram Cycle Feature
"	BLANK		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	<a href="#">693995</a>			Screw, Hex Head
3	8533971	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
4	8271365	<a href="#">279962</a>		Endcap
5	<a href="#">3936144</a>			Do-It-Yourself Repair Manuals
6	<a href="#">388326</a>			Screw, 8-18 X 1.25
7	8533951	<a href="#">3400859</a>		Screw, Grounding
8	8271359	<a href="#">279962</a>		Endcap
9	<a href="#">8274261</a>			Do-It-Yourself Repair Manuals

10	<a href="#">8558467</a>		Screen, Lint
11	<a href="#">3957383</a>		Timer Knob Assembly
12	<a href="#">8271418</a>		Bracket, Control
13	688983	<a href="#">487240</a>	Screw, For Mtg. Service Capacitor
14	<a href="#">94614</a>		Terminal
15	<a href="#">3395683</a>		Receptacle, Multi-Terminal
16	8557930	<a href="#">8563985</a>	Top
17	<a href="#">W10218309</a>		Panel, Control
18	<a href="#">3394427</a>		Clip-Harness
19	<a href="#">8557462</a>		Knob, Push-To-Start
20	<a href="#">8536939</a>		Clip, Knob
21	<a href="#">W10185972</a>		Timer, 60 Hz
22	<a href="#">357213</a>		Nut, Push-In
23	W10186068	<a href="#">W10186166</a>	Harness, Wiring
24	<a href="#">3977456</a>		Switch, Push-To-Start

