


# Whirlpool CGDS563RQ1 01 - TOP AND CONSOLE PARTS

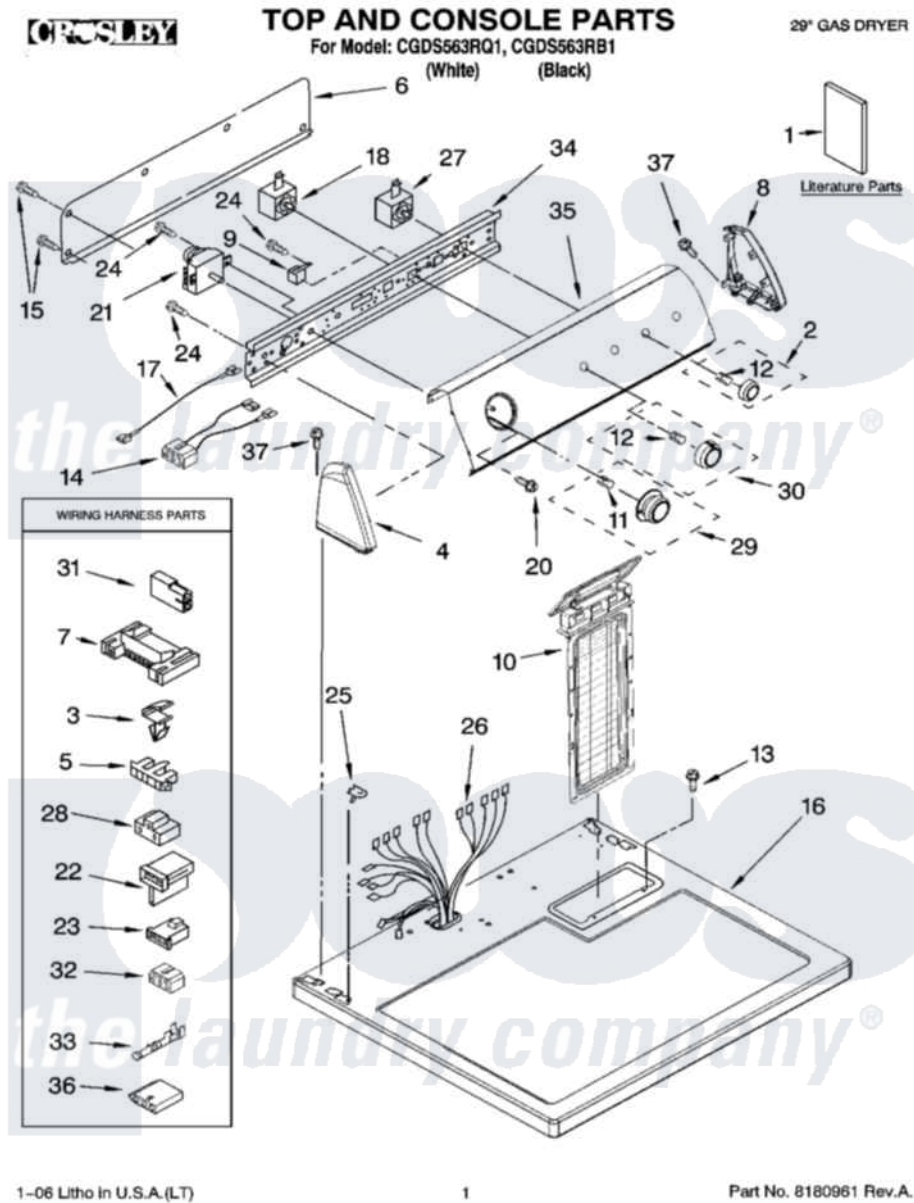

1-06 Litho in U.S.A.(LT)

1

Part No. 8180961 Rev.A.

Whirlpool [Residential Whirlpool CGDS563RQ1 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8562589		Not Available	Instructions, Installation
"	8577364		Not Available	Sheet, Cycle Feature
"	8578544		Not Available	Guide, Use & Care
"	3979703		Not Available	Wiring Diagram
"	BLANK		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	<a href="#">8538959</a>			Knob, Push-To-Start
3	<a href="#">3394427</a>			Clip-Harness
4	8271365	<a href="#">279962</a>		Endcap
"	8271367	<a href="#">279964</a>		Endcap
5	<a href="#">3397269</a>			Connector, Timer
6	<a href="#">8274261</a>			Do-It-Yourself Repair Manuals
7	<a href="#">3395683</a>			Receptacle, Multi-Terminal
8	8271359	<a href="#">279962</a>		Endcap

"	8271361	<a href="#">279964</a>	Endcap
9	<a href="#">694419</a>		Mini-Buzzer
10	<a href="#">8558463</a>		HAndle And Lint Screen Assembly
"	<a href="#">8558465</a>		Screen, Lint
11	<a href="#">688805</a>		Clip, Spring Knob
12	<a href="#">8536939</a>		Clip, Knob
13	688983	<a href="#">487240</a>	Screw, For Mtg. Service Capacitor
14	3396028	<a href="#">8283286</a>	Wire-Jumper
15	<a href="#">693995</a>		Screw, Hex Head
16	8557930	<a href="#">8563985</a>	Top
"	8557925	Not Available	Top (Black)
17	<a href="#">3401668</a>		Wire, Jumper
"	<a href="#">3401671</a>		Wire, Jumper
18	<a href="#">3399638</a>		Switch, Temperature
20	8533951	<a href="#">3400859</a>	Screw, Grounding
21	<a href="#">8299766</a>		Timer Assembly
22	<a href="#">3403499</a>		Connector, 2-Position
23	<a href="#">3403498</a>		Connector, 3-Position
24	8533971	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
25	<a href="#">357213</a>		Nut, Push-In
26	<a href="#">8299879</a>		Harness, Wiring
27	<a href="#">3398094</a>		Switch, Push To Start
28	<a href="#">3401144</a>		Connector
29	<a href="#">8538953</a>		Timer Knob Assembly
30	<a href="#">8538957</a>		Knob, Control
31	<a href="#">717252</a>		Receptacle, Terminal
32	<a href="#">3347243</a>		Block, Disconnect
33	<a href="#">94614</a>		Terminal
34	<a href="#">8271418</a>		Bracket, Control
35	<a href="#">8577342</a>		Panel, Control
36	<a href="#">3936144</a>		Do-It-Yourself Repair Manuals
37	<a href="#">388326</a>		Screw, 8-18 X 1.25

