


Whirlpool CGDS984RQ0 01 - TOP AND CONSOLE PARTS

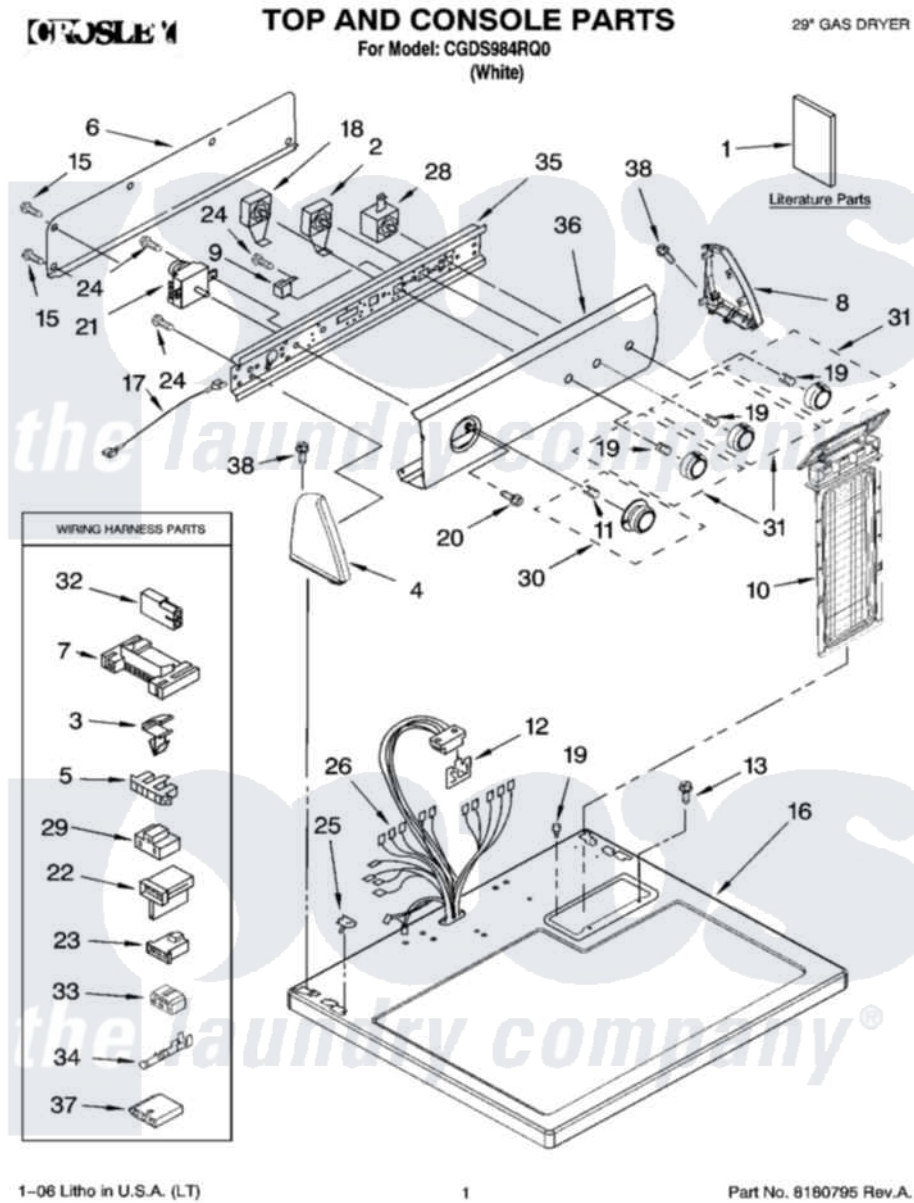

1-06 Litho in U.S.A. (LT)

1

Part No. 8180795 Rev.A.

Whirlpool Residential Whirlpool CGDS984RQ0 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8562589		Not Available	Instructions, Installation
"	8577364		Not Available	Sheet, Cycle Feature
"	8577802		Not Available	Guide, Use & Care
"	3406661		Not Available	Wiring Diagram
"	BLANK		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	3405154			Switch Rotary
3	3394427			Clip-Harness
4	8271365	279962		Endcap
5	3397269			Connector, Timer
6	8274261			Do-It-Yourself Repair Manuals
7	3395683			Receptacle, Multi-Terminal
8	8271359	279962		Endcap
9	694419			Mini-Buzzer

10	8558463		Handle And Lint Screen Assembly
11	688805		Clip, Spring Knob
12	8558178		Control, Electronic
13	688983	487240	Screw, For Mtg. Service Capacitor
15	693995		Screw, Hex Head
16	8557930	8563985	Top
17	3401684		Jumper, Wire
18	8530169		Switch, Temperature
19	8536939		Clip, Knob
20	8533951	3400859	Screw, Grounding
21	3406725		Timer Assembly
22	3403499		Connector, 2-Position
23	3403498		Connector, 3-Position
24	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
25	357213		Nut, Push-In
26	8299890		Harness, Wiring
28	3398095		Switch, Push-To-Start
29	3401144		Connector
30	8538953		Timer Knob Assembly
31	8538957		Knob, Control
32	717252		Receptacle, Terminal
33	3347243		Block, Disconnect
34	94614		Terminal
35	8271418		Bracket, Control
36	8577343		Panel, Control
37	3936144		Do-It-Yourself Repair Manuals
38	388326		Screw, 8-18 X 1.25

